

# FITTING DIAGRAM - PAGE 1

KIA BD CERATO FL SEDAN: REAR DIFFUSER + FLOW LOCK FINS INSTRUCTIONS

## INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

# BUMPER REMOVAL NOT REQUIRED

## INSTALLATION GUIDE


- Remove existing rear undertray before installation.
- For best fitment, temporarily mount the diffuser using bolts (a) prior to drilling holes for (b).
- Using an 8mm drill bit, drill through the OEM bumper.
- Using bolts (b) mount diffuser to rear bumper, then remove bolts (a) to reinstall undertray.
- Insert OEM undertray in between diffuser and OEM rear bumper, then reinstall undertray mounting bolts.
- Lastly, using bolts (a) mount through the diffuser, undertray and OEM rear bumper. Tighten nut with spanner through access hole in rear undertray.

### HANDY HINTS

Align back edge of diffuser with OEM rear bumper.

### HANDY HINTS


For best alignment, install diffuser fins before mounting the diffuser.

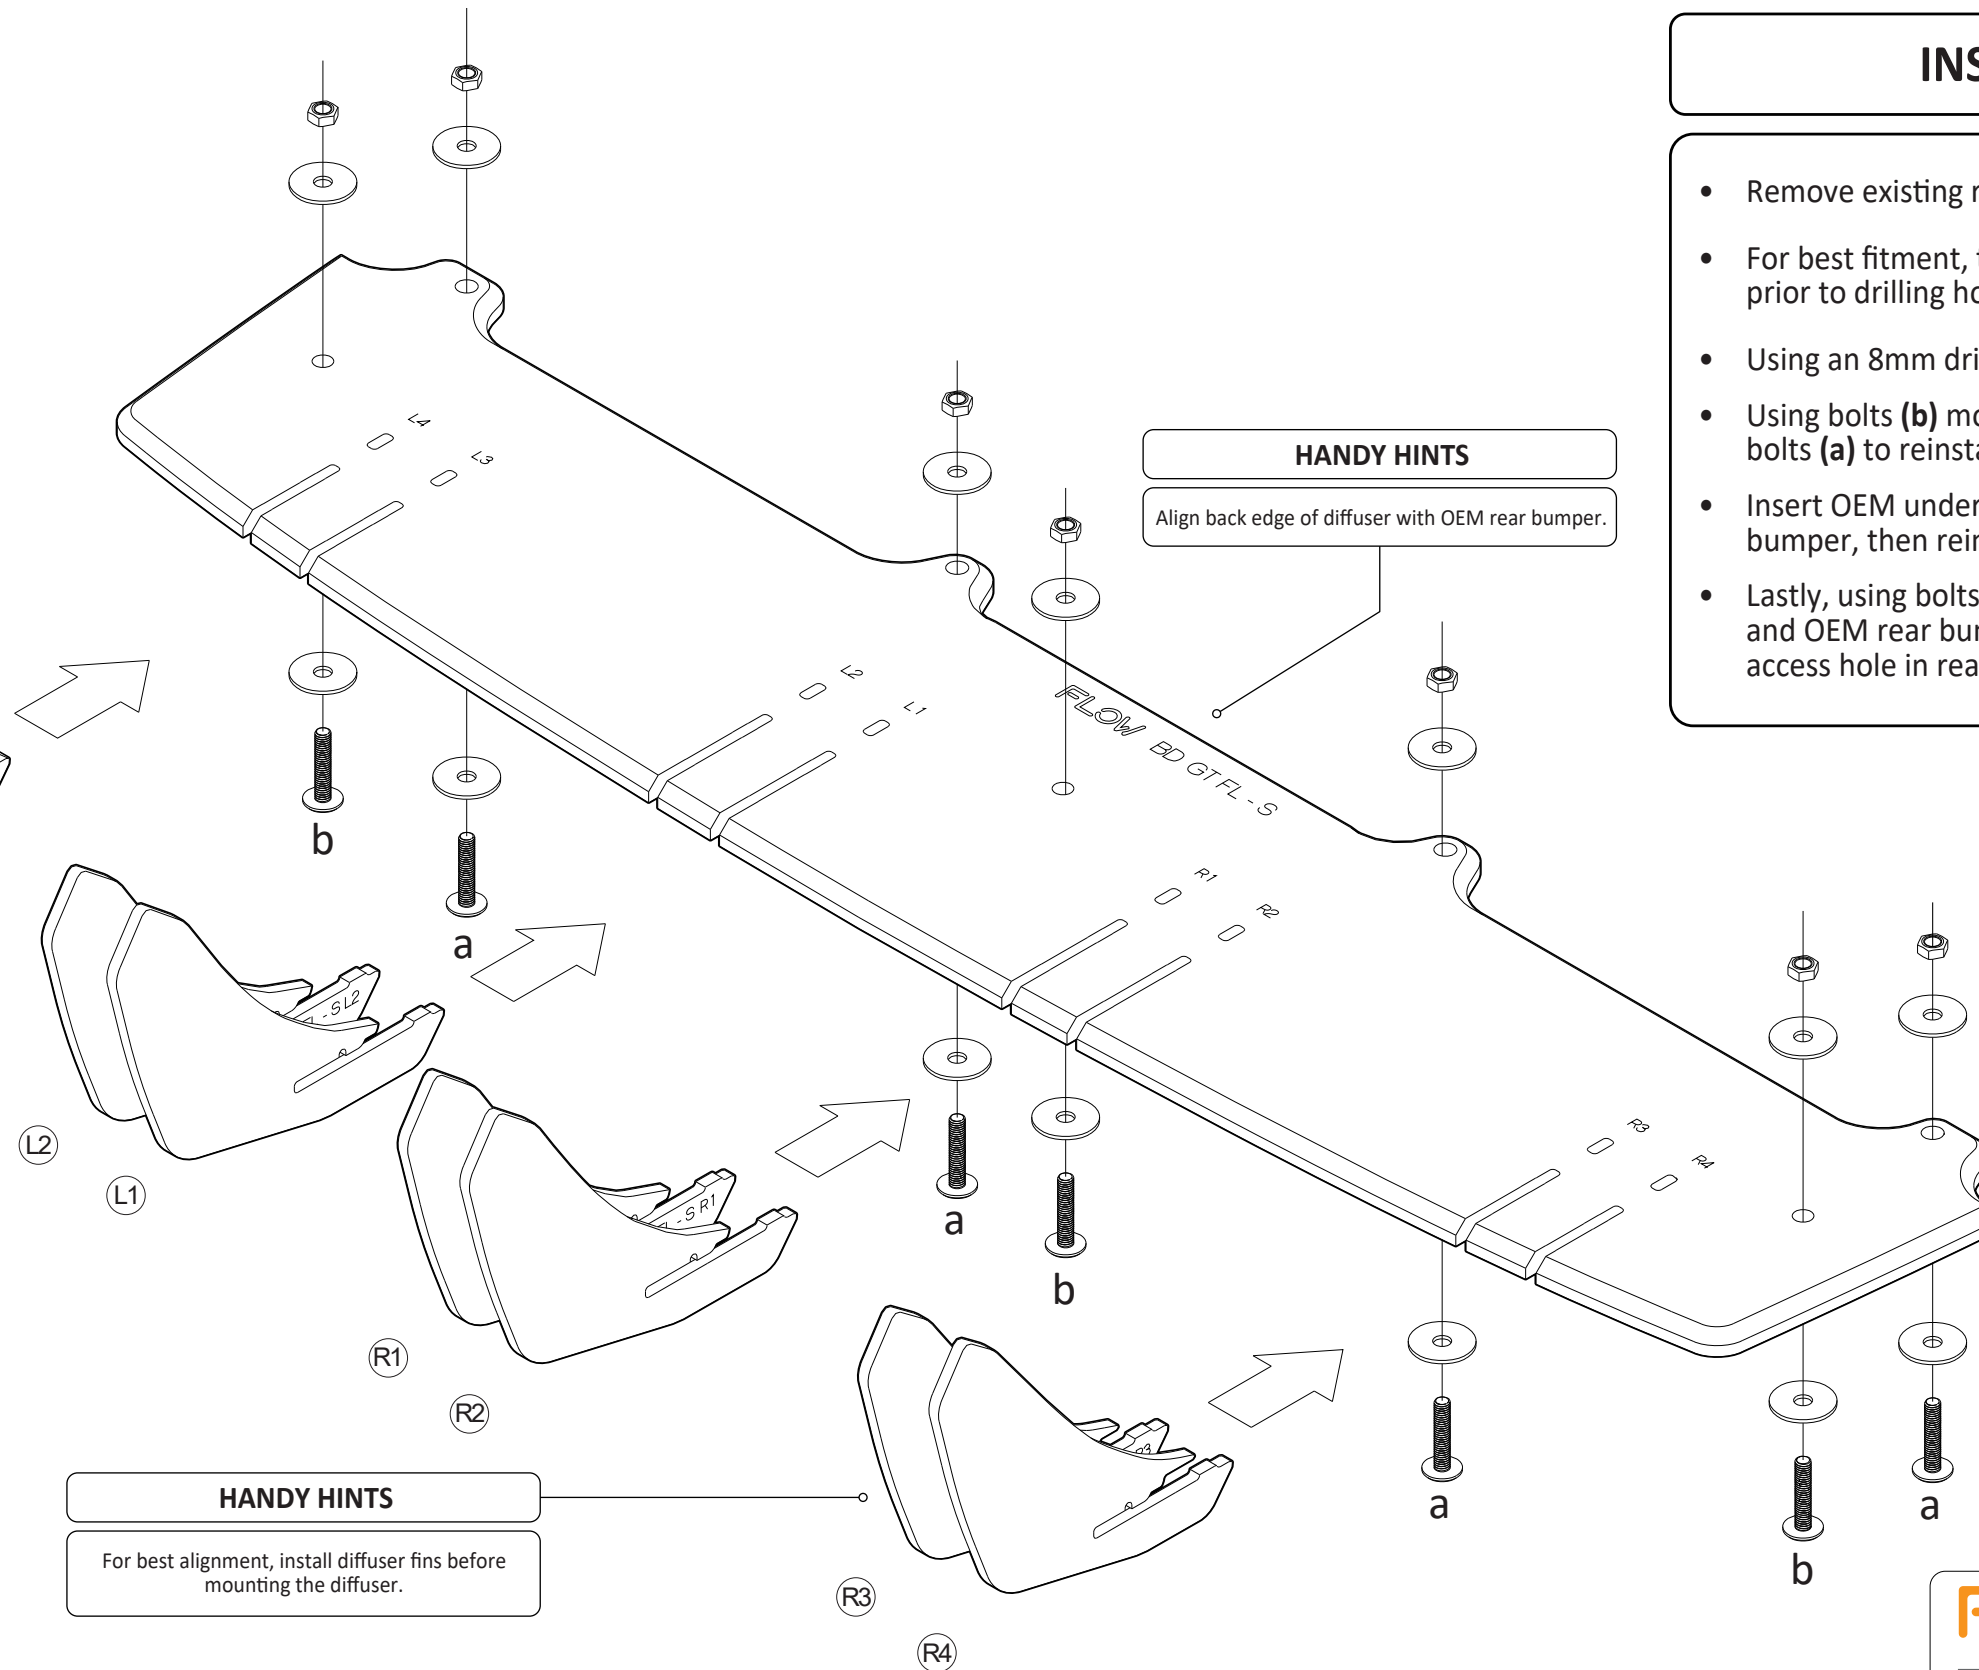

## FITTING KIT

**a** M6 BOLT  
30mm LONG


**X 4**

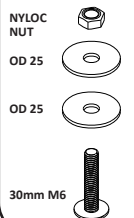

PLEASE NOTE:  
DRILLING NOT REQUIRED  
TO FASTEN TO BUMPER  
USE OEM HOLE

**b** M6 BOLT  
30mm LONG

**X 3**

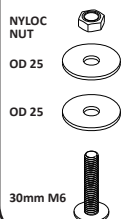

PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO BUMPER  
PLEASE USE 8mm DRILL BIT

**FLOW**  
DESIGNS

FLOW DESIGNS AUSTRALIA  
ABN : 99 605 842 199  
10 LONGSTAFF RD  
BAYSWATER  
VIC. 3153



### TERMS AND CONDITIONS: MISUSE OF GOODS

By taking possession of the Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with all subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do our best effort to consider safety when designing our products. We want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability or breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com

**FLOW-LOG**  
TECHNOLOGY

# FITTING GUIDE - PAGE 2

KIA BD CERATO FL SEDAN: REAR DIFFUSER + FLOW LOCK FINS INSTRUCTIONS


## INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

# BUMPER REMOVAL NOT REQUIRED


### HANDY HINTS

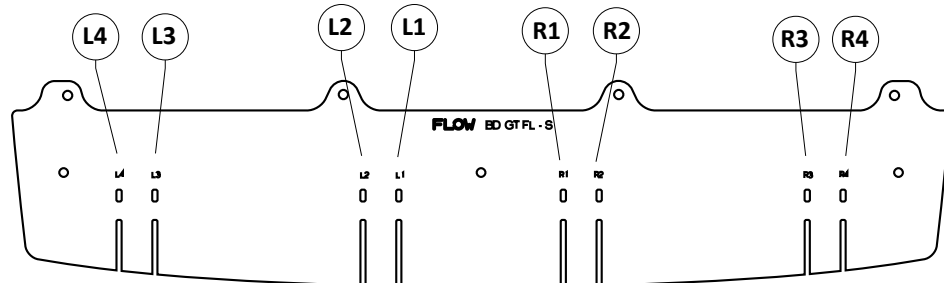


- Align FLOW-LOCK Fins to their corresponding slots.
- Please ensure to allocate the correct FLOW-LOCK Fin to the correct corresponding slot (L1 into L1 slot, R1 into R1 slot etc.)
- Ensure textured side of fin is facing out from opposing fin
- Push fin in firmly into the slots until a clicking sound is heard.
- Check both top and bottom locking tabs have securely seated

**Please Note:** Once fins have been locked into position, they will be difficult to remove.

### INSTALLATION GUIDE

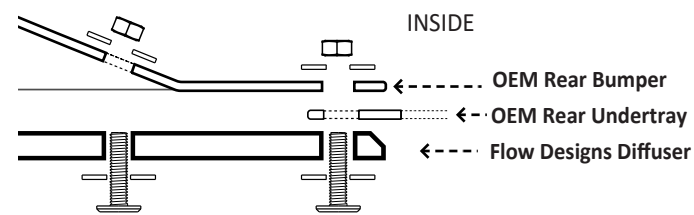

### INSTALLATION DIAGRAM - FITTING KIT A

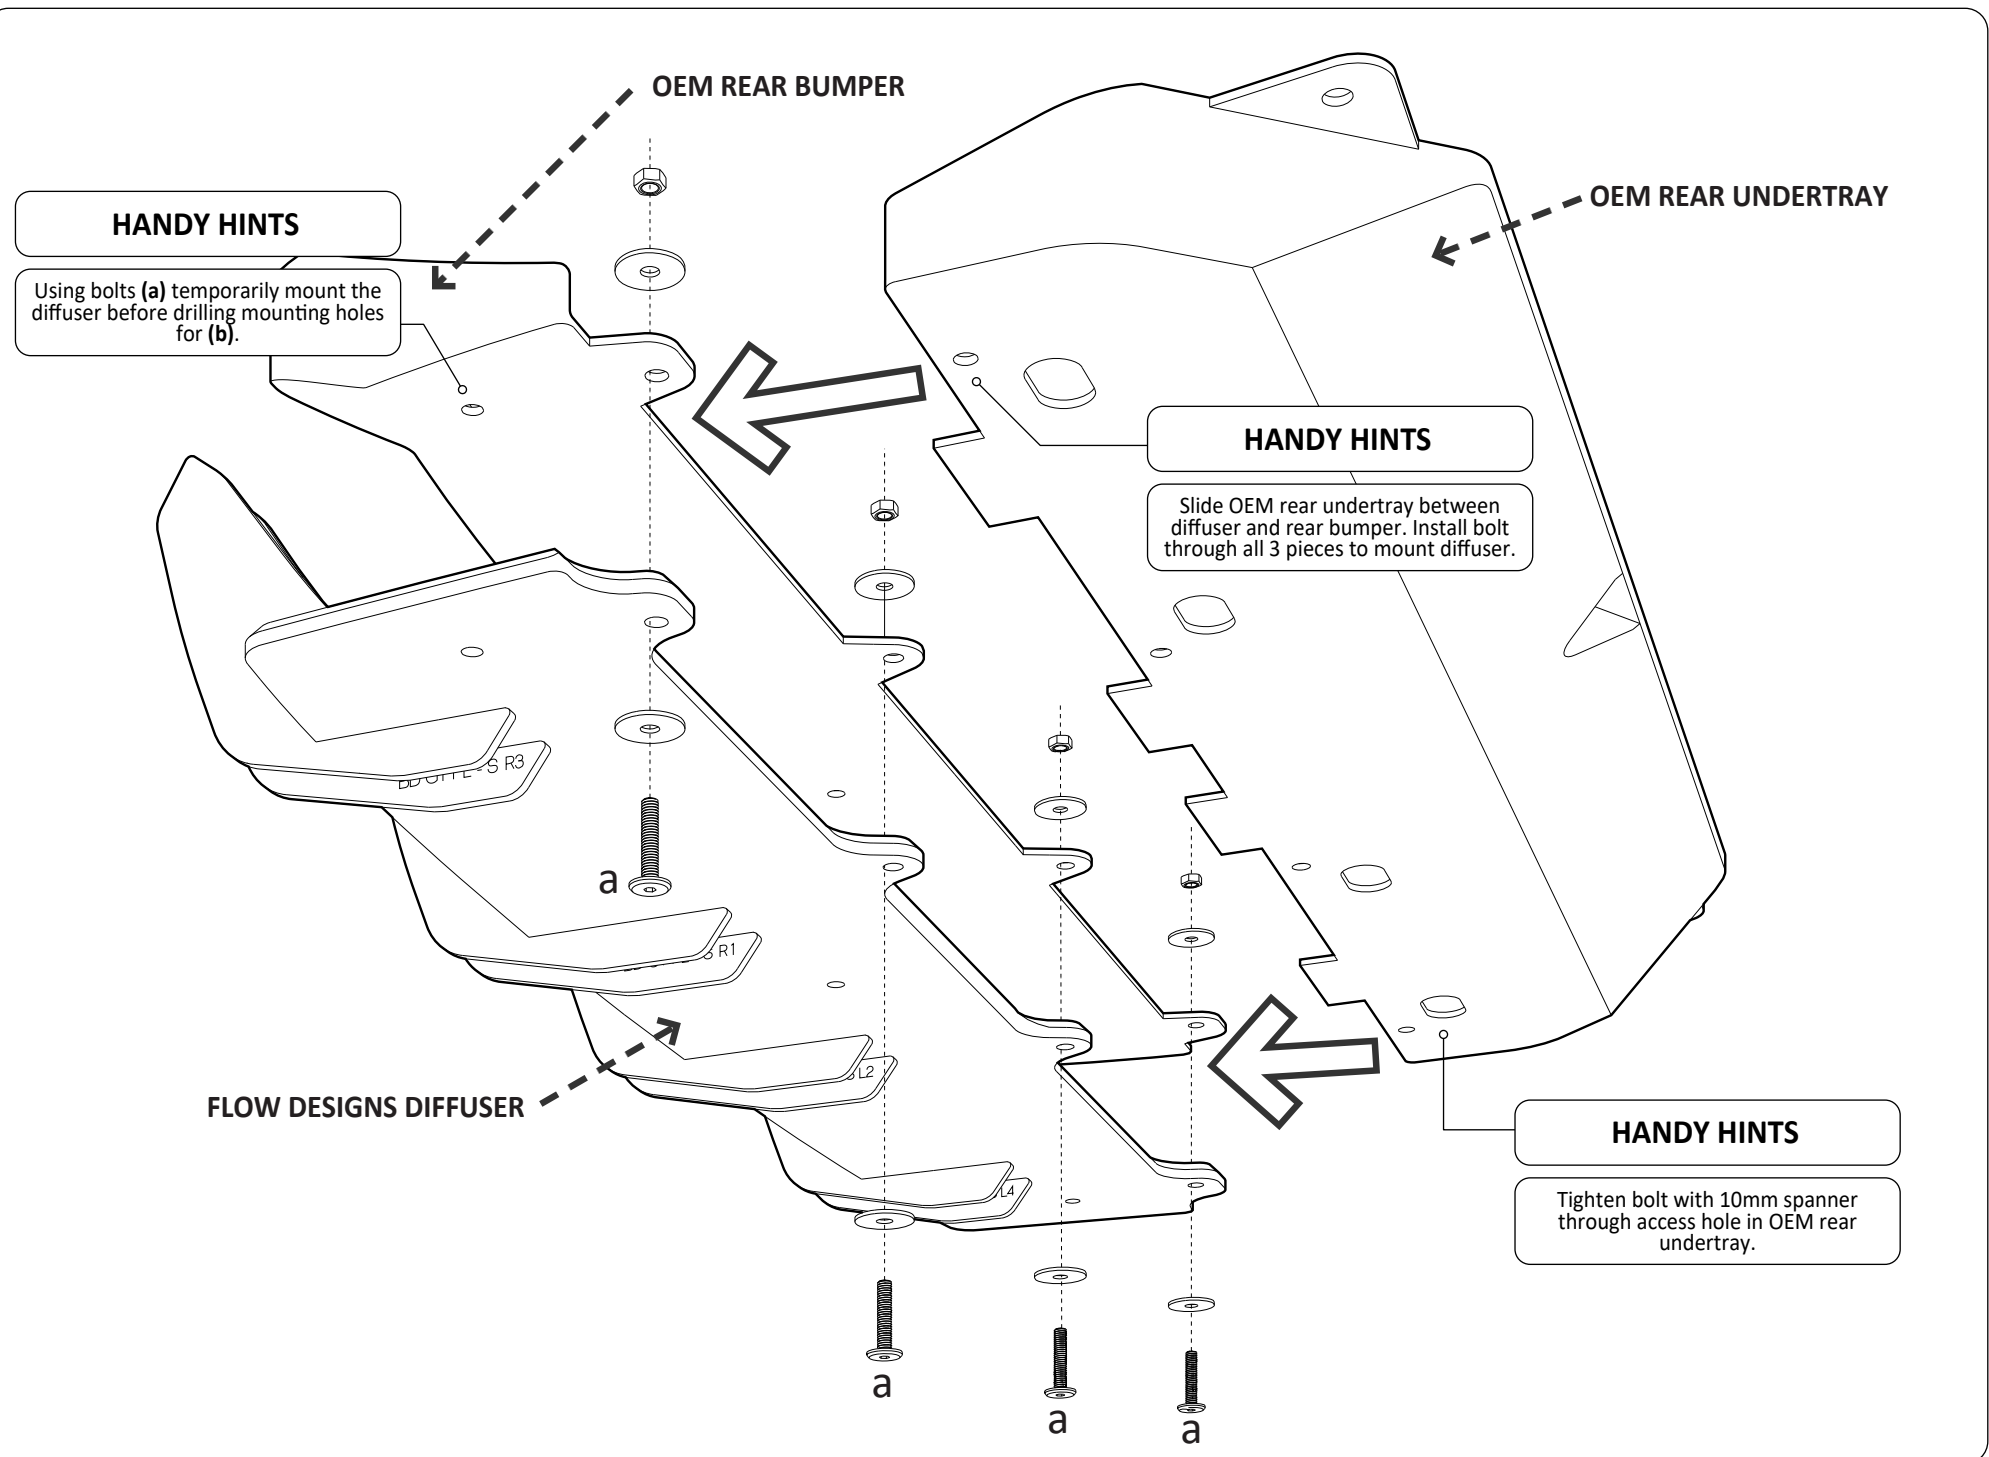

**FLOW**  
DESIGNS

FLOW DESIGNS AUSTRALIA  
ABN : 99 605 842 199  
10 LONGSTAFF RD  
BAYSWATER  
VIC, 3153



#### TERMS AND CONDITIONS: MISUSE OF GOODS

By taking possession of the Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with all subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do our best effort to consider safety when designing our products. We want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability or breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com

**FLOW-LOCK**  
TECHNOLOGY