

FITTING DIAGRAM


VW MK7 GOLF GTI : REAR VALANCE + FAIRING

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

**BUMPER REMOVAL
NOT REQUIRED**

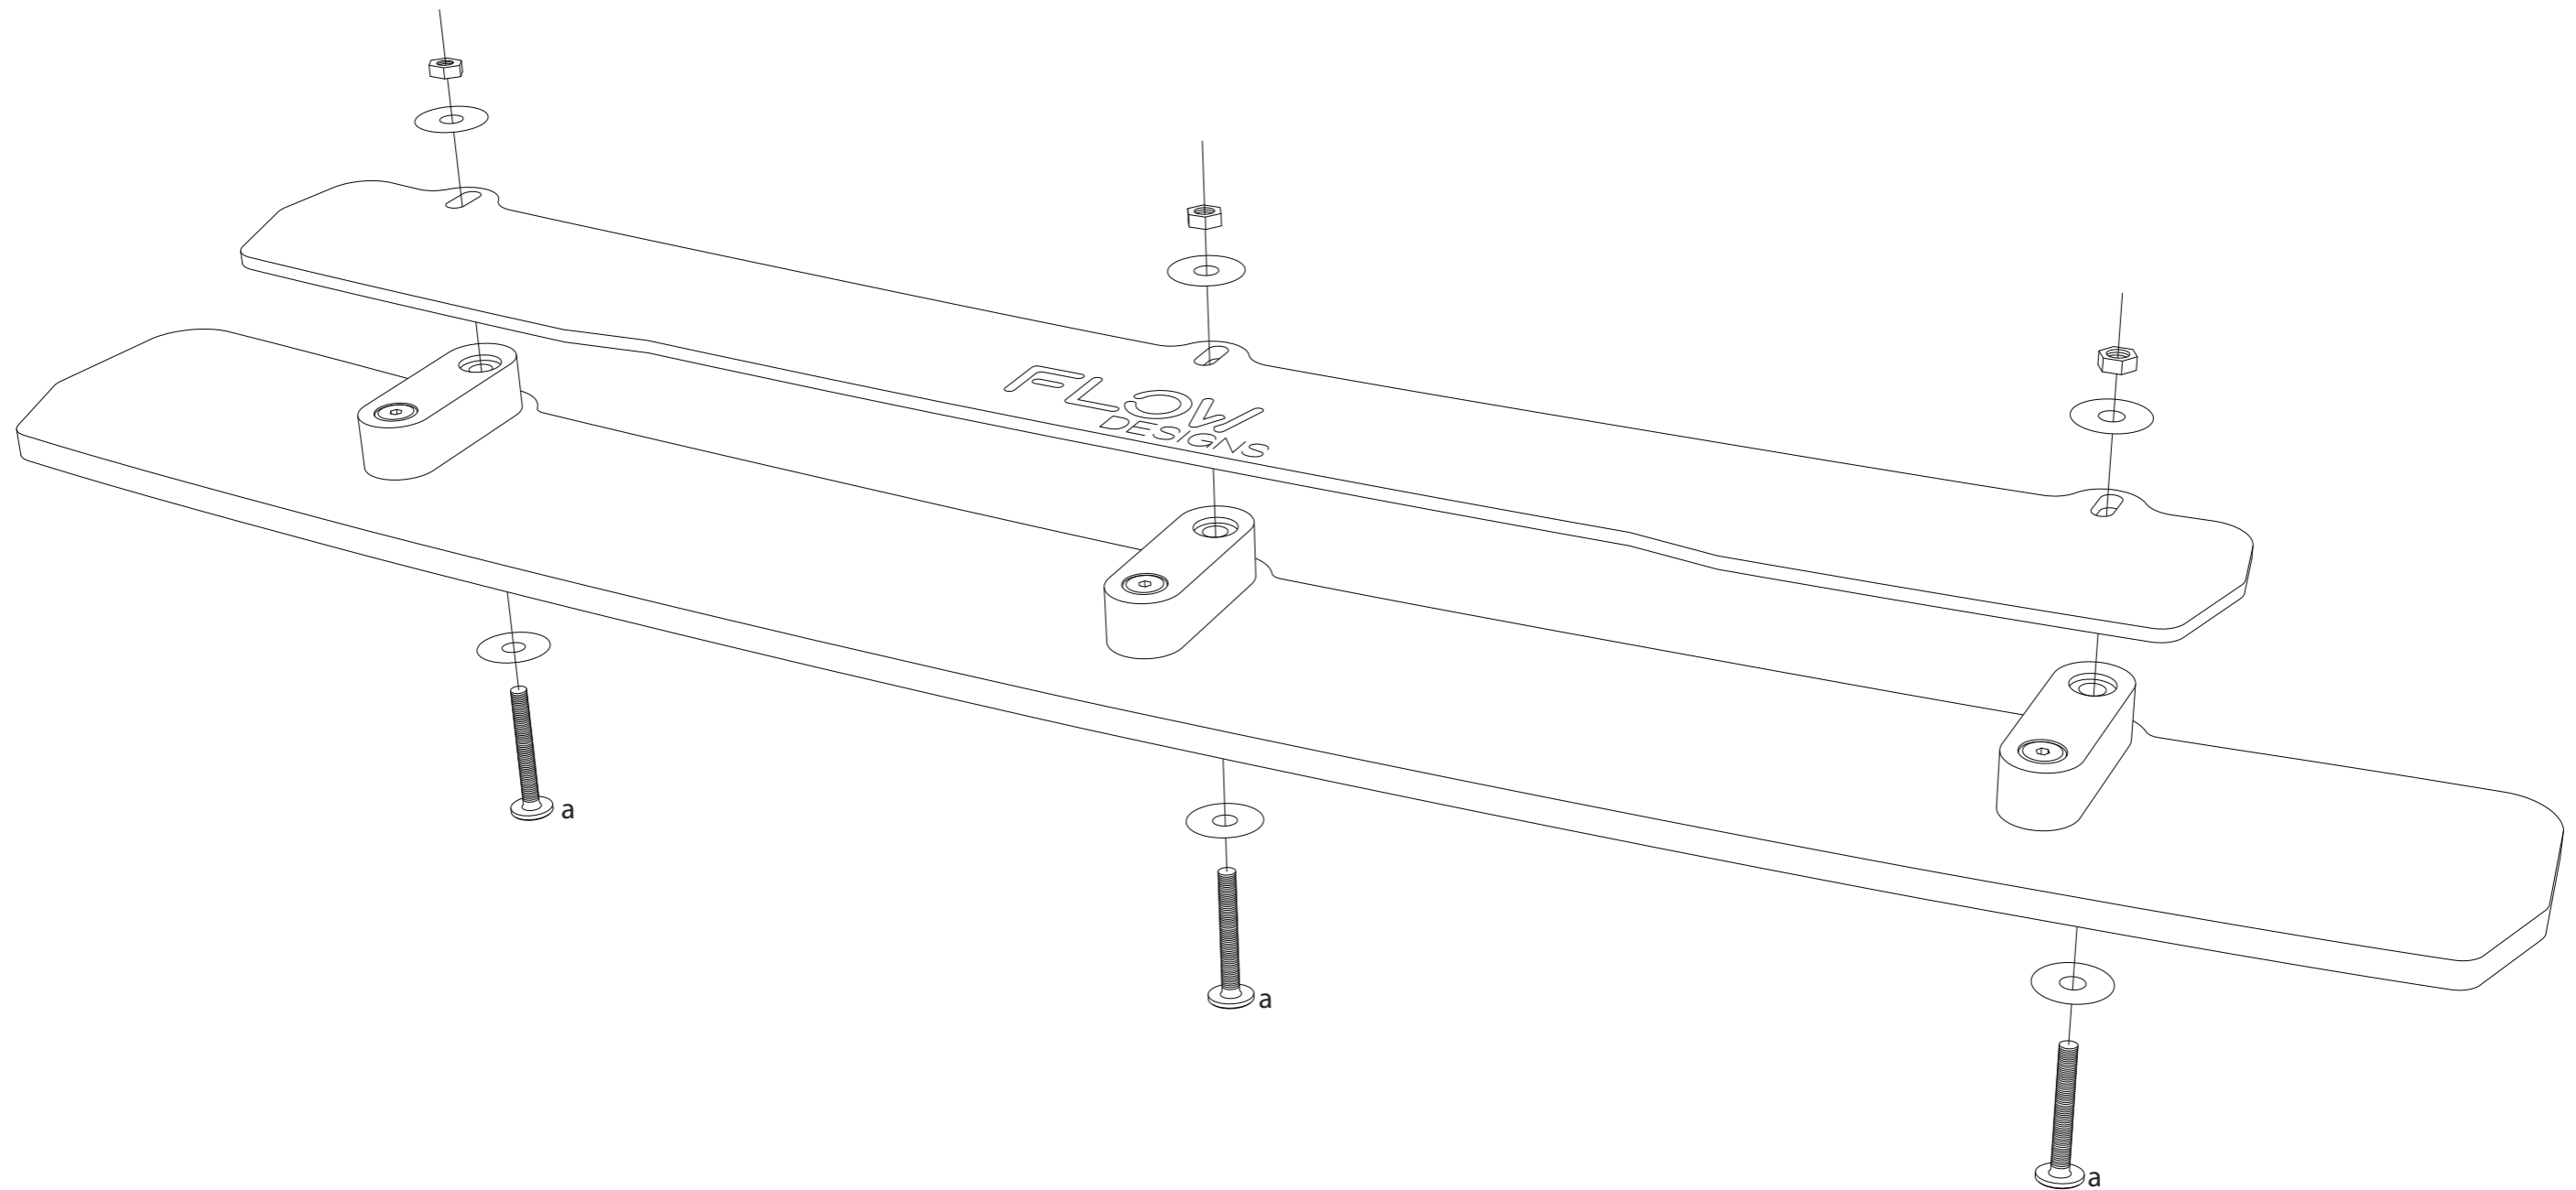

FITTING KIT

a

M6 BOLT
40mm LONG

X 3

PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER

PLEASE USE 8mm DRILL BIT