FITTING DIAGRAM

NISSAN SILVIA S15 STANDARD BAR BOLT ON ACCESSORIES

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED


CONFIGURATION 1

FRONT EXTENSIONS ONLY

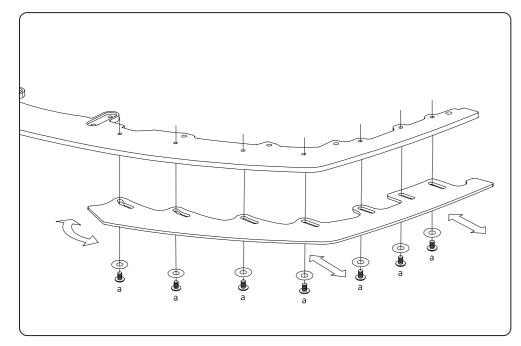


CONFIGURATION 2

FRONT WINGLETS ONLY

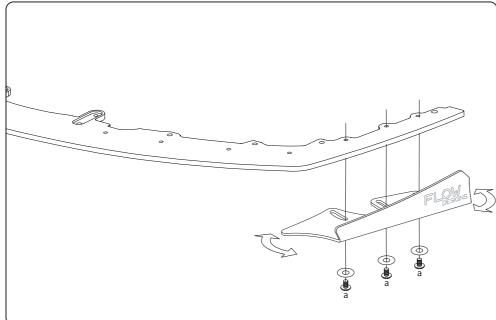

CONFIGURATION 3

FRONT EXTENSIONS AND WINGLETS

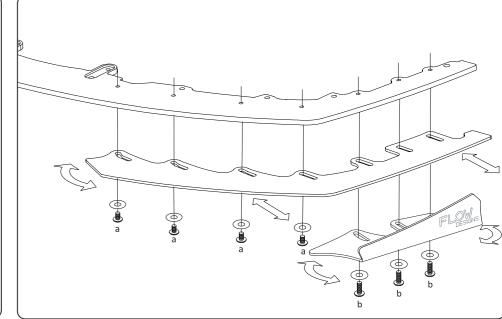

- Insert bolts loosely into alocated brass thread locations.
- Slide extensions in and out to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.


- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot extensions and winglets to your liking.
- · Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.

FITTING KIT

M6 BOLT a 12mm LONG X 14 \circ PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO SPLITTER

DO NOT OVERTIGHTEN

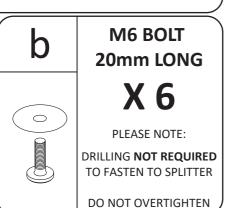







This Product application is not intended for public road reg Regulatons may vary from Countries outide of Australia.