

# FITTING DIAGRAM

## NISSAN SILVIA S15 STANDARD BAR - FRONT SPLITTER INSTRUCTIONS



### INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)

# BUMPER REMOVAL

# NOT REQUIRED

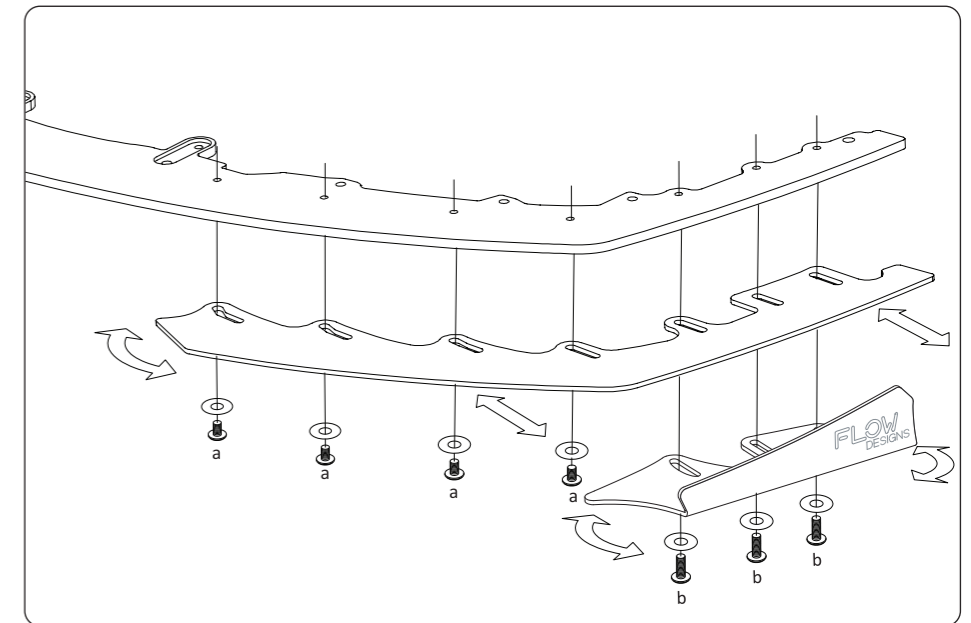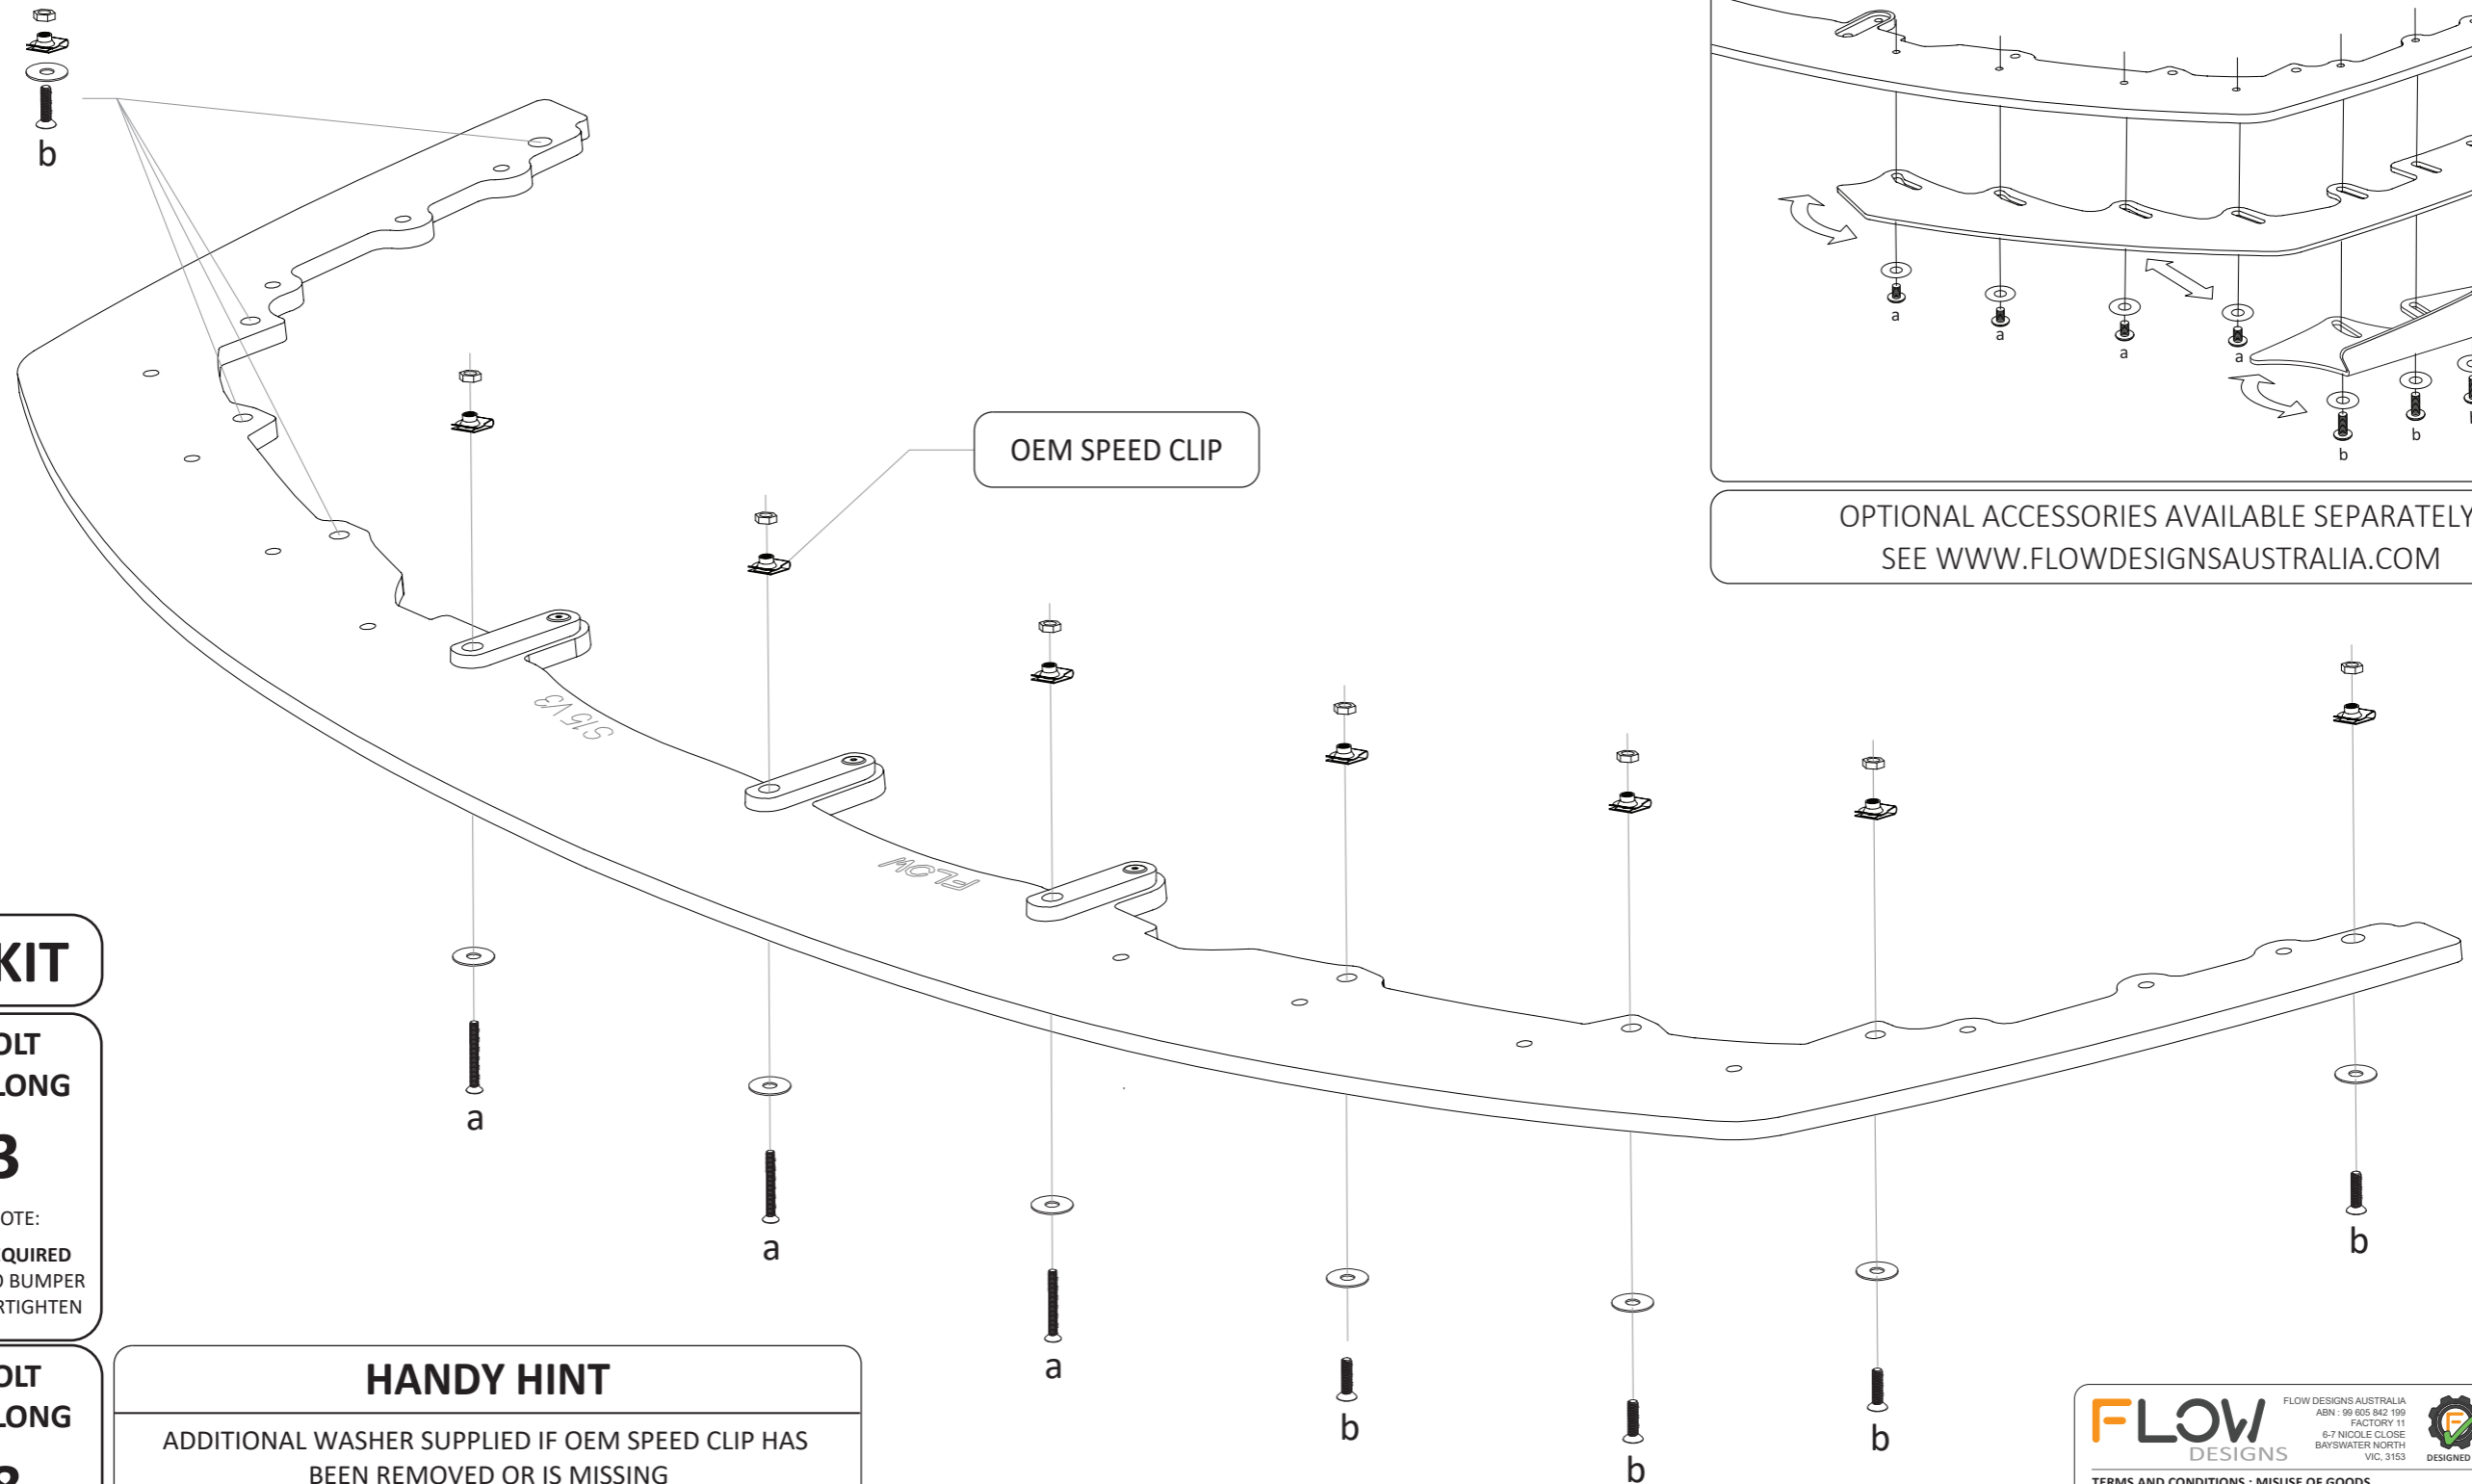

OPTIONAL ACCESSORIES AVAILABLE SEPARATELY.  
SEE [WWW.FLOWDESIGNSAUSTRALIA.COM](http://WWW.FLOWDESIGNSAUSTRALIA.COM)


### FITTING KIT

**a**

**M6 BOLT  
40mm LONG**

**X 3**

PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO BUMPER  
DO NOT OVERTIGHTEN




**b**

**M6 BOLT  
30mm LONG**


**X 8**

PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO BUMPER  
DO NOT OVERTIGHTEN



### HANDY HINT

ADDITIONAL WASHER SUPPLIED IF OEM SPEED CLIP HAS  
BEEN REMOVED OR IS MISSING

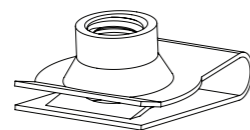

**TERMS AND CONDITIONS : MISUSE OF GOODS**  
By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:  
• This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.  
• We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.  
• It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.  
• We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!  
This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.  
[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)