FITTING DIAGRAM

NISSAN SILVIA S15 AERO BAR BOLT ON ACCESSORIES

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED


CONFIGURATION 1

FRONT EXTENSIONS ONLY

BLACK CHICAGO BOLT USE BLACK CHICAGO BOLT SUPPLIED AS PART OF FITTING KIT


CONFIGURATION 2

FRONT WINGLETS ONLY

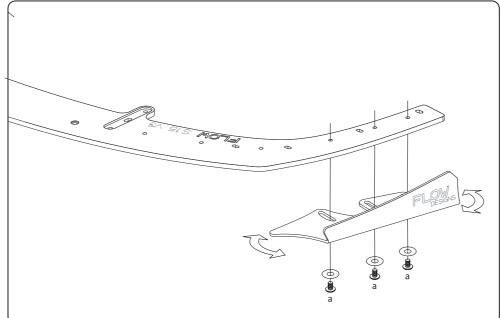

CONFIGURATION 3

FRONT EXTENSIONS AND WINGLETS

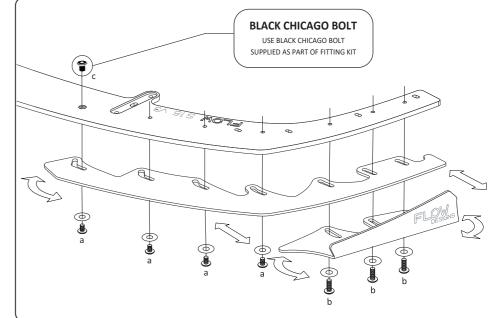

- Insert bolts loosely into alocated brass thread locations.
- Slide extensions in and out to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot extensions and winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.

FITTING KIT

M6 BOLT a 12mm LONG X 14 \circ

PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN

b

 \bigcirc

M6 BOLT 20mm LONG

X6 PLEASE NOTE:

DRILLING NOT REQUIRED TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN

CHICAGO BOLT BLACK



PLEASE NOTE: DRILLING NOT REQUIRED

TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN









TERMS AND CONDITIONS: MISUSE OF GOODS

This Product application is not intended for public road regi Regulatons may vary from Countries outide of Australia. Please check your Country's and State's road regulatons be