

FITTING DIAGRAM

NISSAN SILVIA S15 AERO BAR - FRONT SPLITTER INSTRUCTIONS


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com


BUMPER REMOVAL NOT REQUIRED

BLACK CHICAGO BOLT
USE BLACK CHICAGO BOLT
SUPPLIED AS PART OF FITTING KIT

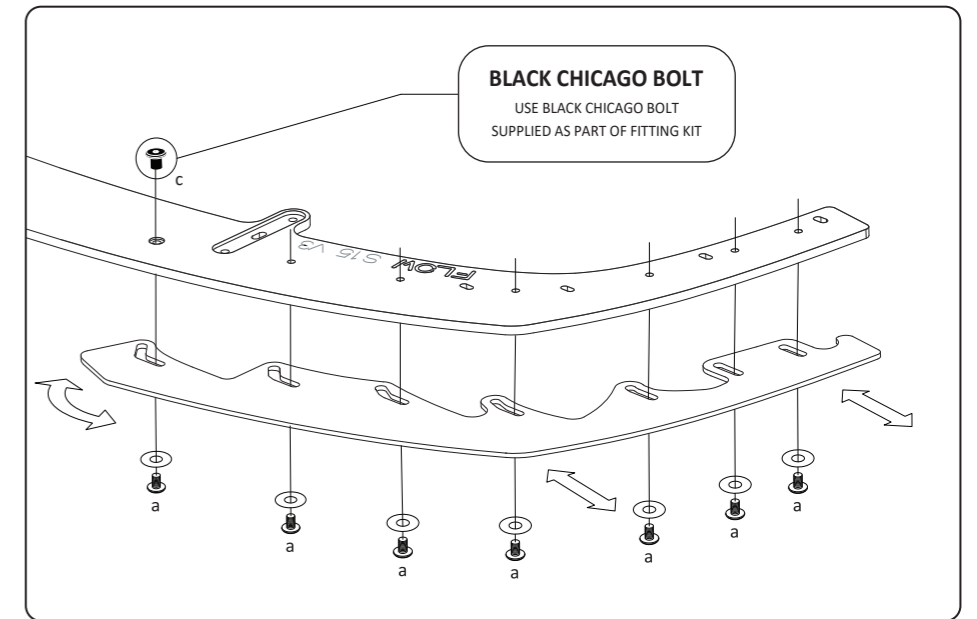

OPTIONAL ACCESSORIES AVAILABLE SEPARATELY.
SEE WWW.FLOWDESIGNSAUSTRALIA.COM

BLACK CHICAGO BOLT PROVIDED
WITH ADD ON ACCESSORIES. PLEASE
VISIT OUR WEBSITE FOR MORE
OPTIONS

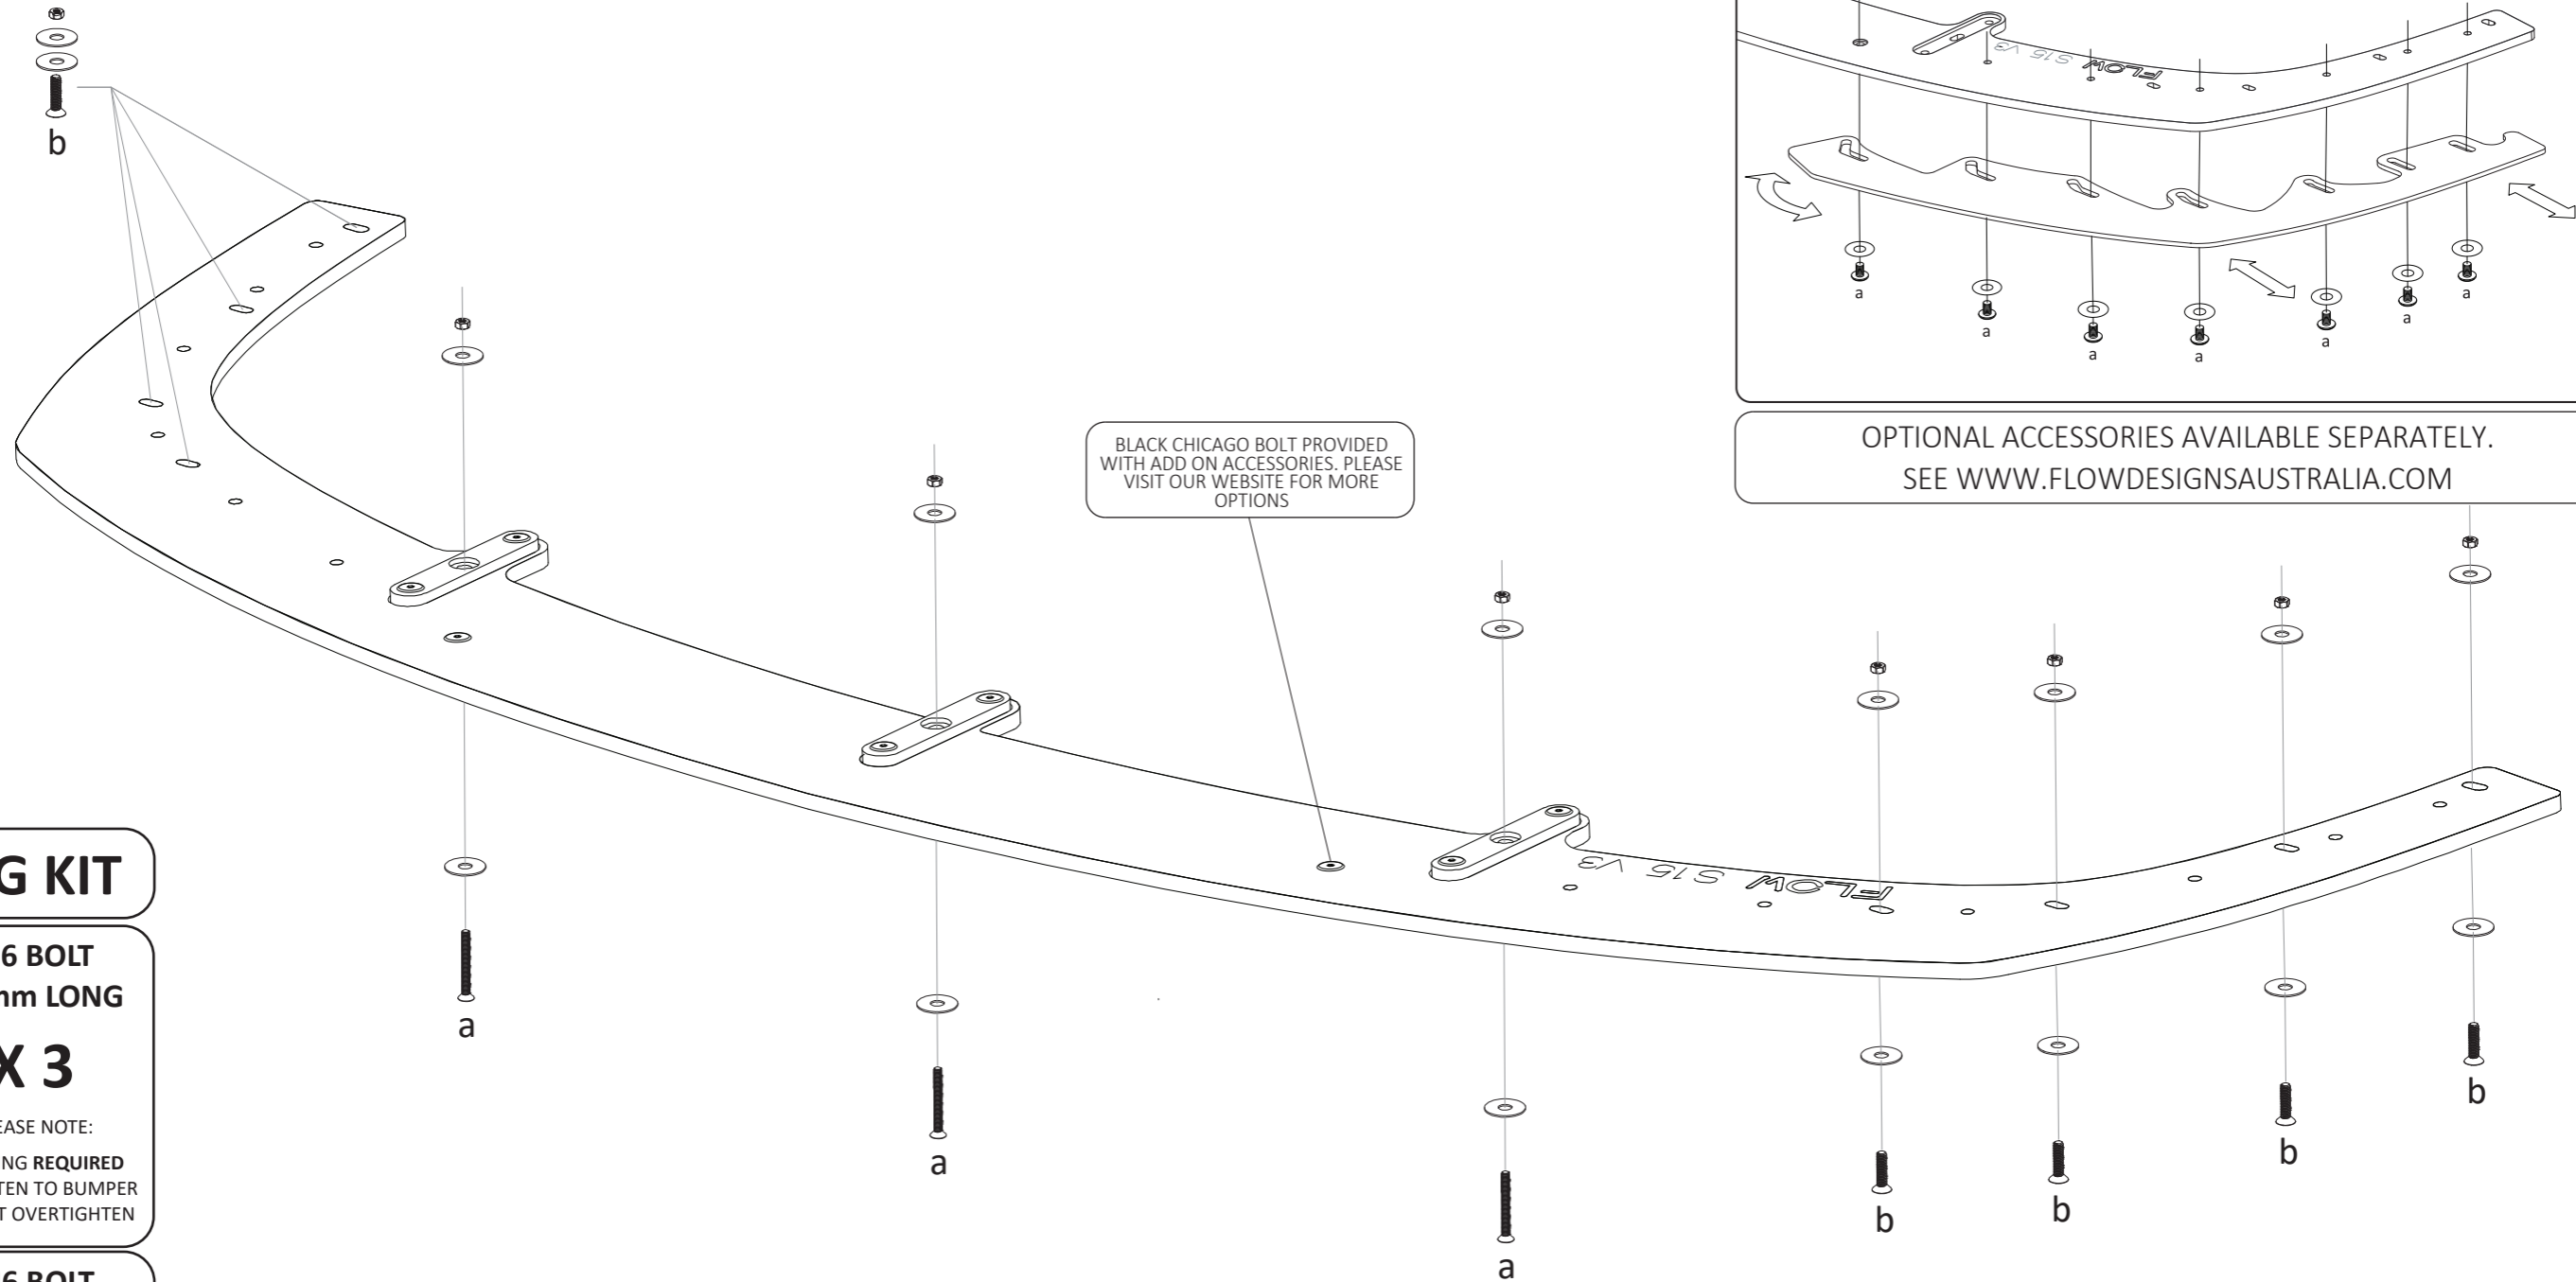


FITTING KIT

a

**M6 BOLT
40mm LONG**

X 3

PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER
DO NOT OVERTIGHTEN



b

**M6 BOLT
30mm LONG**

X 8

PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER
DO NOT OVERTIGHTEN



FLOW

FLOW DESIGNS AUSTRALIA
ABN - 99 605 842 199
FACTORY 11
8-7 NICOLE CLOSE
BAYSWATER NORTH
VIC. 3153

DESIGNED AND MANUFACTURED IN AUSTRALIA

TERMS AND CONDITIONS : MISUSE OF GOODS
By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com