

FITTING DIAGRAM

AUDI S3 8V SEDAN FACELIFT: FRONT SPLITTER INSTRUCTIONS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.


www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

MOUNTING BRACE VIDEO QR



Please note: Procedure for mounting Pre-facelift and Facelift Front Splitter brace is the same. Refer to video for installation process

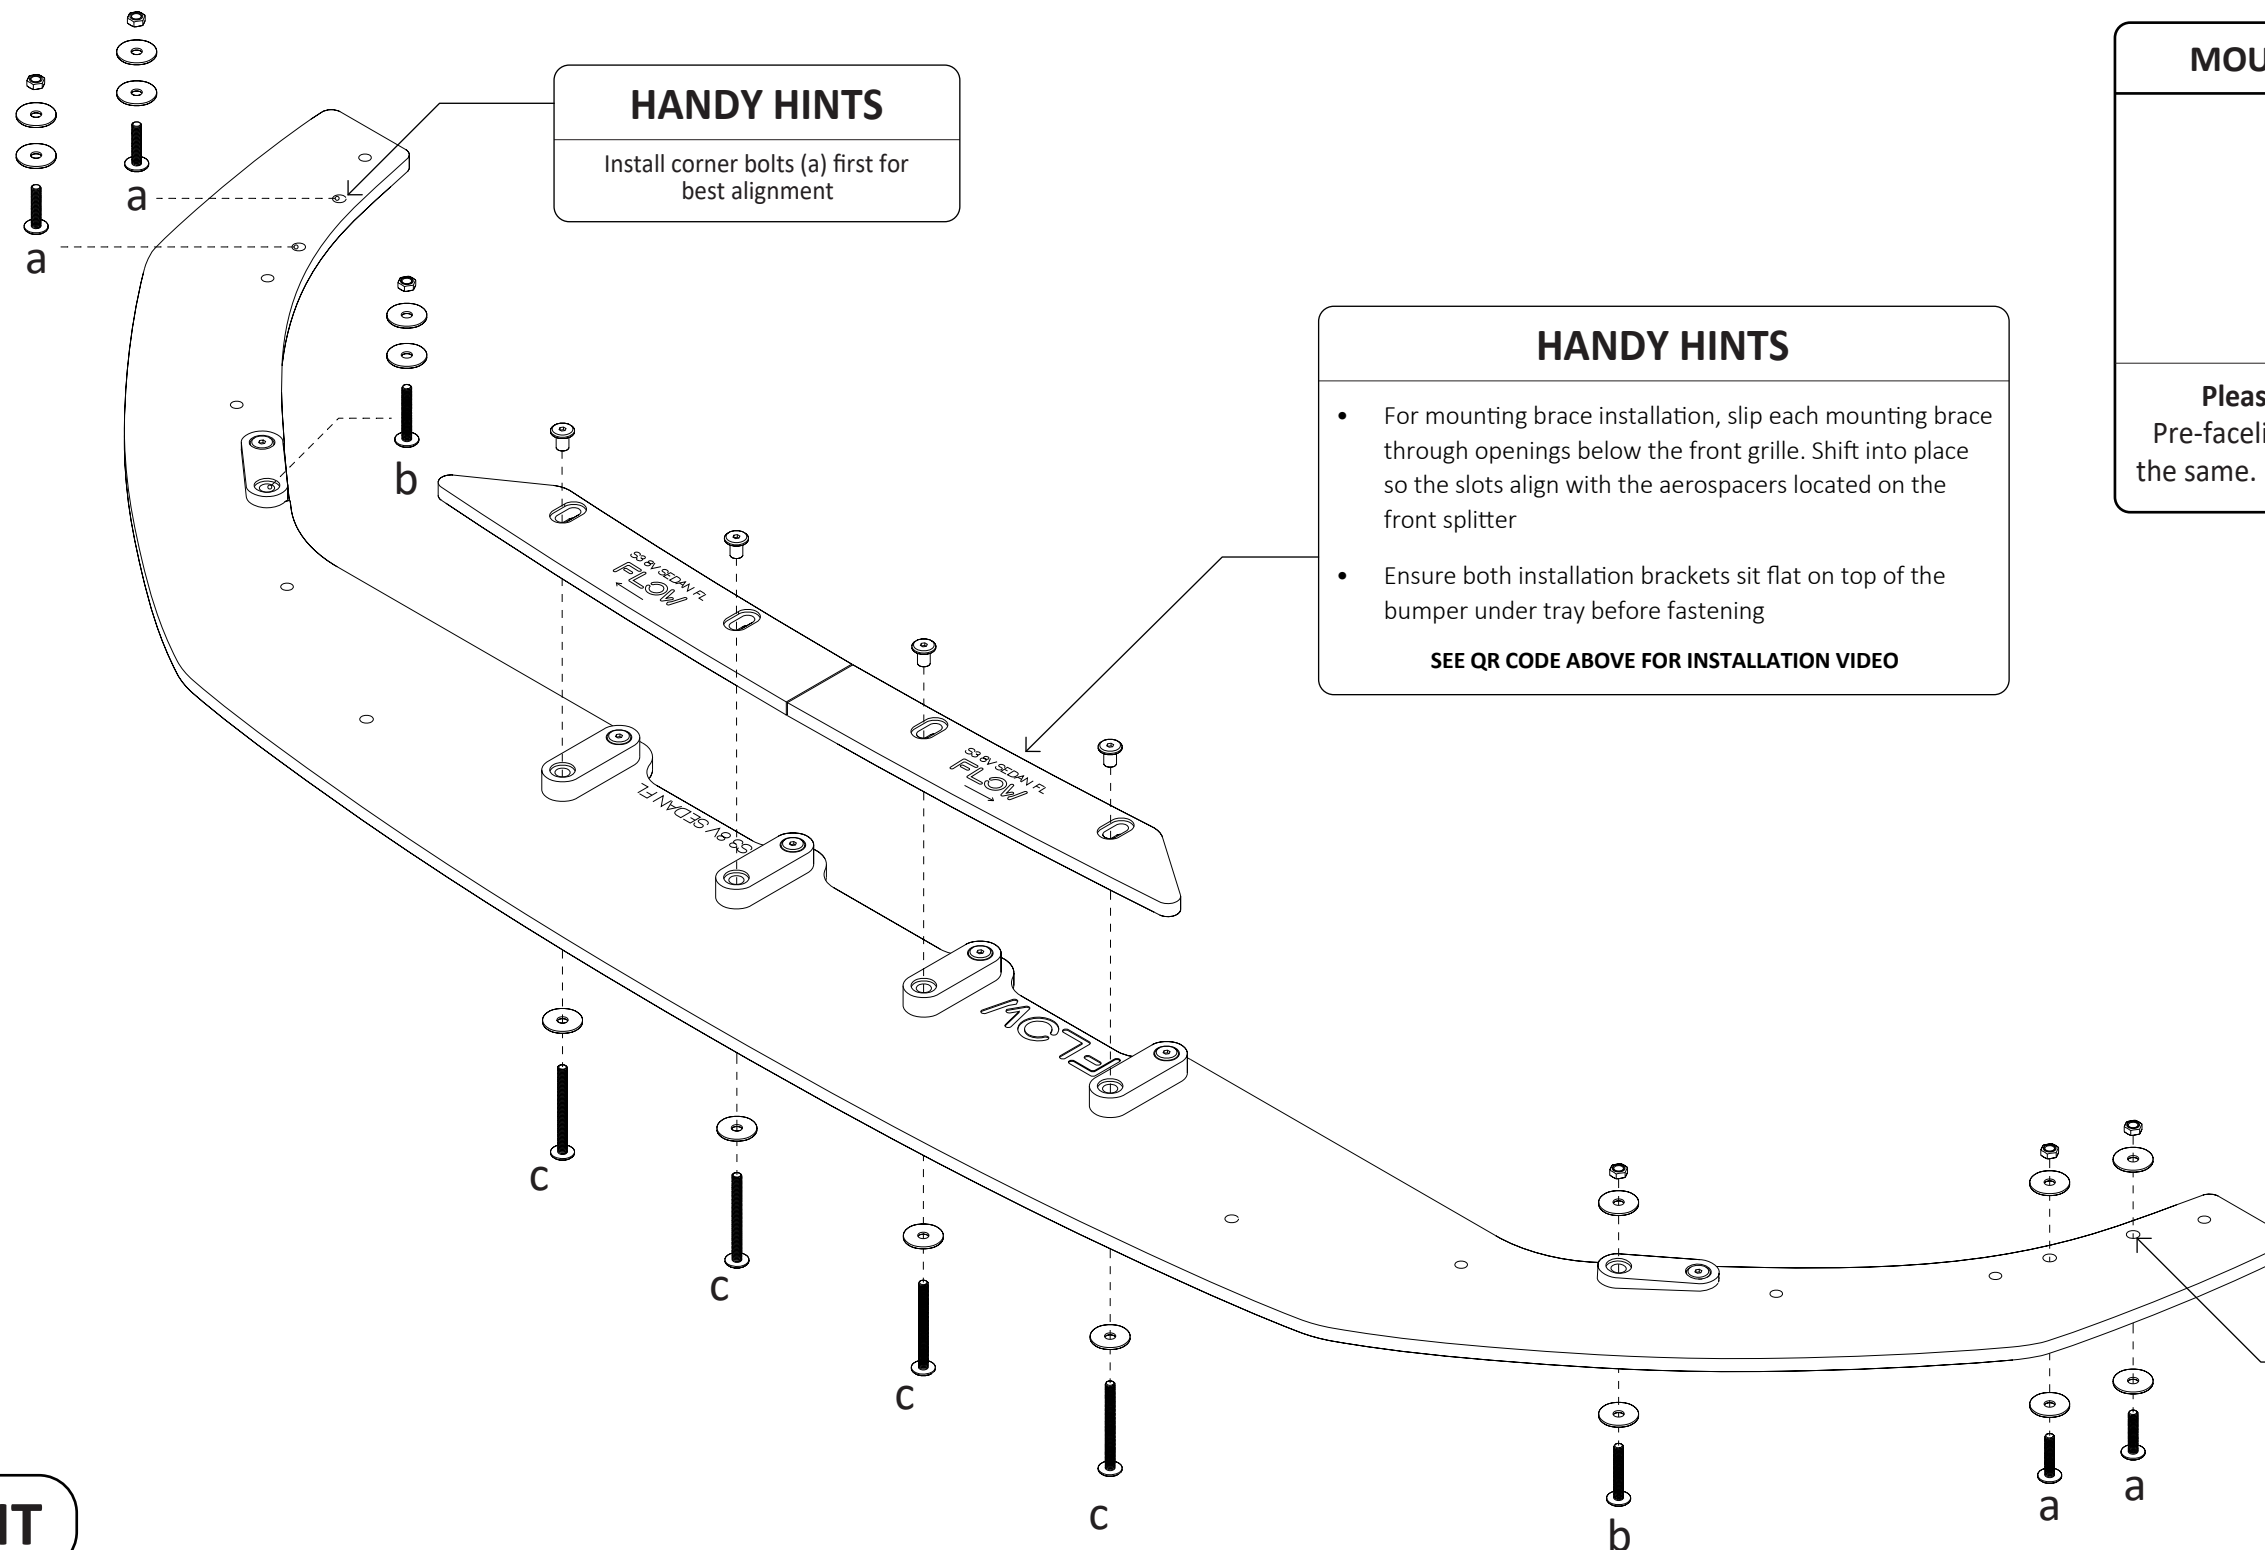

HANDY HINTS

Install corner bolts (a) first for best alignment

HANDY HINTS

- For mounting brace installation, slip each mounting brace through openings below the front grille. Shift into place so the slots align with the aerospacers located on the front splitter
- Ensure both installation brackets sit flat on top of the bumper under tray before fastening

SEE QR CODE ABOVE FOR INSTALLATION VIDEO

HANDY HINTS

Install corner bolts (a) first for best alignment

FITTING KIT

a

M6 BOLT
30mm LONG

X 4

PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER
PLEASE USE 8mm DRILL BIT

b

M6 BOLT
40mm LONG

X 2

PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER
PLEASE USE 8mm DRILL BIT


c

M6 BOLT
65mm LONG

X 4

PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER
PLEASE USE 8mm DRILL BIT

FLOW DESIGNS MOUNTING BRACE

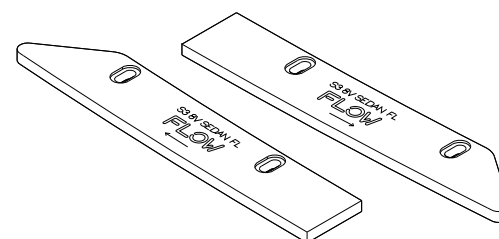

PLEASE NOTE
FOR ADD ON ACCESSORIES

DO NOT
OVERTIGHTEN FASTENERS
INTO BRASS FITTINGS

HAND TIGHTEN ONLY



FLOW DESIGNS

FLOW DESIGNS AUSTRALIA
ABN : 99 605 842 199
FACTORY 11
10 LONGSTAFF RD
BAYSWATER
VIC, 3153

DESIGNED AND MANUFACTURED IN AUSTRALIA

TERMS AND CONDITIONS: MISUSE OF GOODS
By taking possession of the Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with all subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the designs rules and public road regulations of your area, region and/or country.
- We do our best effort to consider safety when designing our products. We want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability or breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com