

# FITTING DIAGRAM

SUBARU G3 WRX/RS NB HATCH REAR DIFFUSER + FLOW-LOCK FINS (OPTION B)


## INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)

# BUMPER REMOVAL NOT REQUIRED

## HANDY HINTS

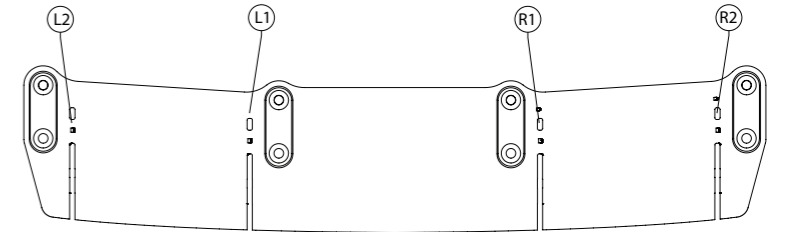

- Align FLOW-LOCK Fins to their corresponding slots.
- Please ensure to allocate the correct FLOW-LOCK Fin to the correct corresponding slot (A into A slot, B into B slot etc.)
- Ensure textured side of fin is facing out from opposing fin
- Push fin firmly into the slots until a clicking sound is heard.
- Check both top and bottom locking tabs have securely seated.

**Please Note :** Once fins have been locked into position, they will be difficult to remove.

## HANDY HINTS

For correct fitment, install all fins onto rear diffuser before fastening to rear bumper

## FITTING KIT

**a**  
M6 BOLT  
40mm LONG

**X 4**

PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO BUMPER

PLEASE USE 8mm DRILL BIT

L2

L1

R1

R2