

FITTING DIAGRAM

SUBARU G3 WRX SEDAN REAR DIFFUSER + FLOW-LOCK FINS


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

HANDY HINTS

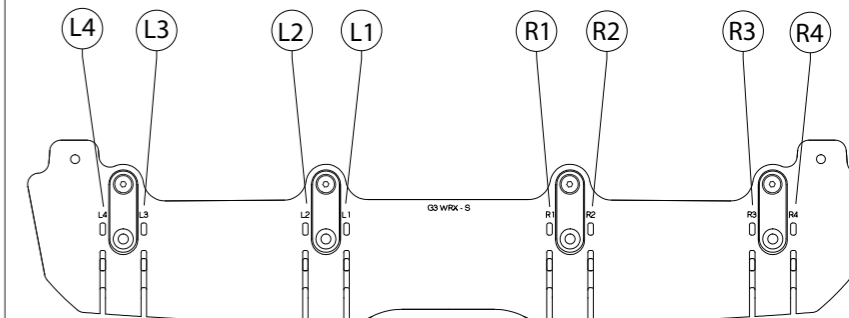


- Align FLOW-LOCK Fins to their corresponding slots.
- Please ensure to allocate the correct FLOW-LOCK Fin to the correct corresponding slot (A into A slot, B into B slot etc.)
- Ensure textured side of fin is facing out from opposing fin
- Push fin firmly into the slots until a clicking sound is heard.
- Check both top and bottom locking tabs have securely seated.

Please Note : Once fins have been locked into position, they will be difficult to remove.

HANDY HINTS

Ensure back two holes are aligned with OEM push clips in rear bumper for correct diffuser fitment

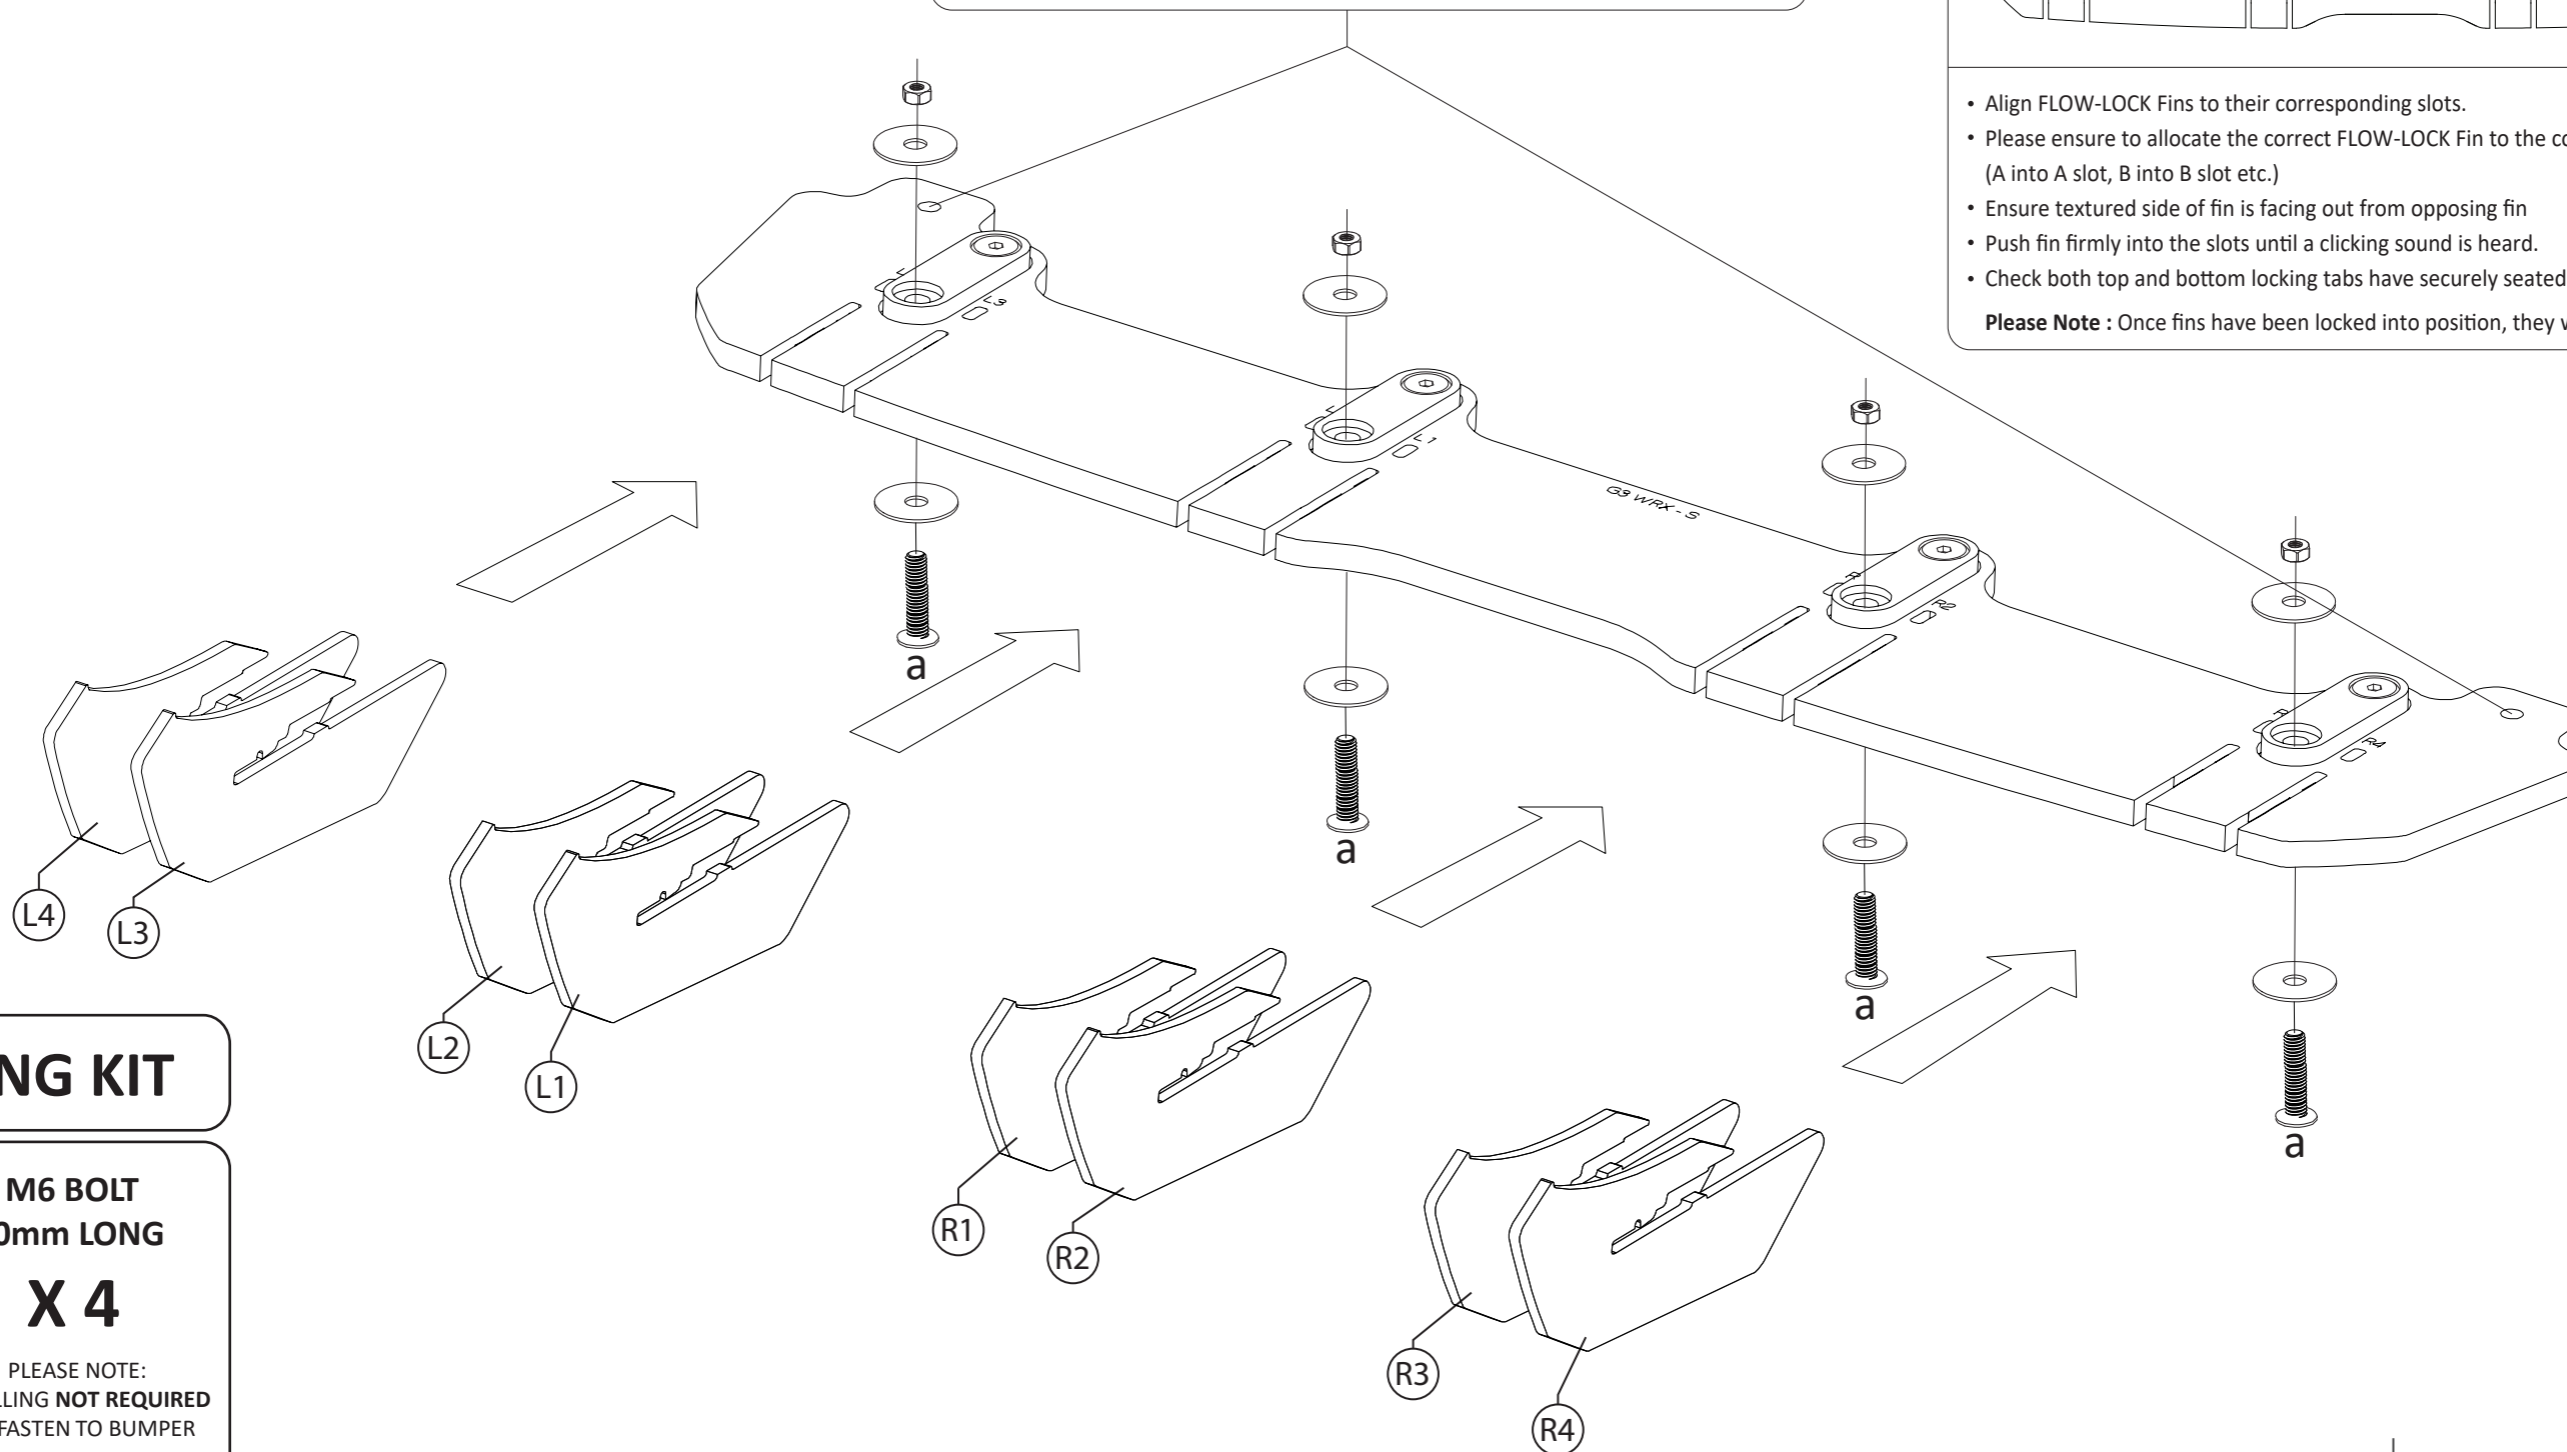

FITTING KIT

a

M6 BOLT
40mm LONG

X 4

PLEASE NOTE:
DRILLING **NOT REQUIRED**
TO FASTEN TO BUMPER

PLEASE USE 8mm DRILL BIT