FITTING DIAGRAM

SUBARU VB WRX SEDAN: FRONT SPLITTER INSTRUCTIONS


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

FITTING KIT

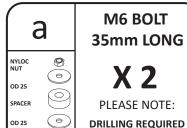

M6 BOLT 40mm LONG

TO FASTEN TO FRONT SPLITTER USE **8MM** DRILL BIT

(0)

b

PLEASE NOTE:

DRILLING REQUIRED TO FASTEN TO FRONT SPLITTER

USE **8MM** DRILL BIT

M6 BOLT 35mm LONG

9 (0)

PLEASE NOTE:

DRILLING REQUIRED TO FASTEN TO FRONT SPLITTER
USE **8MM** DRILL BIT

M6 BOLT 30mm LONG

(9)

e

(0)

0

PLEASE NOTE:


DRILLING REQUIRED TO FASTEN TO FRONT SPLITTER USE **8MM** DRILL BIT

HANDY HINTS

Align corner and inside of splitter to back edge of bumper before drilling for best fitment.


INSTRUCTIONAL VIDEO QR CODE



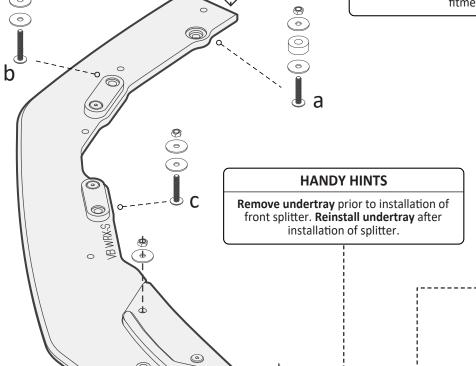

FITTING KIT - E **INSTALLATION GUIDE**

Install **3d printed spacer** with top lip **facing down** as shown in diagram above prior to installation of splitter. Push spacer into hole to lock into place.

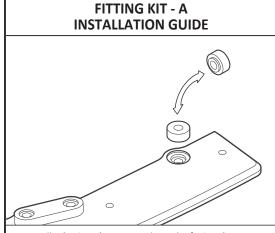

Install **3d printed spacer** with top lip **facing down** as shown in diagram above prior to installation of splitter. Push spacer into hole to lock into place.

HANDY HINTS

M6 BOLT 45mm LONG

PLEASE NOTE: DRILLING REQUIRED

TO FASTEN TO FRONT SPLITTER USE **8MM** DRILL BIT



HANDY HINTS

Drill out OEM dimples on front bumper for

mounting bolts (c), (d) and (e) prior to installing the front splitter.

OVERTIGHTEN FASTENERS INTO BRASS FITTINGS HAND TIGHTEN ONLY



Align corner and inside of splitter to back edge of bumper before drilling for best fitment.

