FITTING DIAGRAM

TOYOTA FT86 FACELIFT: FRONT SPLITTER V1

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL REQUIRED

FITTING KIT



M6 BOLT 25mm LONG



X4



DRILLING REQUIRED TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

M6 BOLT 30mm LONG



X4

PLEASE NOTE:

DRILLING **REQUIRED** TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

M6 BOLT 30mm LONG




X2

PLEASE NOTE:

DRILLING NOT REQUIRED TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

AEROSPACER M6 CHICAGO BOLT M6 X 12mm LONG BOLT



PLEASE NOTE: ASSEMBLE TO THE SPLITTER BEFORE INSTALLING SPLITTER TO THE CAR


AEROSPACER WAHERS





PLEASE NOTE:

PLACE AEROSPACER WASHERS UNDER THE AEROSPACERS TO ADJUST TO DESIRED ANGLE

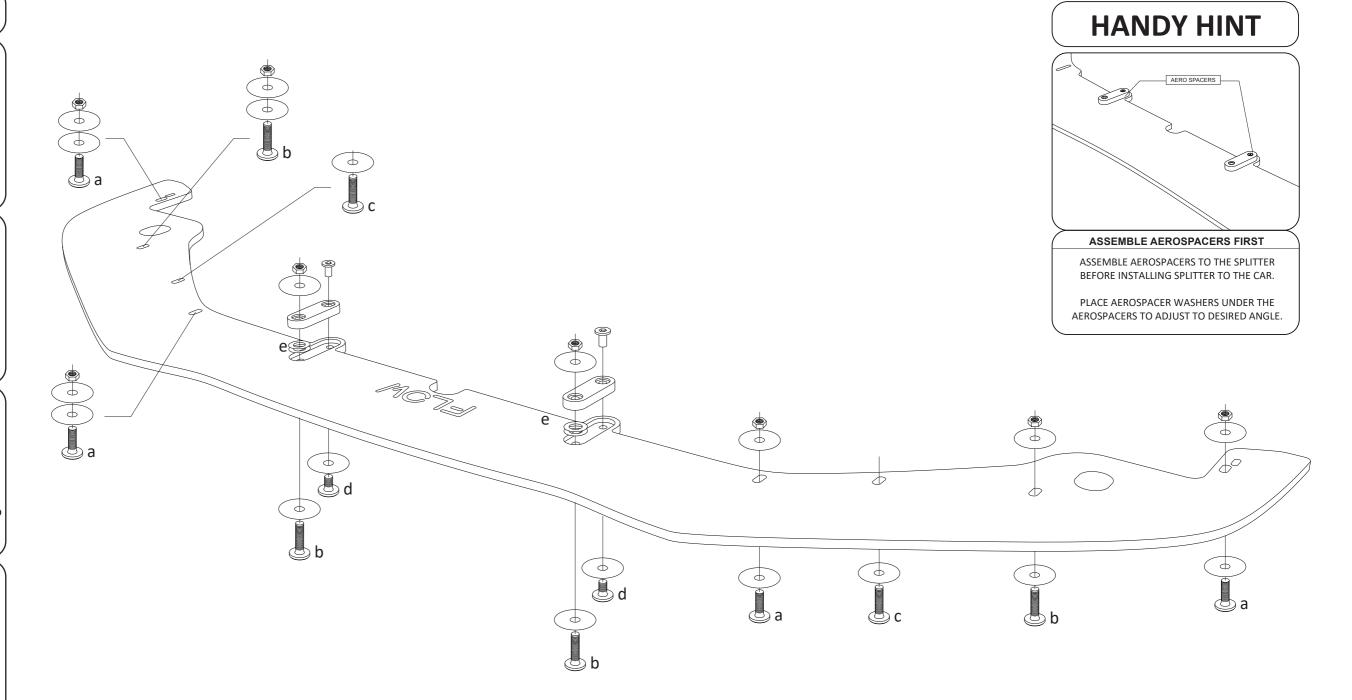







TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road registered vehicles within Australia. Regulatons may vary from Countries outide of Australia. Please check your Country's and State's road regulatons before installing on a vehicle intended for public road use.