

FITTING DIAGRAM

VW AW POLO GTI : SIDE SKIRT SPLITTERS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

SIDE SKIRT REMOVAL REQUIRED

HANDY HINTS

- Remove OEM side skirt
- Align the back edge of the side splitter with the back edge of the OEM side skirt for correct alignment
- Using holes in the side splitter as guides, mark out hole locations in OEM side trim
- Remove side splitter and drill out holes in marked locations using 8mm drill bit
- Attach side splitter to OEM side skirt using bolts (a.)
- Reattach OEM side trim and splitter to car

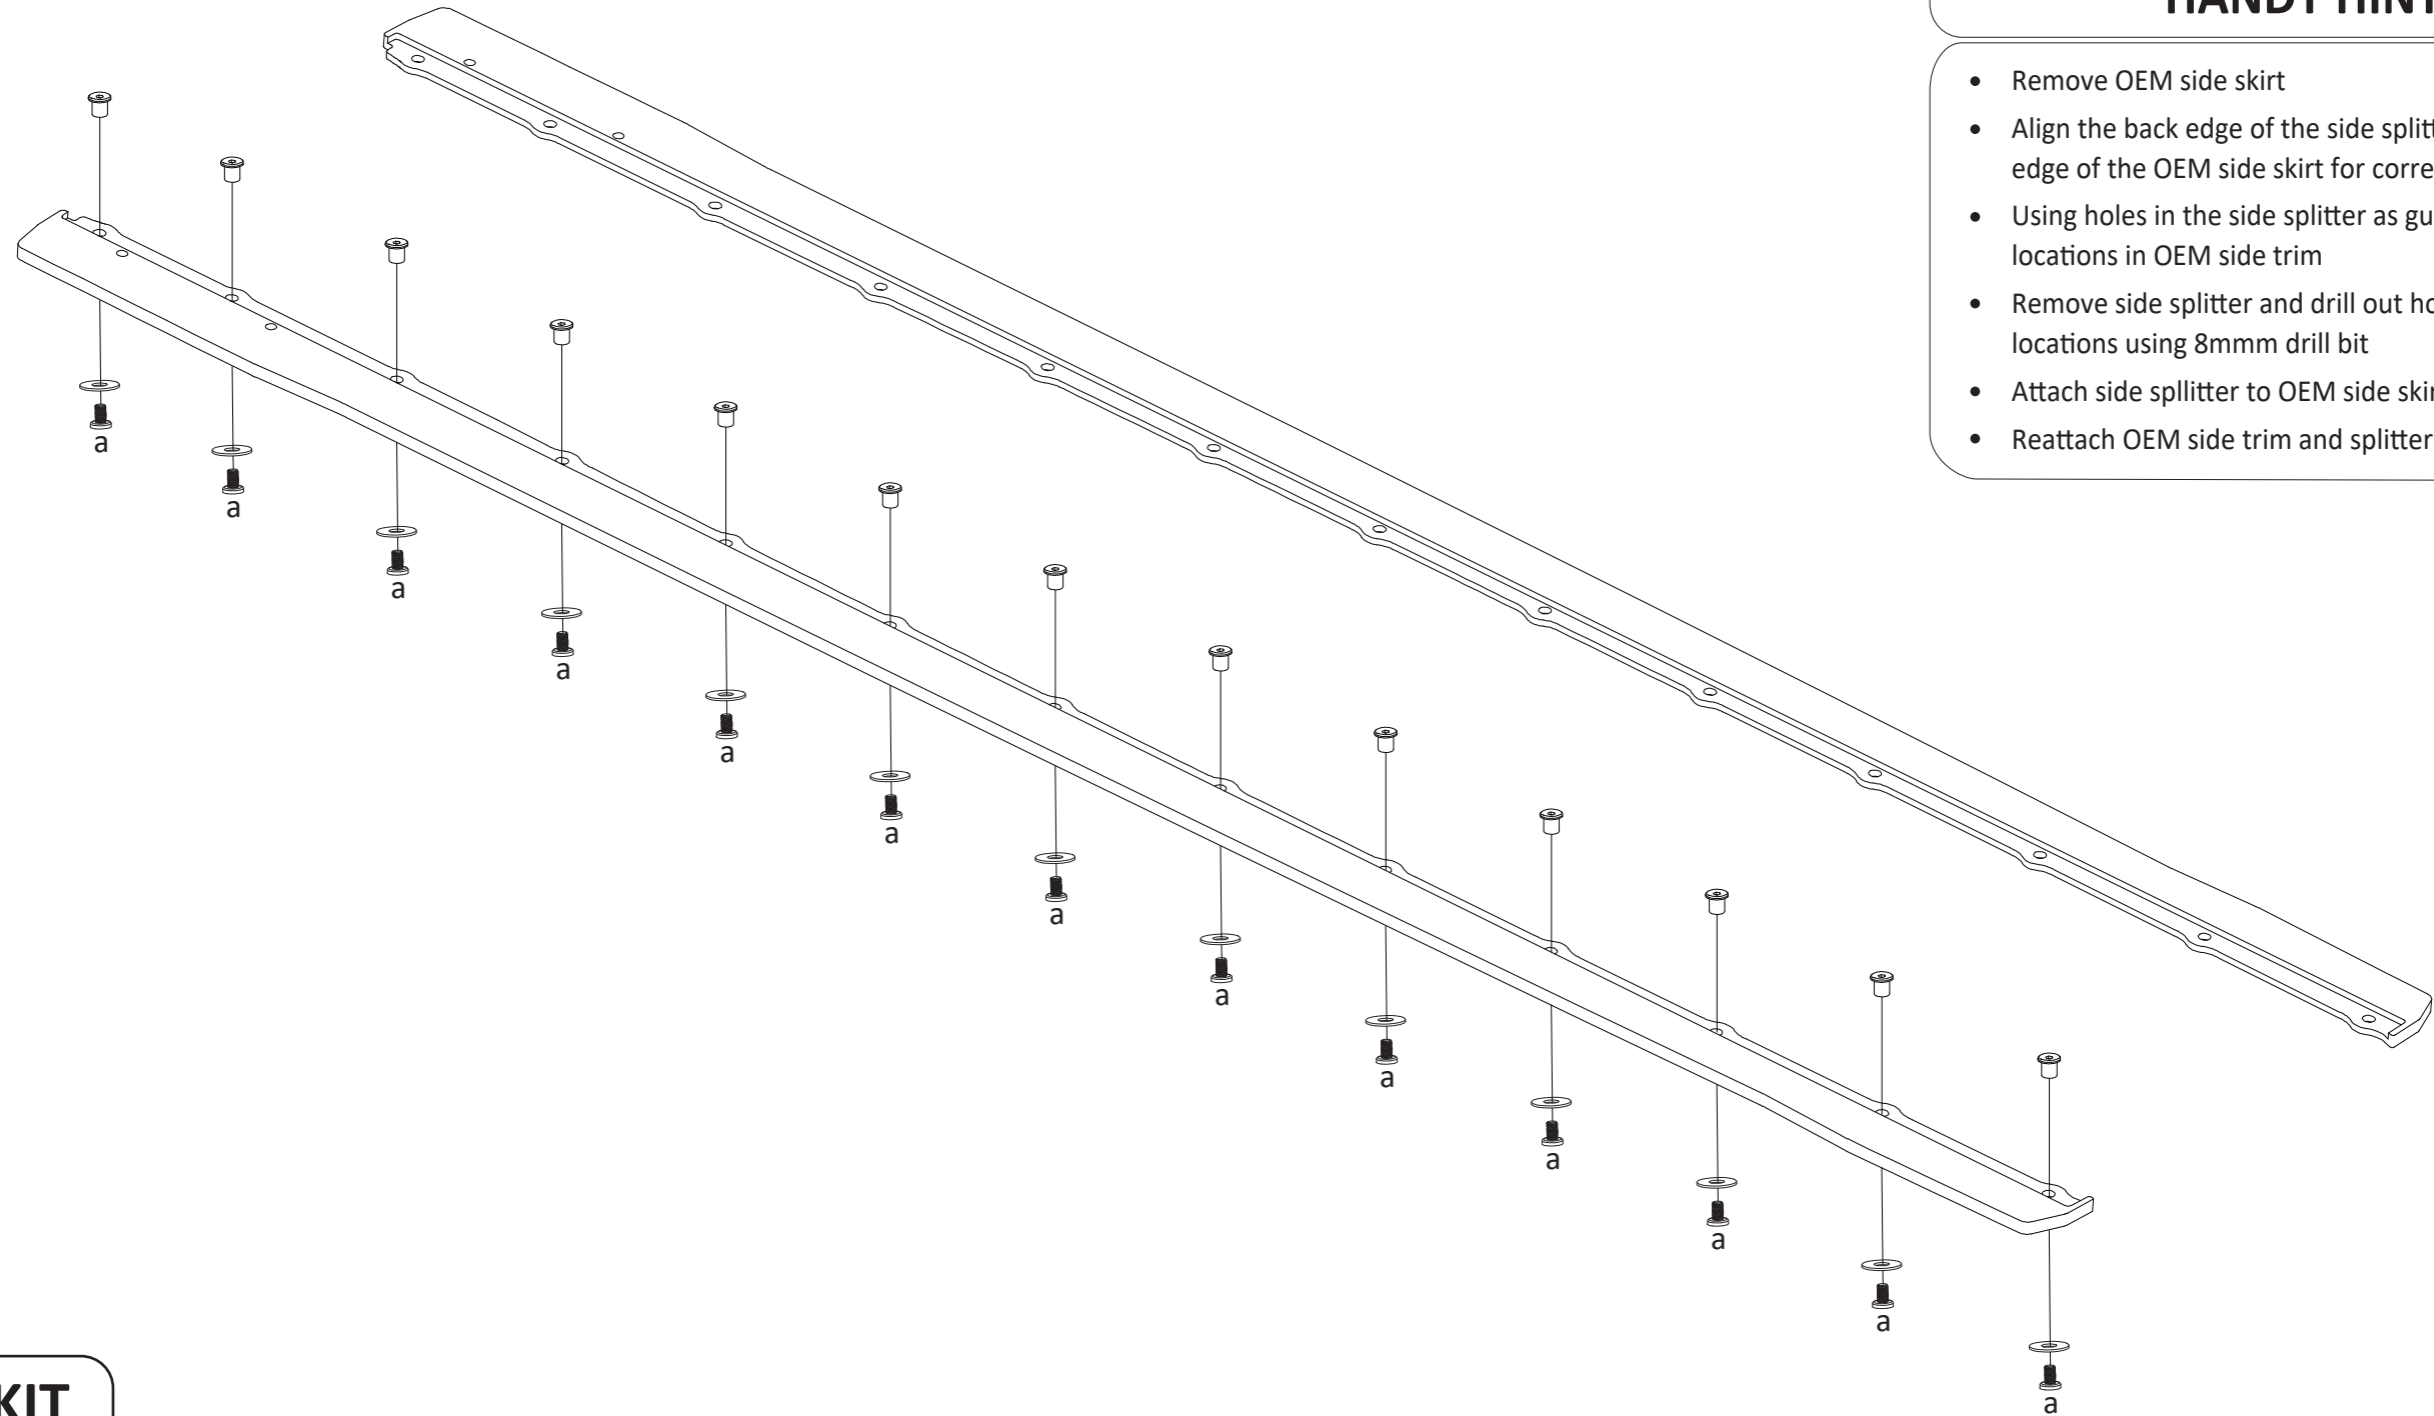

FITTING KIT

a

M6 BOLT
10mm LONG

X 26

OD 25



PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO SIDE SKIRT

FLOW
DESIGNS

FLOW DESIGNS AUSTRALIA
ABN : 99 605 842 199
FACTORY 11
6-7 NICOLE CLOSE
BAYSWATER NORTH
VIC, 3153



TERMS AND CONDITIONS : MISUSE OF GOODS

By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer;

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com