

FITTING DIAGRAM

VW GOLF GTI MK6 V3 - SIDE EXTENSIONS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

SIDE SKIRT REMOVAL REQUIRED

HANDY HINTS

- 1a Remove oem side trim
- 1b Align oem side trim with rebate in side splitter
- 1c Drill holes in oem side trim
- 2 Insert and tighten screws (see fitting kit diagram (a.))
- 3 Reattach oem side trim and splitter to car


FOR OPTION A [RECOMENDED]

- 1 Mark out and drill holes (d.) on car
- 2 Install nutserts using appropriate nutsert/rivnut tool (not supplied)
- 3 Reattach oem side trim and splitter and insert remaining bolts

FOR OPTION B

- 1 Use self drilling screws in remaing splitter holes (b.) (c.) (d.)

OEM SIDE TRIM

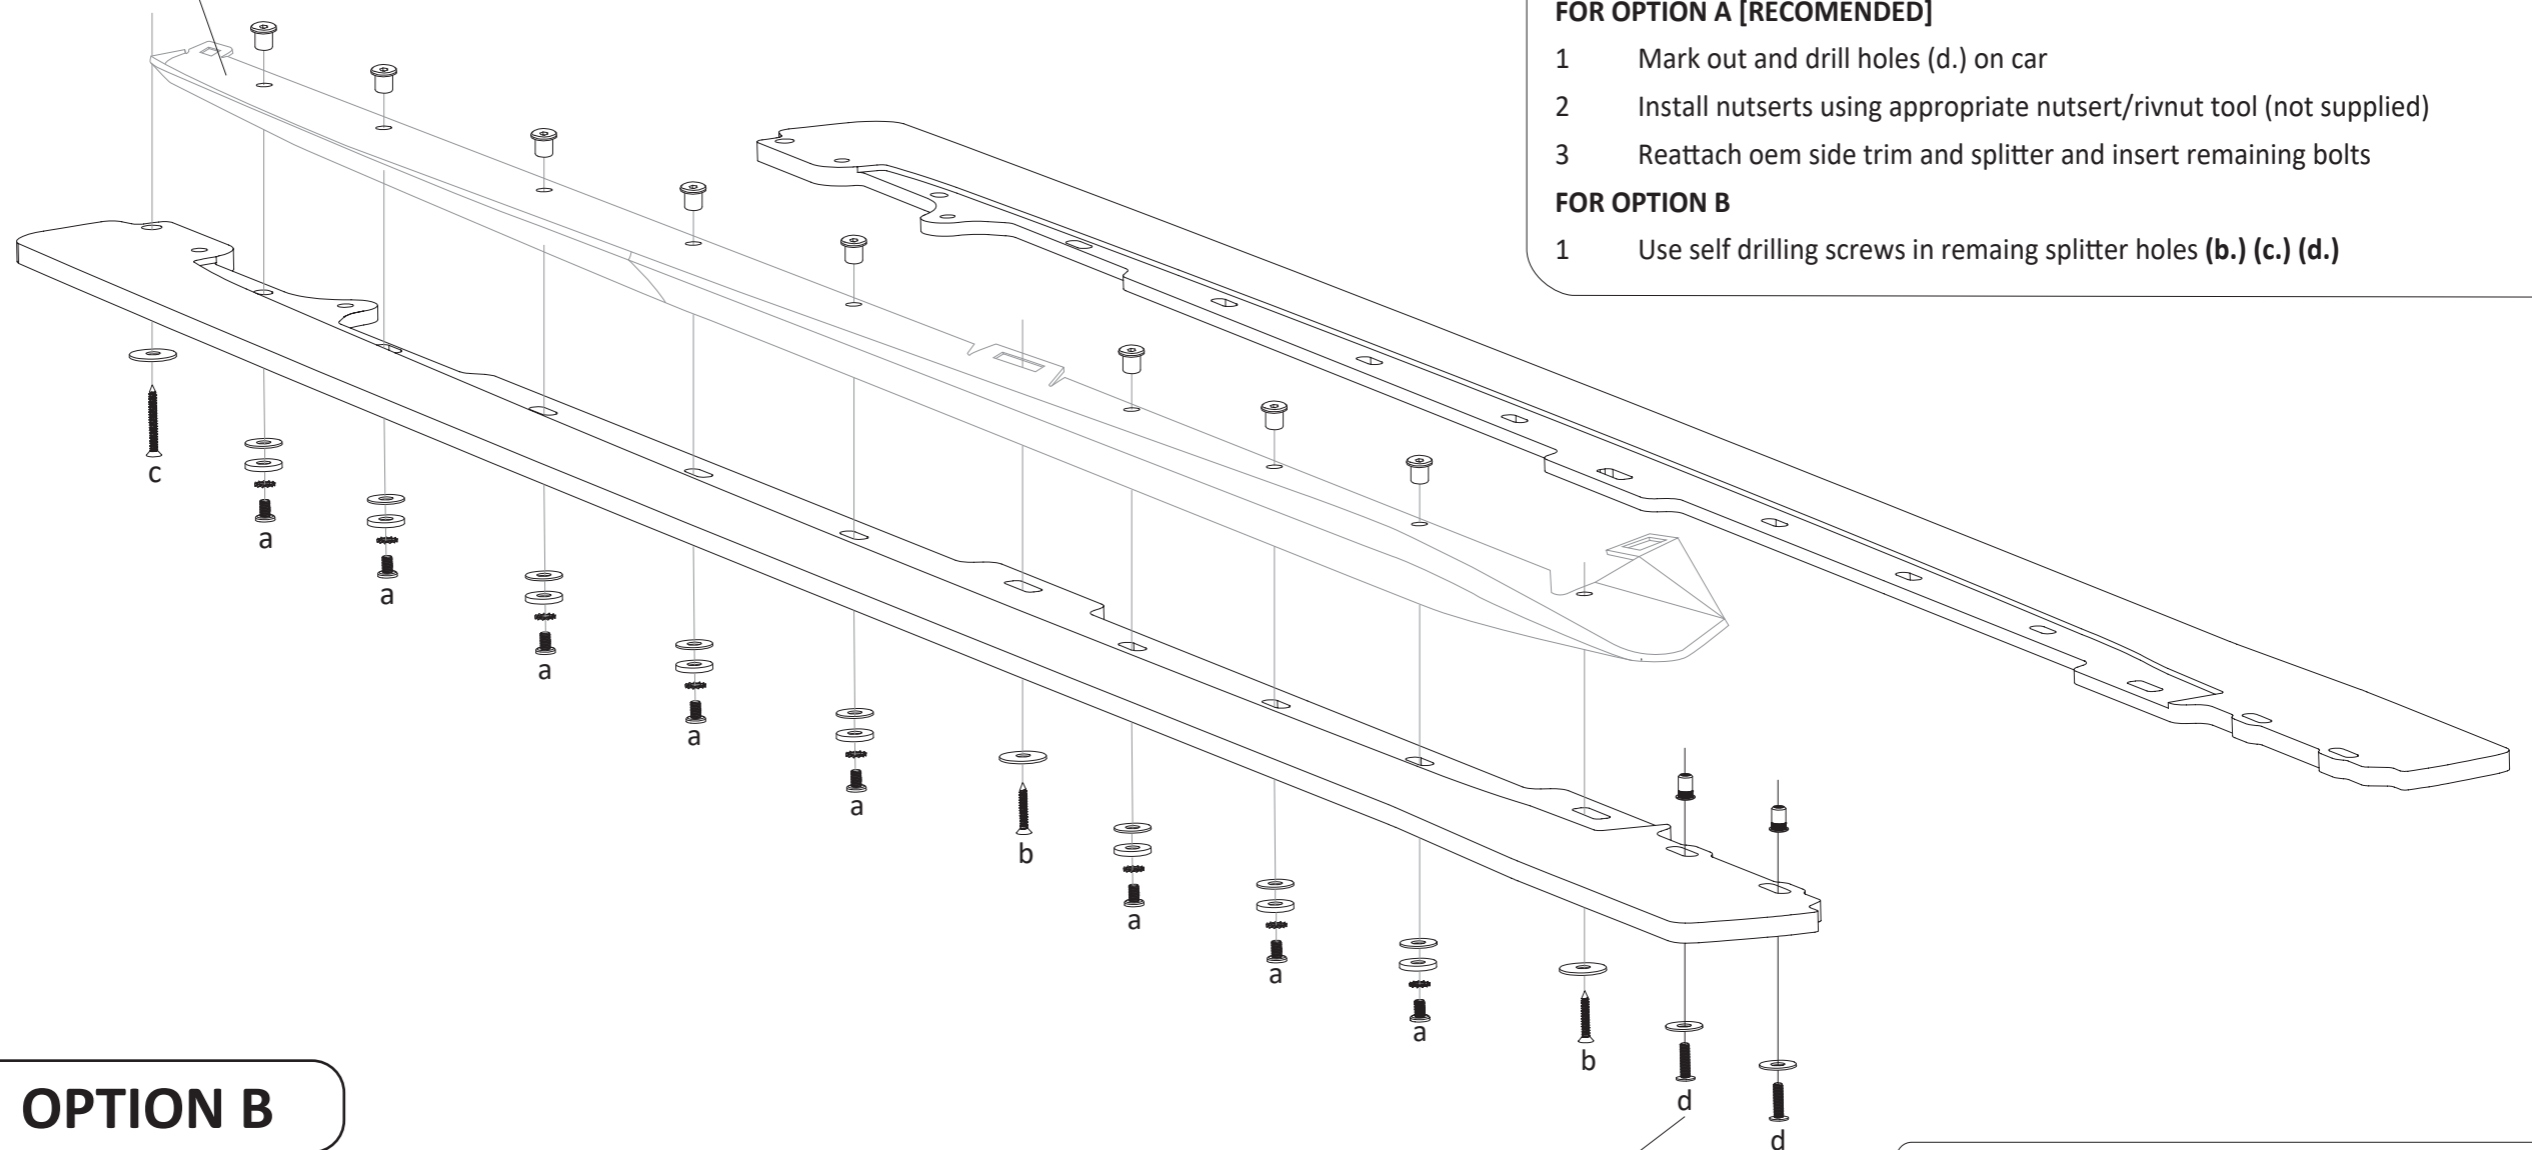

OPTION A

FITTING KIT

a

M6 BOLT
8mm LONG

X 16

od 18
rubber washer
starlock washer

PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO SIDE SKIRT

b

SELF DRILLING SCREWS
25mm LONG

X 4

od 25

PLEASE NOTE:
DRILLING NOT REQUIRED
TO FASTEN TO SIDE SKIRT

c

SELF DRILLING SCREWS
38mm LONG

X 2

od 25

PLEASE NOTE:
DRILLING NOT REQUIRED
TO FASTEN TO SIDE SKIRT

OPTION A

d

M6 BOLT
25mm LONG

X 4

nutsert
od 18

PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO SIDE SKIRT

OPTION B

d

SELF DRILLING SCREWS
35mm LONG

X 4

od 18

PLEASE NOTE:
DRILLING NOT REQUIRED
TO FASTEN TO SIDE SKIRT

FLOW
DESIGNS

FLOW DESIGNS AUSTRALIA
ABN : 99 605 842 199
FACTORY 11
6-7 WICKLE CLOSE
BAYSWATER NORTH
VIC, 3153



TERMS AND CONDITIONS : MISUSE OF GOODS

By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer;

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com