

# FITTING DIAGRAM

## VW MK8 GOLF GTI: FRONT SPLITTER INSTRUCTIONS

### INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)

# BUMPER REMOVAL NOT REQUIRED

### HANDY HINTS

For best alignment, install bolts (d.) first.


### HANDY HINTS

- Support bracket slots into and sits on top of internal bumper bracing above undertray and below the lower crash bar
- When drilling holes for support bracket installation, ensure you drill slowly and **do not** drill through the lower crash bar

Scan QR code to see instructional video



### HANDY HINT

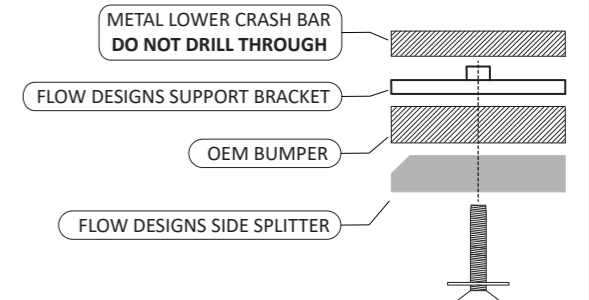

See above diagram for how to position the Flow Designs support bracket, ensuring that you **DO NOT** drill through the lower crash bar

## FITTING KIT

**a** M6 BOLT  
55mm LONG

**X 4**

PLEASE NOTE:  
DRILLING REQUIRED TO FASTEN TO BUMPER  
DO NOT OVERTIGHTEN

**b** M6 BOLT  
25mm LONG

**X 4**

PLEASE NOTE:  
DRILLING REQUIRED TO FASTEN TO BUMPER  
DO NOT OVERTIGHTEN

**c** M6 BOLT  
40mm LONG

**X 2**


PLEASE NOTE:  
DRILLING REQUIRED TO FASTEN TO BUMPER  
DO NOT OVERTIGHTEN

**d** 38mm 8g  
Self Taping Screw

**X 2**

PLEASE NOTE:  
DRILLING NOT REQUIRED TO FASTEN TO BUMPER  
REPLACES OEM SCREW

### STAINLESS STEEL SUPPORT BRACKET

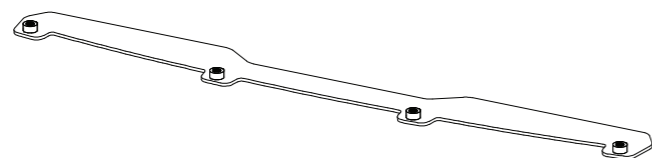

BLACK CHICAGO BOLT PROVIDED WITH ADD ON ACCESSORIES. PLEASE VISIT OUR WEBSITE FOR MORE OPTIONS

### HANDY HINTS

For best alignment, install bolts (d.) first.



**TERMS AND CONDITIONS : MISUSE OF GOODS**  
By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:  
• This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.  
• We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.  
• It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.  
• We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!  
This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.  
[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)