

# FITTING DIAGRAM


VW MK8 GOLF GTI : REAR SPATS + ADJUSTABLE REAR WINGLETS

## INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)

# BUMPER REMOVAL NOT REQUIRED

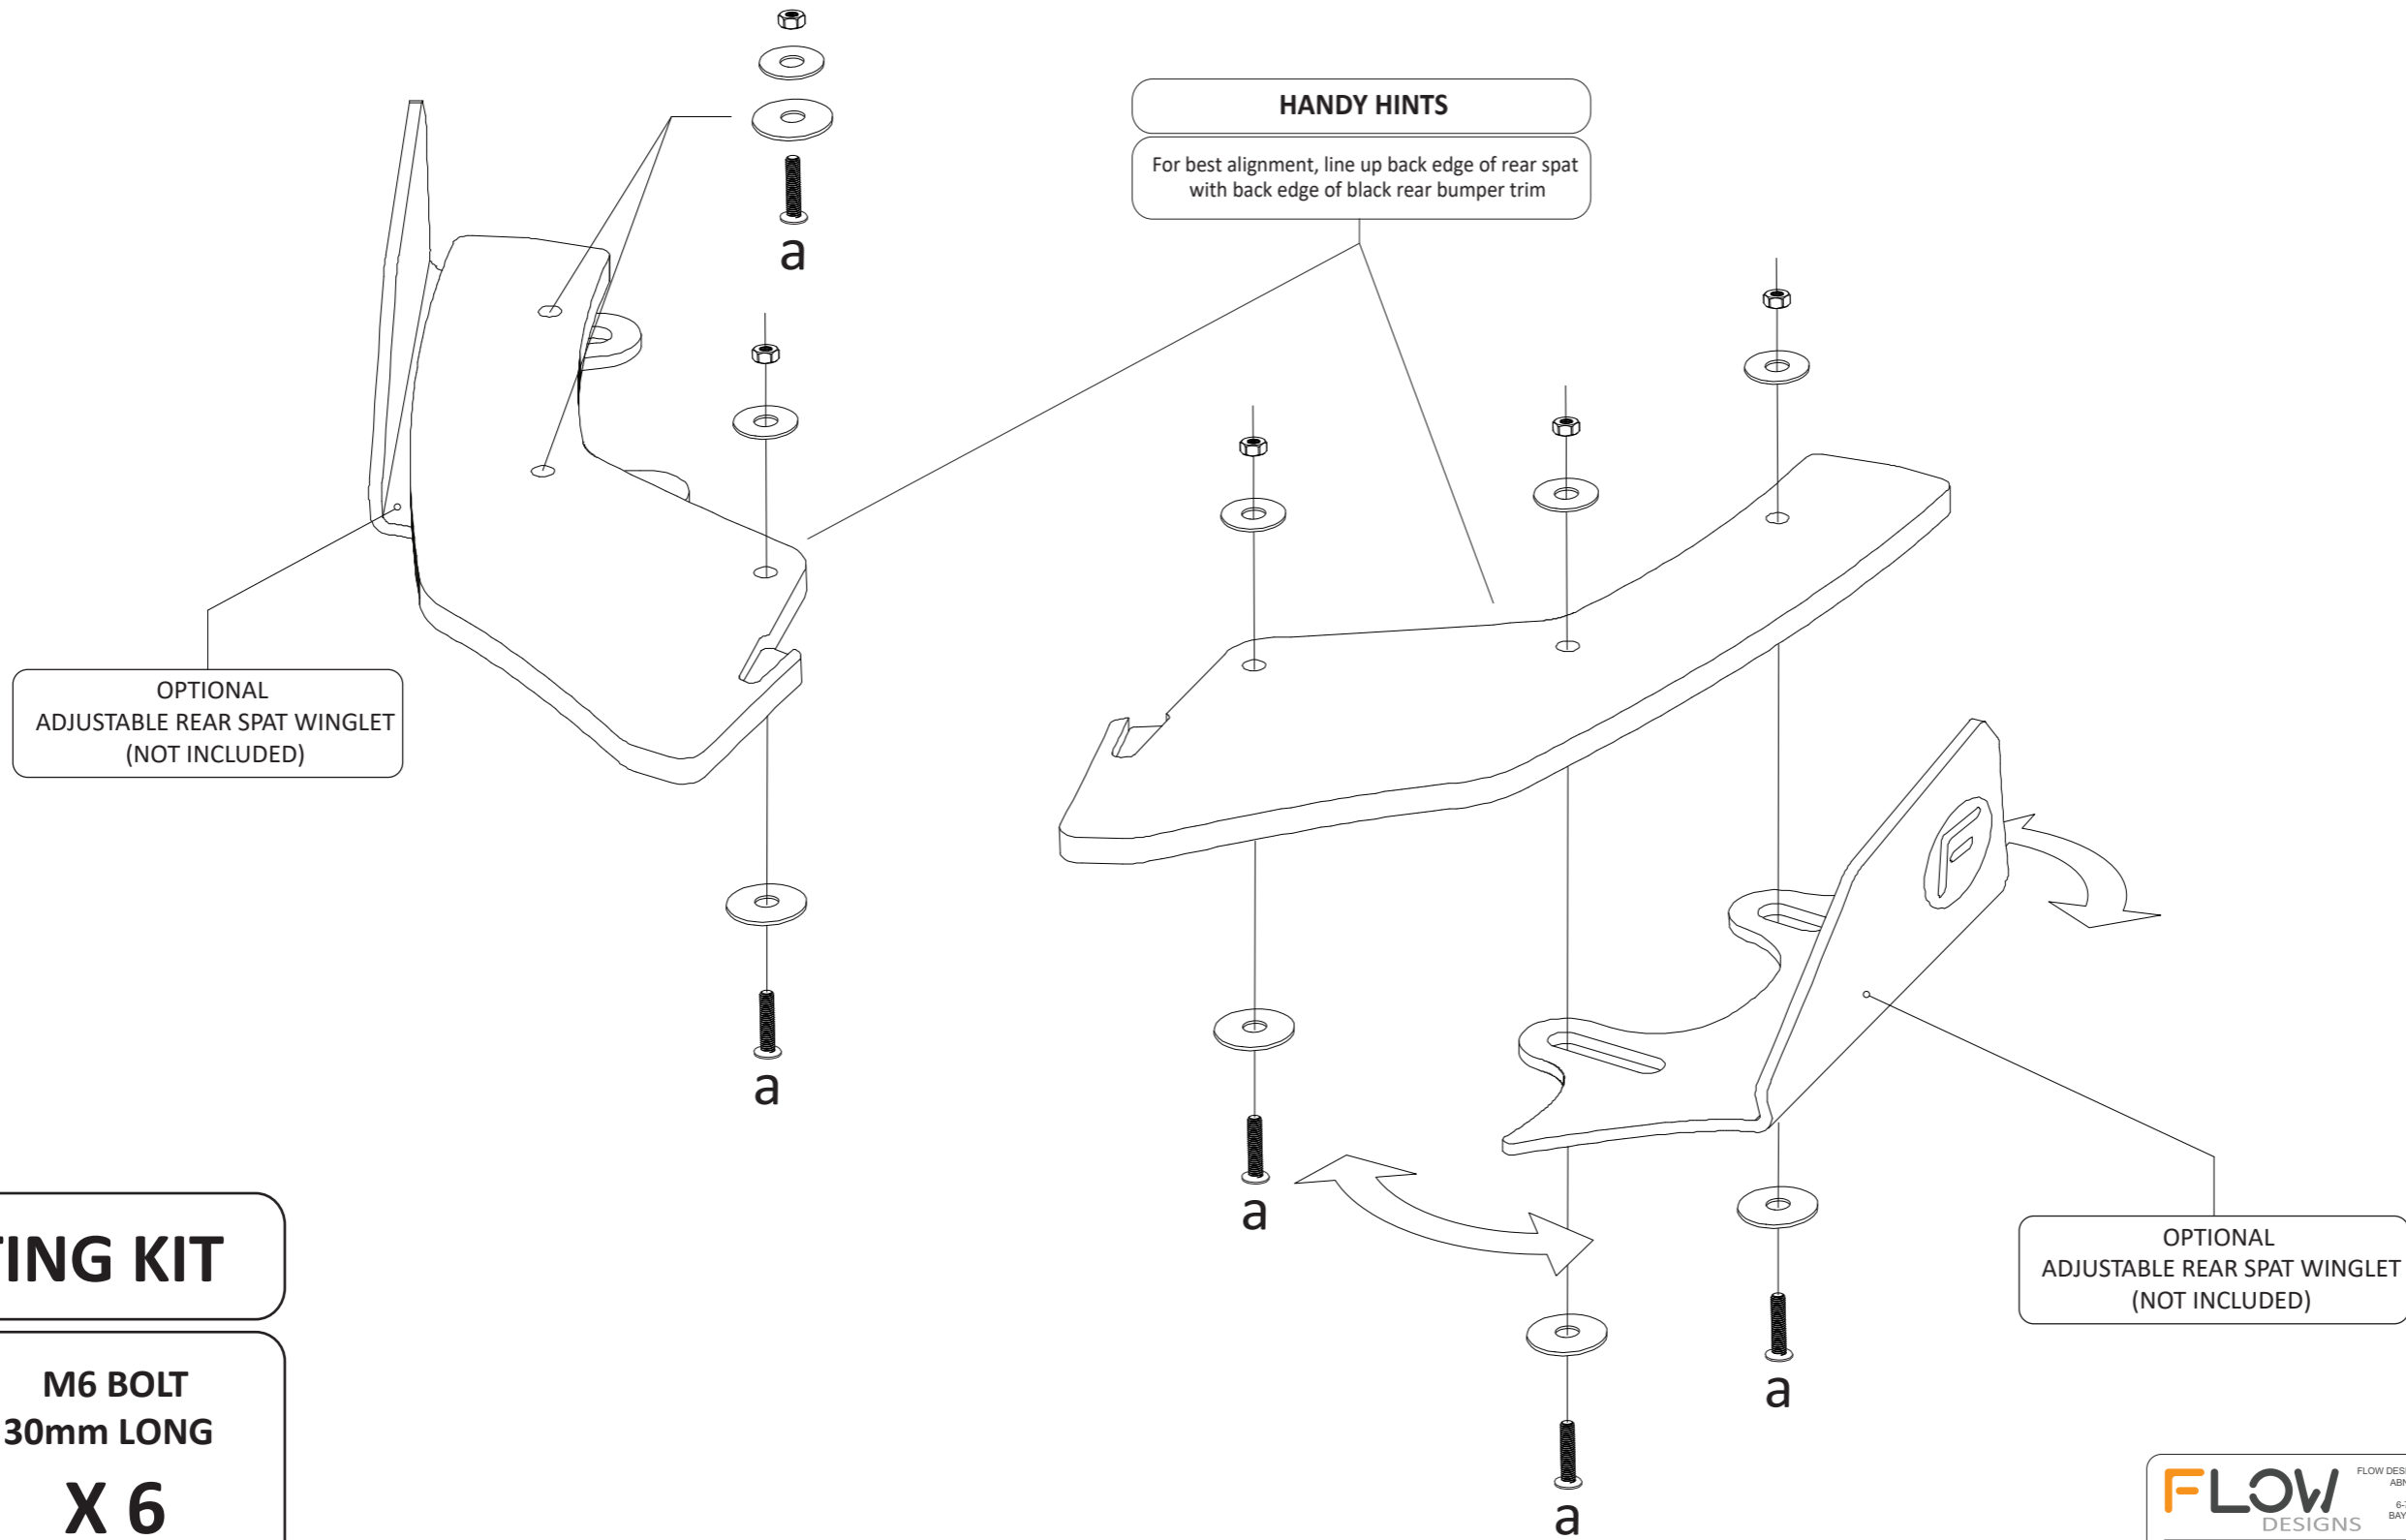

## FITTING KIT

a

M6 BOLT  
30mm LONG

X 6

OD 16

OD 25

PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO BUMPER  
PLEASE USE 8mm DRILL BIT

OPTIONAL  
ADJUSTABLE REAR SPAT WINGLET  
(NOT INCLUDED)

**FLOW** DESIGNS  
FLOW DESIGNS AUSTRALIA  
 ABN : 99 805 842 199  
 FACTORY 11  
 6-7 NICOLE CLOSE  
 BAYSWATER NORTH  
 VIC, 3153

**TERMS AND CONDITIONS : MISUSE OF GOODS**  
 By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:  
 • This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.  
 • We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.  
 • It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.  
 • We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!  
 This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)