

FITTING GUIDE

VW GOLF MK7 GTI/R, MK7.5 GTI/R - REAR SPOILER EXTENSION FITTING OPTION A - STREET

STEP 1

- Choose between texture or gloss side face up
- Using a 6mm drill bit and the Flow Designs Rear Spoiler Extension as a guide, drill out pilot holes in OEM spoiler
- Remove Flow Designs Rear Spoiler Extension
- Enlarge pilot holes using a 10mm step bit

STEP 3

- Apply double sided tape to OEM Rear Spoiler

HANDY HINTS

DOUBLE SIDED TAPE ADHESION PROMOTER

ADHESION PROMOTER DOUBLE SIDED TAPE

Use above diagram as a guide for where to stick double sided tape

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

OEM REAR SPOILER REMOVAL NOT REQUIRED

STEP 2

- Insert Rubber Nuts (a.) into OEM Rear Spoiler

STEP 4

- Using the bolts (b.), install Flow Designs Rear Spoiler Extension to OEM Rear Spoiler

PLEASE NOTE : DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

HANDY HINT

Flow Designs spoiler extension is reversible, choose between gloss and textured side as desired

FITTING KIT OPTION A

a

M5 Rubber Nuts
X 4

PLEASE NOTE:
DRILLING REQUIRED TO FASTEN TO OEM SPOILER
DO NOT OVERTIGHTEN

FITTING KIT OPTION B

b

M5 BOLT 20mm LONG
X 4

PLEASE NOTE:
DRILLING REQUIRED TO FASTEN TO OEM SPOILER
DO NOT OVERTIGHTEN

FITTING KIT OPTION C

c

M5 BOLT 20mm LONG
use bolt & washer from (b.)
X 4

PLEASE NOTE:
DRILLING REQUIRED TO FASTEN TO OEM SPOILER
DO NOT OVERTIGHTEN

3m of DOUBLE SIDED TAPE

ALCOHOL SWAB

3M ADHESION PROMOTER

FLOW DESIGNS

FLOW DESIGNS AUSTRALIA
MARK 100 ROAD 100
FACTORY 11
6-7 NICOLE CLOSE
BAYSWATER NORTH
VIC. 3153

DESIGNED AND MANUFACTURED IN AUSTRALIA

TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road registered vehicles within Australia. Regulations may vary from Countries outside of Australia. Please check your Country's and State's road regulations before installing on a vehicle intended for public road use.

Flow Designs Australia PTY LTD will not be liable for any liabilities in relation to any use of the goods other than in strict accordance with the Company's instructions and for the purpose and application for which the goods were supplied by the Company.

The Client undertakes with the Company:

- That it will acquaint itself with the requirements of all relevant government or statutory and other authorities, bodies or corporations relating to the goods and/or services and to the applications to which the goods and/or services are to be put;
- That at all times while the goods are in its possession or under its control it will comply with such requirements;
- That it will procure that any purchaser of goods from it will also acquaint itself with, and will comply with, such requirements;
- That it will indemnify the Company against any liability resulting from a breach of any such requirements.

www.flowdesignsaustralia.com

FITTING GUIDE


VW GOLF MK7 GTI/R, MK7.5 GTI/R - REAR SPOILER EXTENSION FITTING OPTION B - TRACK

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.


www.flowdesignsaustralia.com

OEM REAR SPOILER REMOVAL REQUIRED

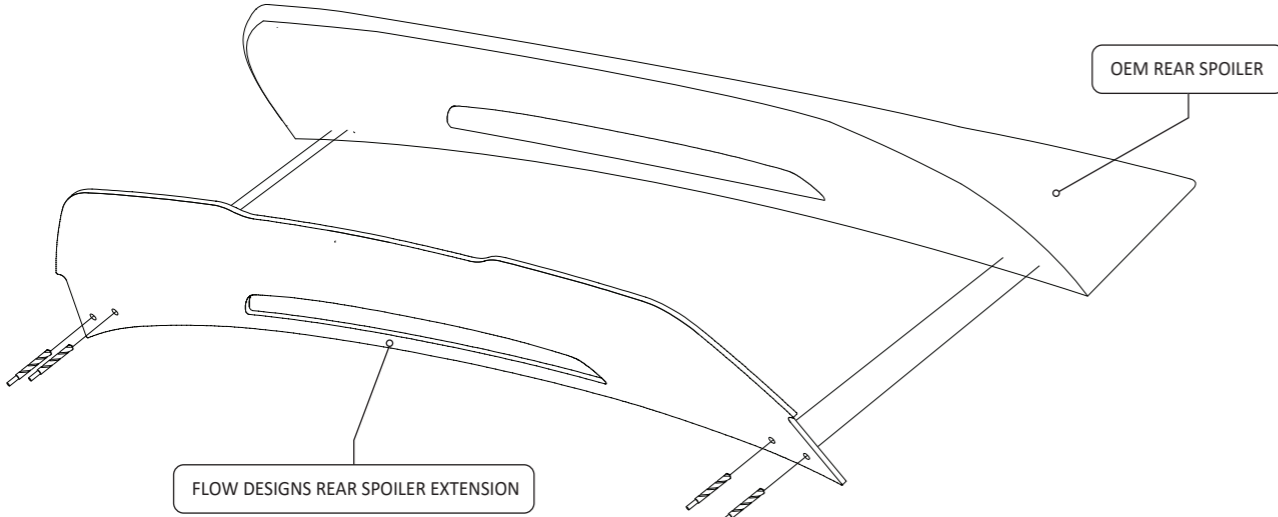

STEP 1

- Remove OEM Rear Spoiler from car
- Using a 6mm drill bit and the Flow Designs Rear Spoiler Extension as a guide, drill out holes in OEM spoiler
- Remove Flow Designs Rear Spoiler Extension

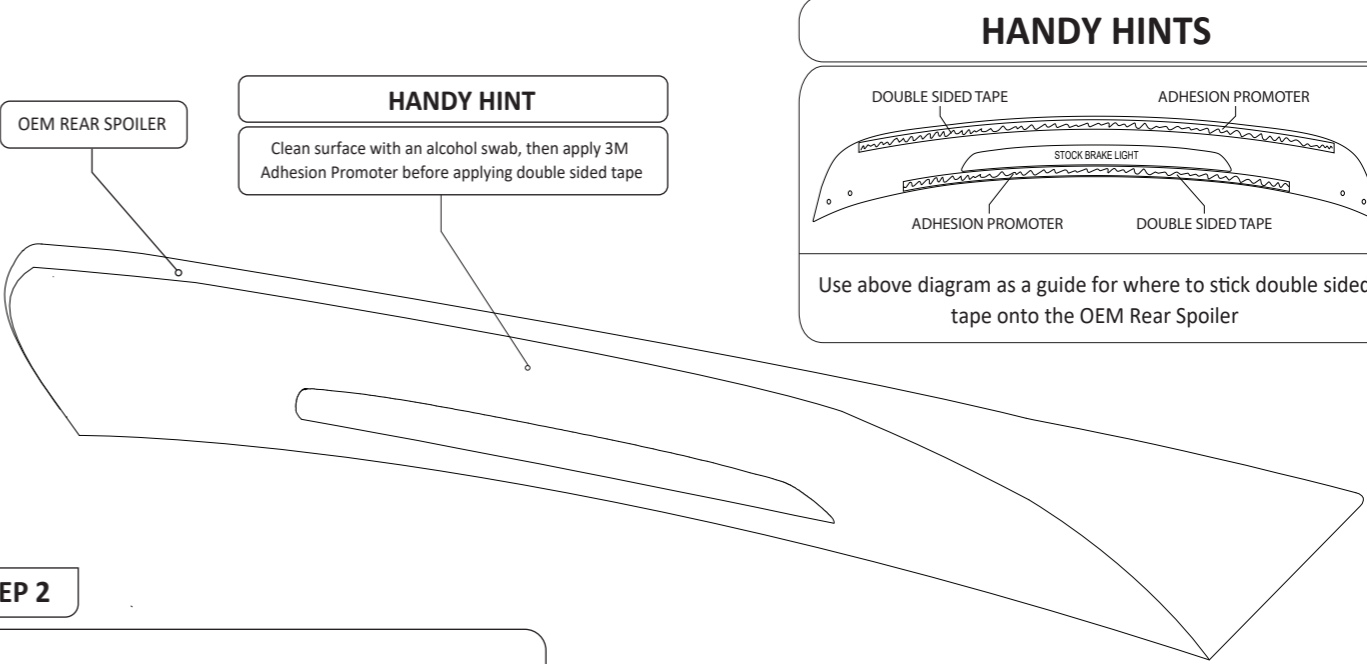


STEP 2

- Apply double sided tape to OEM Rear Spoiler


HANDY HINT
Clean surface with an alcohol swab, then apply 3M Adhesion Promoter before applying double sided tape

HANDY HINTS

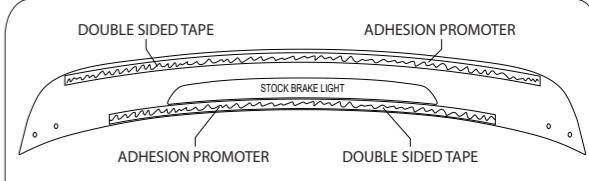

DOUBLE SIDED TAPE ADHESION PROMOTER
STOCK BRAKE LIGHT
ADHESION PROMOTER DOUBLE SIDED TAPE

Use above diagram as a guide for where to stick double sided tape onto the OEM Rear Spoiler

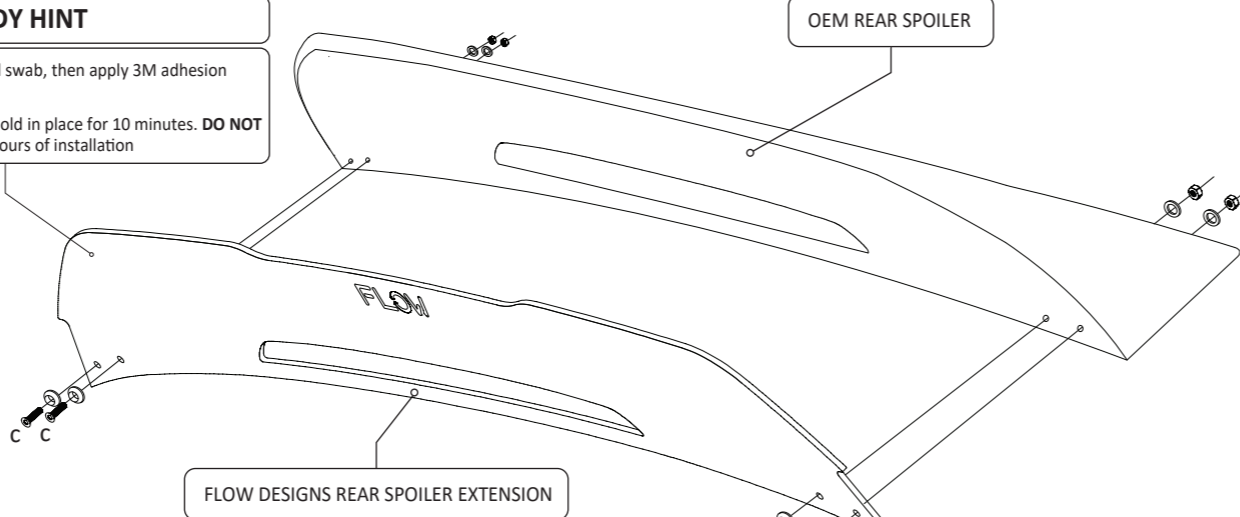

STEP 3


Using bolts (a.), install Flow Designs Rear Spoiler Extension to OEM Rear Spoiler

PLEASE NOTE : DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

HANDY HINT
Clean surface with an alcohol swab, then apply 3M adhesion promoter
Once stuck to OEM Spoiler, hold in place for 10 minutes. **DO NOT** wash or drive car within 12 hours of installation

HANDY HINTS

APPLY ADHESION PROMOTER WITHIN DASHED LINES

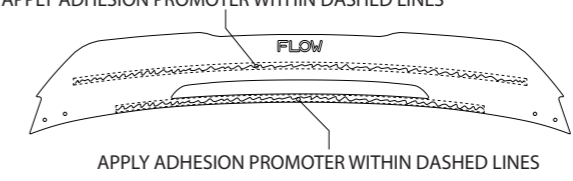

FLOW
APPLY ADHESION PROMOTER WITHIN DASHED LINES

Use above diagram as a guide for where to apply the 3M adhesion promoter to the Flow Designs Rear Spoiler Extension

HANDY HINT
Flow Designs spoiler extension is reversible, choose between gloss and textured side as desired