



FITTING GUIDE

VW MK3 SCIROCCO FL: REAR SPOILER EXTENSION

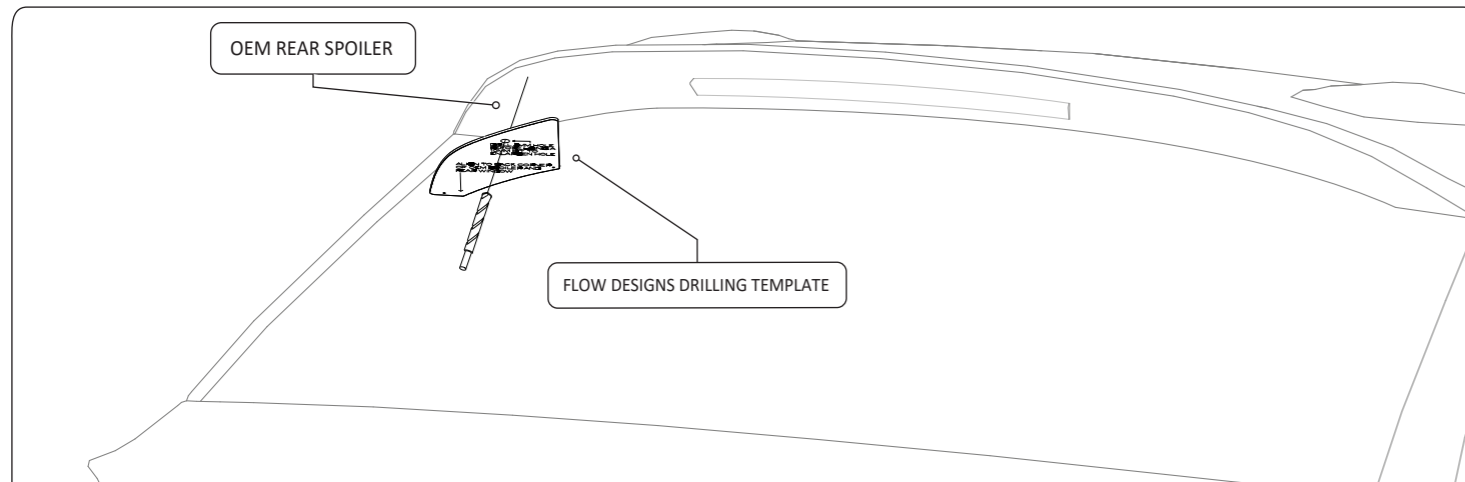

STEP 1

- Align drilling template with the OEM rear spoiler
- Using a 10mm drill bit, drill hole using the drilling template as a guide
- To drill hole on opposite side, flip template and repeat process

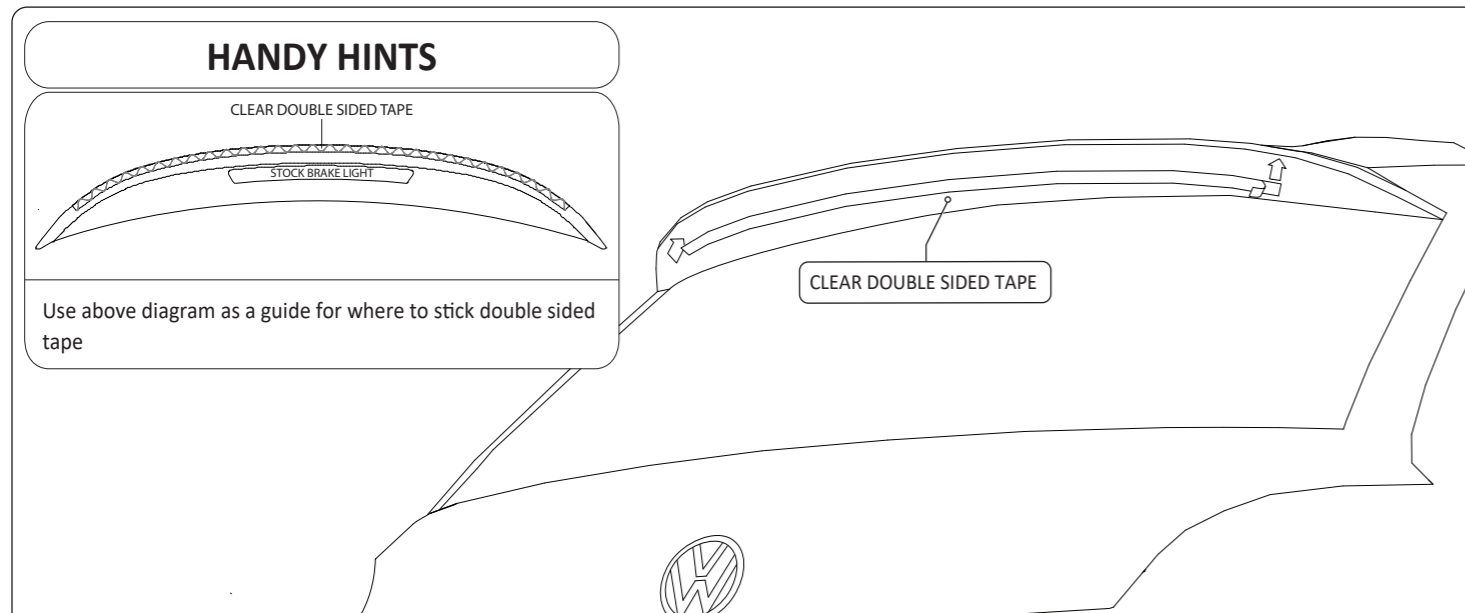

HANDY HINTS

CLEAR DOUBLE SIDED TAPE




STOCK BRAKE LIGHT

Use above diagram as a guide for where to stick double sided tape

STEP 3

- Clean surface with alcohol swab
- Apply adhesion promoter to OEM rear spoiler
- Apply clear double sided tape above the stock brake light to OEM Rear Spoiler (use reference above for guide)

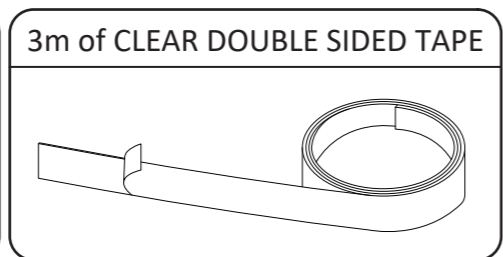FITTING KIT


<p>a</p> <p>M5 Rubber Nuts</p> <p>X 2</p> <p>PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO OEM SPOILER DO NOT OVERTIGHTEN</p>	<p>b</p> <p>M5 BOLT 20mm LONG</p> <p>X 2</p> <p>PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO OEM SPOILER DO NOT OVERTIGHTEN</p>	<p>3m of CLEAR DOUBLE SIDED TAPE</p> 	<p>ALCOHOL SWAB</p> 	<p>3M ADHESION PROMOTER</p> 
--	---	---	---	---

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.


www.flowdesignsaustralia.com

OEM REAR SPOILER REMOVAL NOT REQUIRED

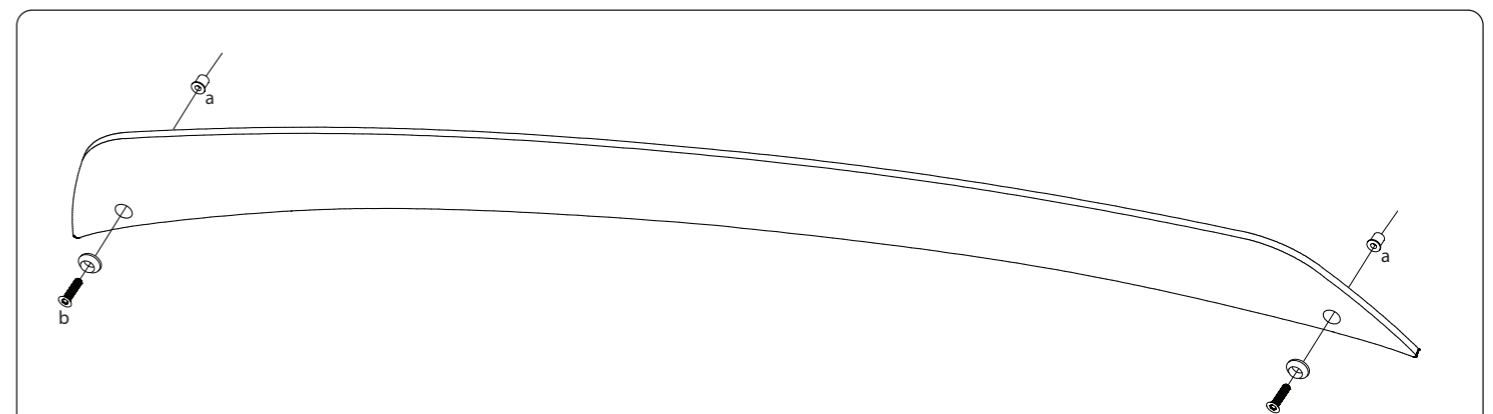

STEP 2

- Choose between texture or gloss side face up. Gloss side has no engraved logo, optional Flow Designs Sticker provided
- Lightly** thread rubber nuts (a.) onto spoiler extension using bolts (b.)

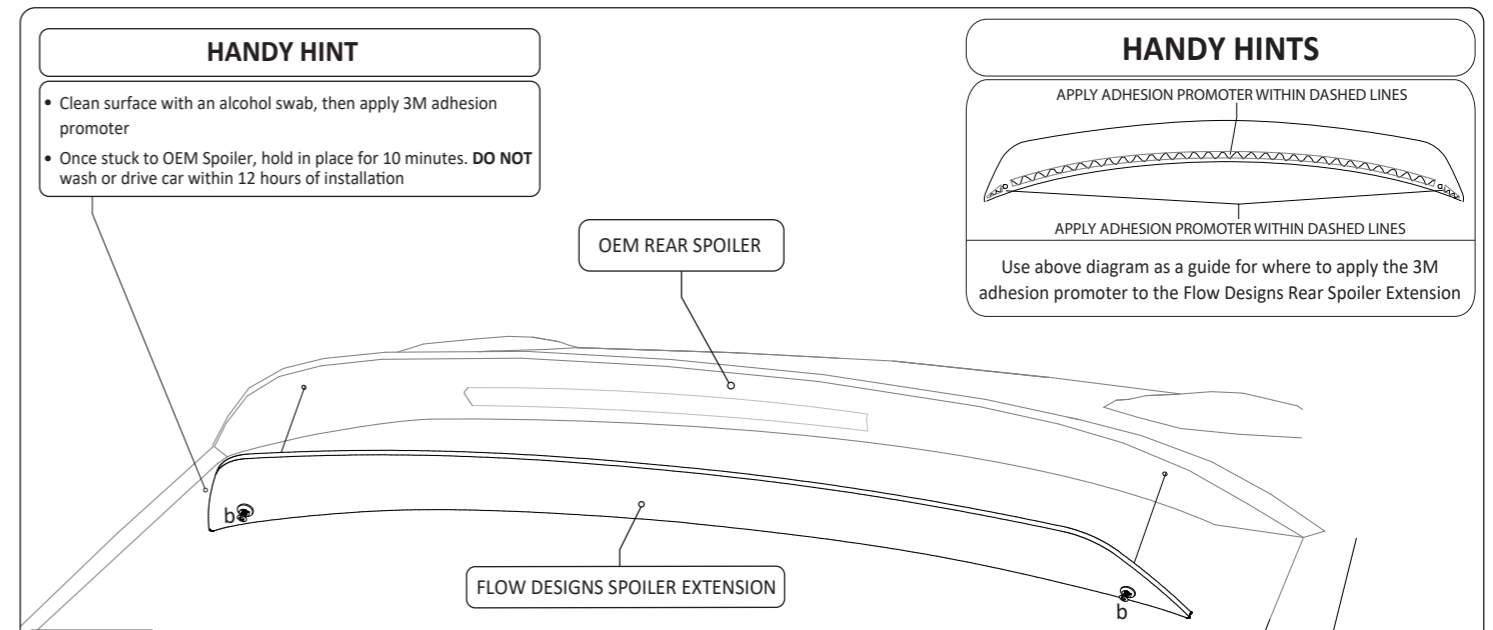

HANDY HINT

- Clean surface with an alcohol swab, then apply 3M adhesion promoter
- Once stuck to OEM Spoiler, hold in place for 10 minutes. **DO NOT** wash or drive car within 12 hours of installation

HANDY HINTS

APPLY ADHESION PROMOTER WITHIN DASHED LINES

Use above diagram as a guide for where to apply the 3M adhesion promoter to the Flow Designs Rear Spoiler Extension

STEP 4

- Apply 3M adhesion promoter onto rear spoiler extension
- Align pre threaded rubber nuts on the spoiler extension with pre drilled holes in OEM rear spoiler and install spoiler extension onto OEM rear spoiler
- Hold spoiler extension in place and tighten bolts (b.)

PLEASE NOTE : DO NOT OVERTIGHTEN - These bolts do not need to be very tight.



FLOW DESIGNS

FLOW DESIGNS AUSTRALIA
ABN: 59 605 842 199
10 LONGSTAFF RD
BAYSWATER
VIC. 3153

DESIGNED AND MANUFACTURED IN AUSTRALIA

TERMS AND CONDITIONS : MISUSE OF GOODS

By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com