


FITTING INSTRUCTIONS

VW MK5 GOLF R32 SIDE EXTENSIONS

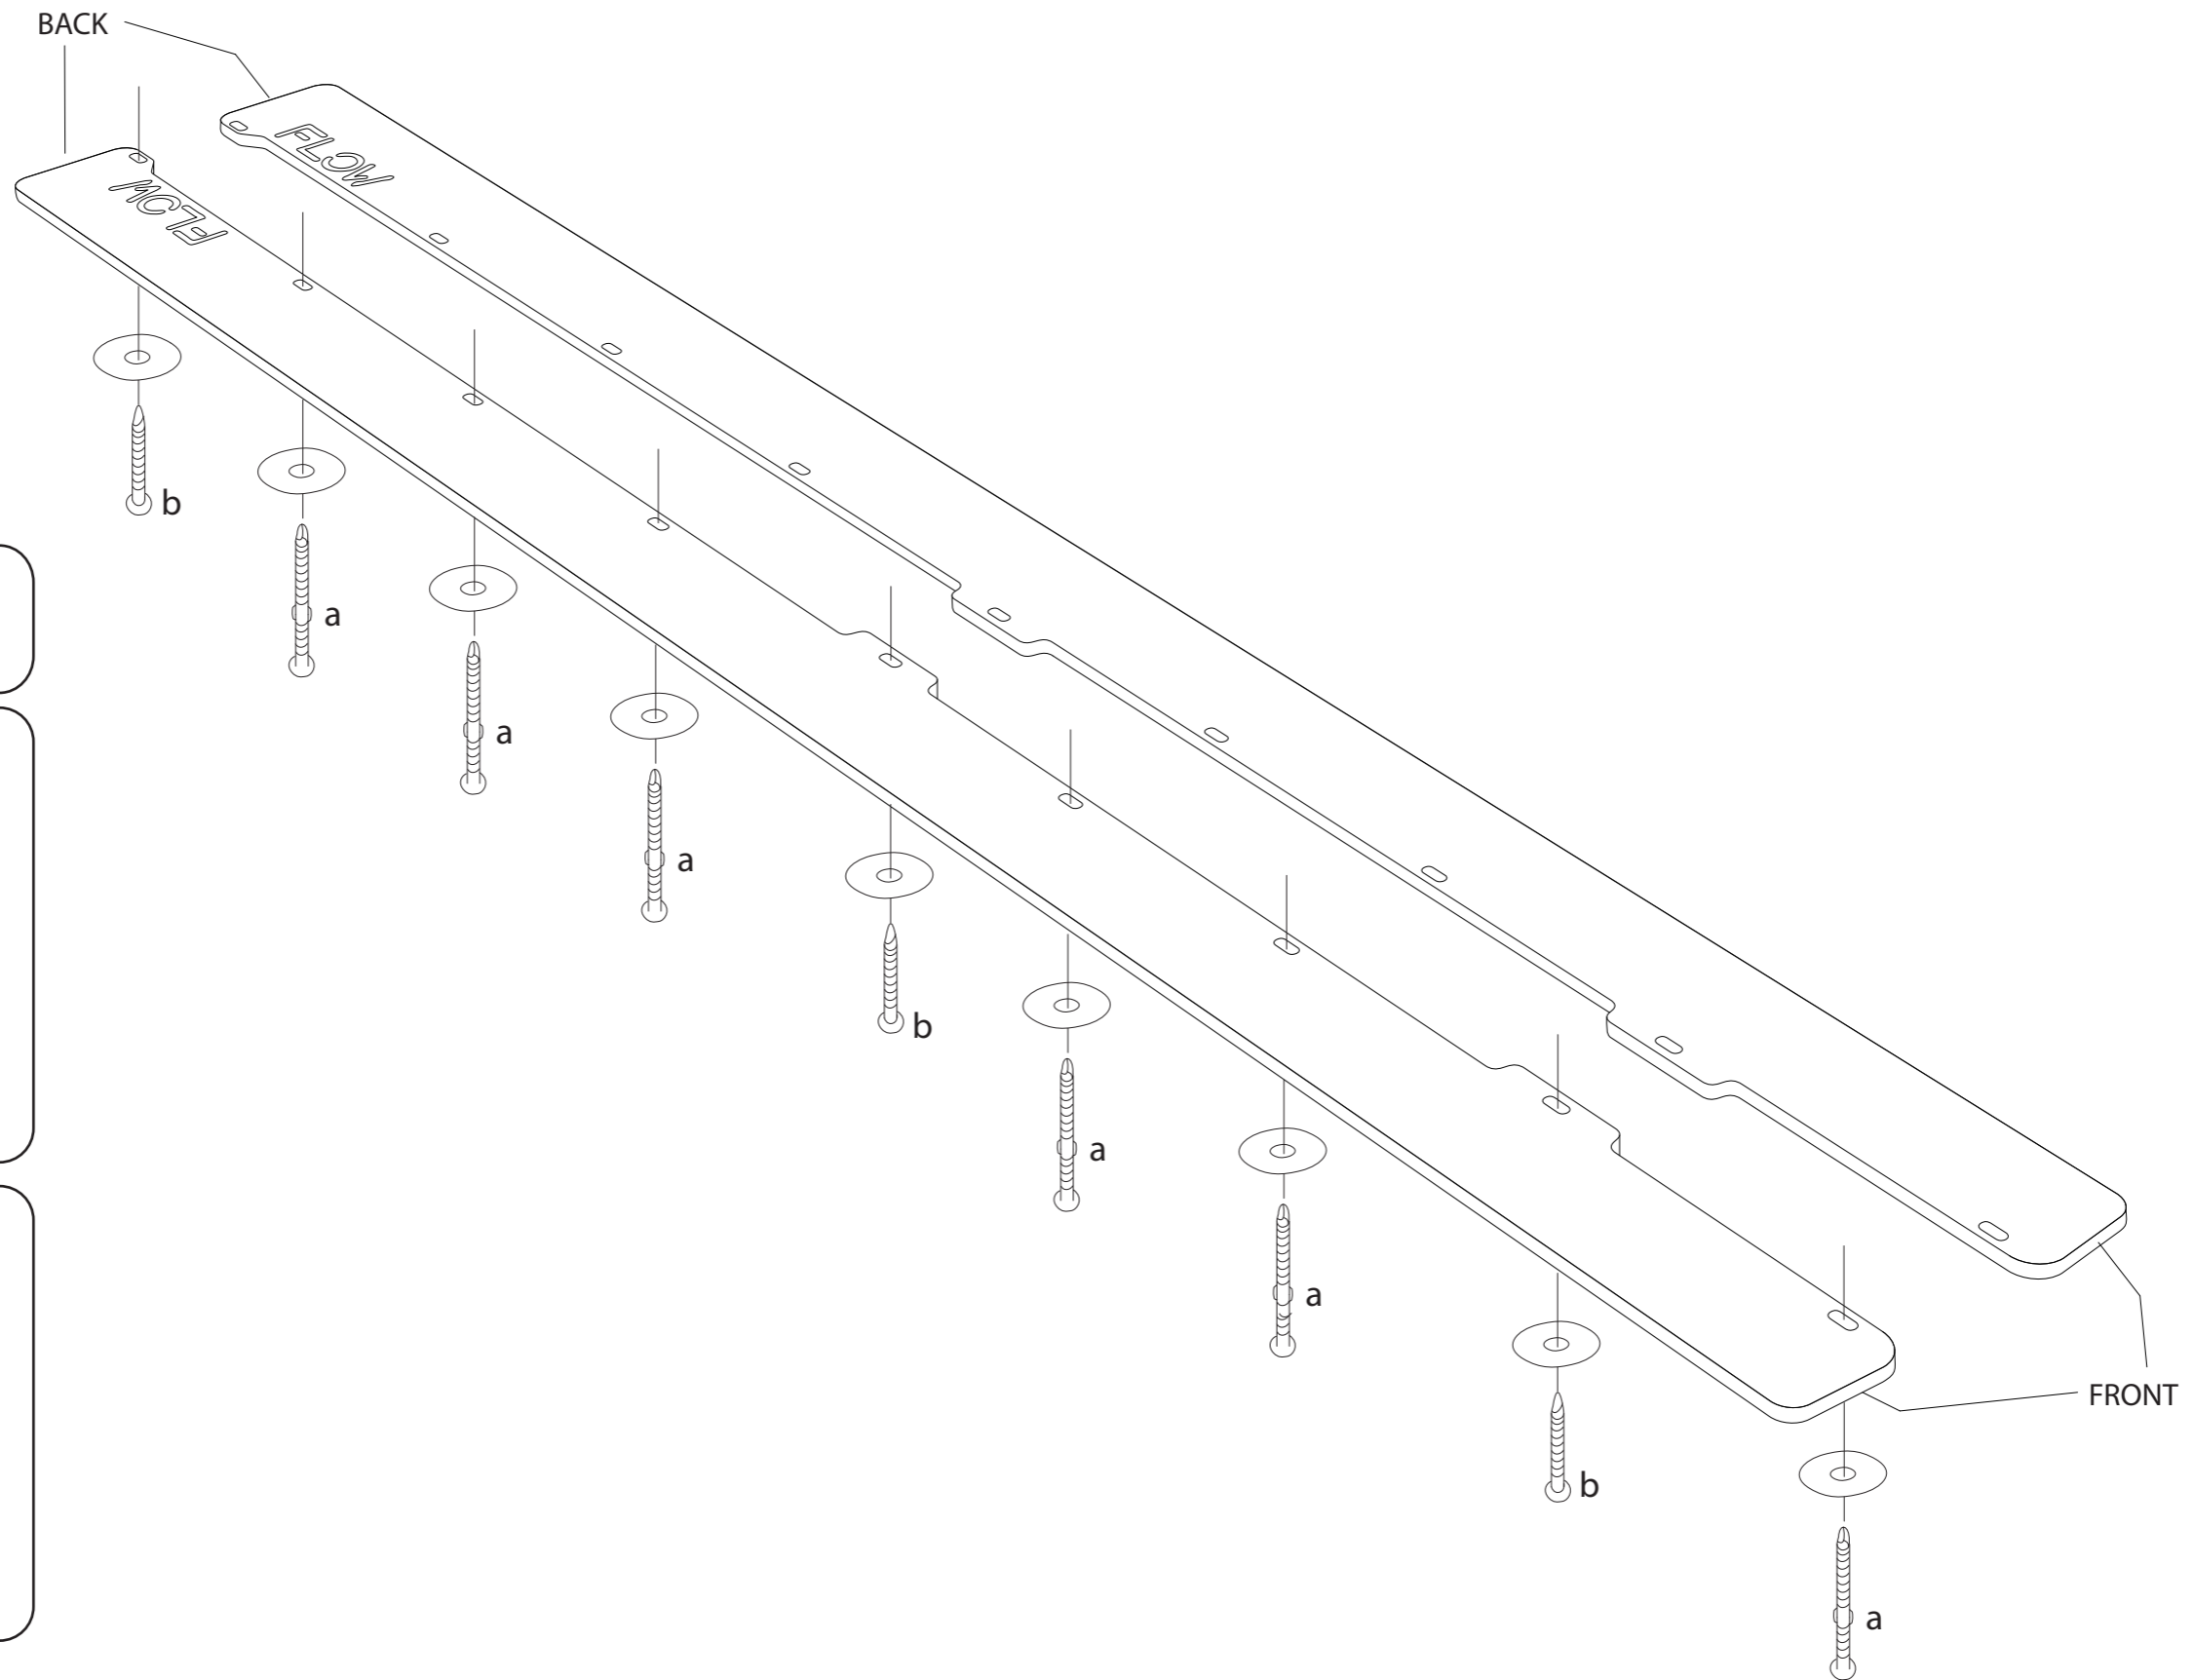

FITTING KIT

a

10g SELF DRILLING
BOLT
50MM LONG
X12

PLEASE NOTE:
PRE-DRILLING NOT
REQUIRED

b

10g SELF TAPPING
SCREW
25MM LONG
X6

PLEASE NOTE:
PRE DRILLING NOT
REQUIRED