



# FITTING INSTRUCTIONS

## VW GOLF MK6 R: REAR SPATS

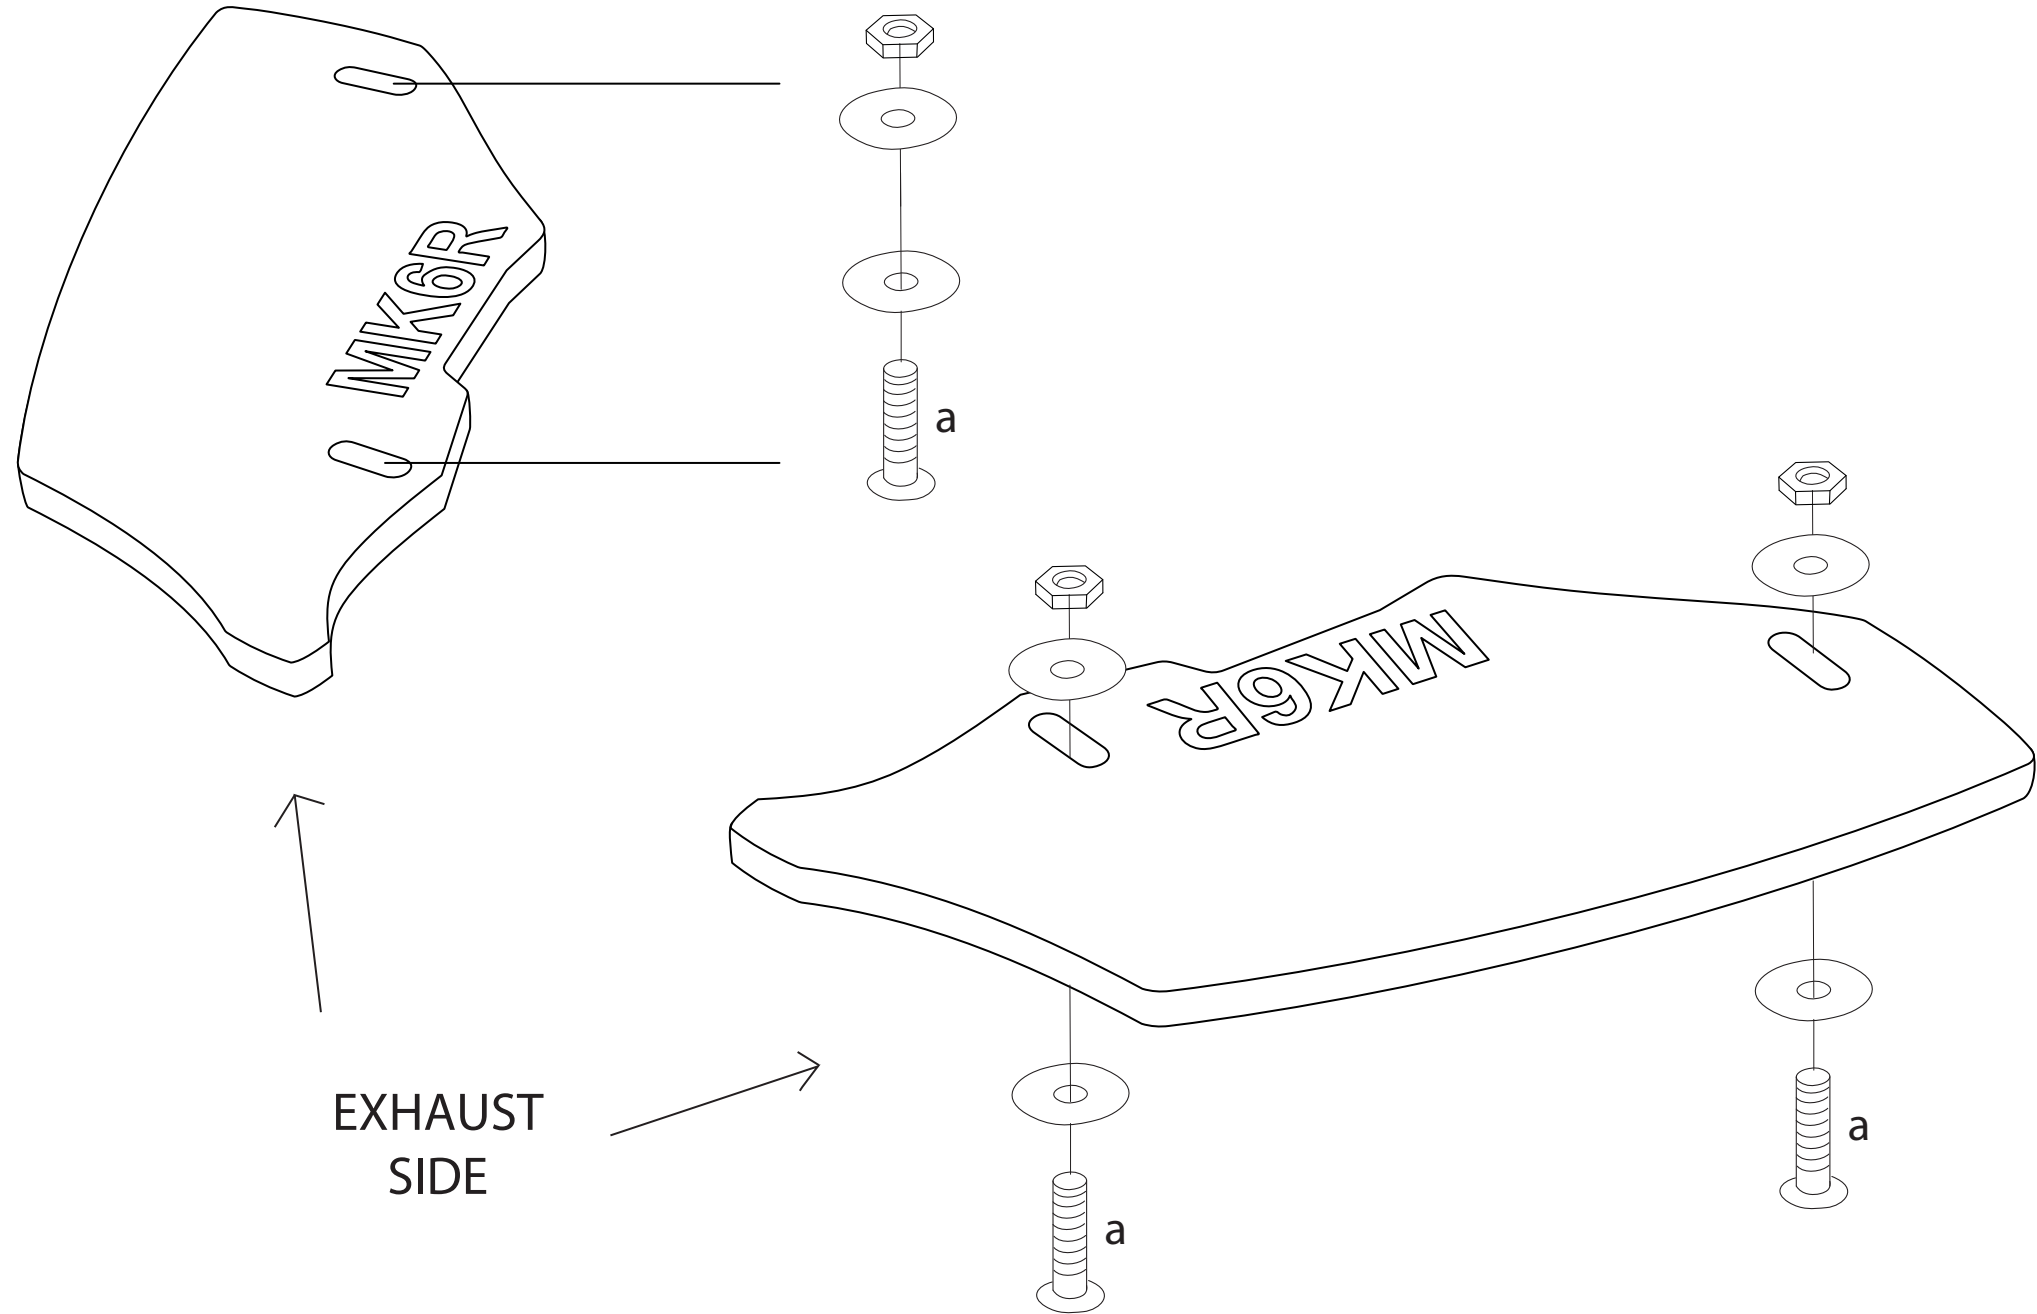

### FITTING KIT

**a**



**M6 BOLT  
30mm LONG**

**X 4**

PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO BUMPER