FITTING DIAGRAM

VW MK7.5 GOLF GTI / R FRONT SPLITTER BOLT ONS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED


CONFIGURATION 1

FRONT EXTENSIONS ONLY

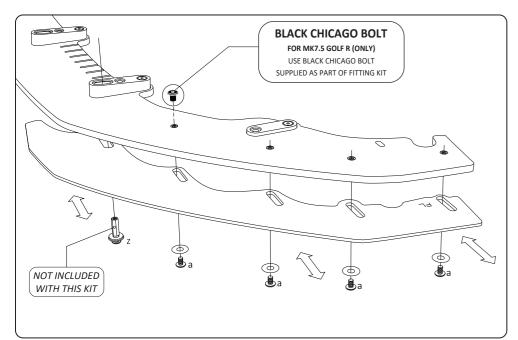


CONFIGURATION 2

FRONT WINGLETTS ONLY

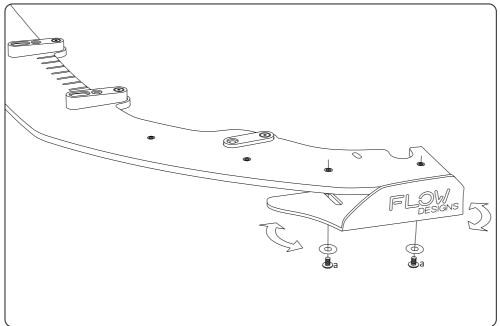

CONFIGURATION 3

FRONT EXTENSIONS AND WINGLETTS

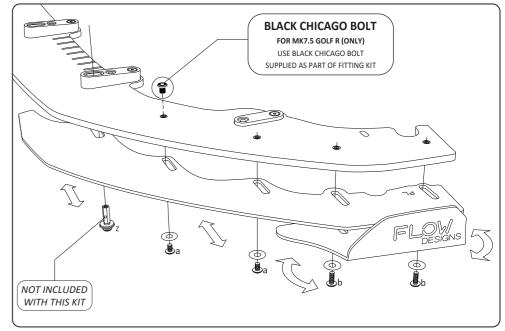

- Insert bolts loosely into alocated brass thread locations.
- Slide extensions in and out to your liking.
- Use a 4mm Alan Key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot winglets to your liking.
- · Use a 4mm Alan Key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot extensions and winglets to your liking.
- Use a 4mm Alan Key to hand tighten.

PLEASE NOTE: DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.

FITTING KIT

a

M6 BOLT 12mm LONG

X 8



PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN

b

M6 BOLT 20mm LONG



X4 PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO SPLITTER

DO NOT OVERTIGHTEN

M6 COUPLING NUT SUPPLIED WITH FRONT SPLITTER FITTING KIT

THIS FASTENER IS SUPPLIED PART OF MK7.5 GOLF GTI / R FRONT SPLITTER

(NOT INCLUDED WITH THIS KIT)

X2

PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO SPLITTER

DO NOT OVERTIGHTEN

BLACK CHICAGO BOLT SUPPLIED WITH EXTENSIONS



BLACK CHICAGO BOLT



PLEASE NOTE:

ORILLING NOT REQUIRED TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN









TERMS AND CONDITIONS: MISUSE OF GOODS

This Product application is not intended for public road reging Regulatons may vary from Countries outide of Australia. Please check your Country's and State's road regulatons be