

# 3-INCH ROUND COMPARTMENT LIGHT


## WIRING:

- To +VDC (fuse rating @ 1A)..... **RED**  
To -Chassis Ground..... **BLACK**


## INSTALLATION:

(Included mounting kit will be based on the actual model ordered.)

### Bolt Mount

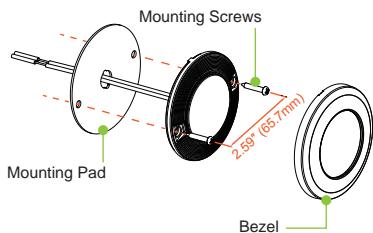

### Adhesive Mount

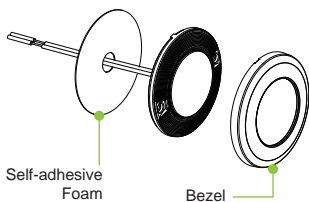

### Rubber Boot Mount

1. Create a  $\varnothing 3.3$ -inch (84mm) cut-out on the selected mounting surface.
2. Insert the Rubber Boot onto the mounting surface.
3. Run the wiring through the Rubber Boot and make all necessary connections.
4. Insert the compartment light and fix into the Rubber Boot.

**Note:** Maximum sheet metal thickness @ 0.25" (6.35mm)

