

CLRCASE[®]

INSTALLATION GUIDE

Installation Option 1

Screw & Anchor Installation (Recommended)

The recommended installation option. For use on drywall & wood surfaces. For concrete & brick use concrete anchors (drill required).

Tools (Required): Phillips Head Screwdriver, Pencil, Thumbtack.

Helpful Tools (optional): Level, Hammer, Removable Tape, Drill w 3/8" bit.

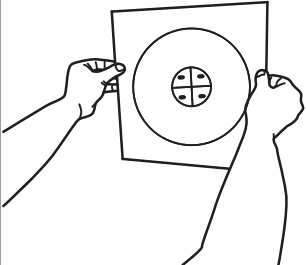
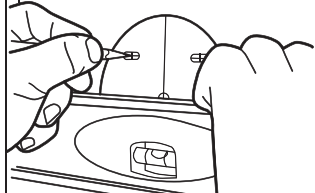
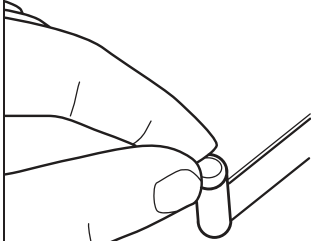
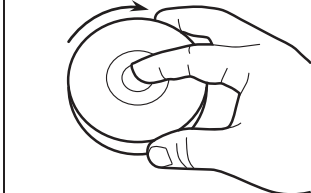
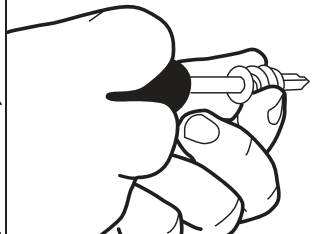
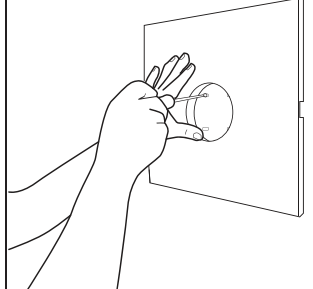
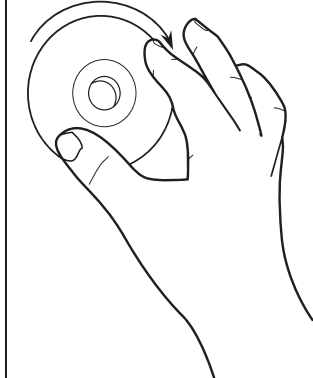
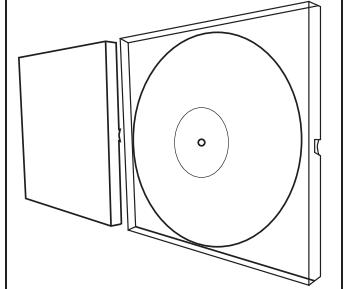
Installation Option 2

Screw-Free Installation (Not Recommended)

DISCLAIMER: Foam pads may come lose depending on temperature and mounting surface. Use at your own risk.

Tools (Required): Pencil, Isopropol alcohol & cotton ball/cloth

Helpful Tools (optional): Level, Hammer, Removable Tape

<p>Step 1 Choose a place</p> <p>Carefully choose a place on your wall for CLRCASE.</p> <p>Flat surfaces work best. Results may vary on uneven surfaces.</p> <p>Leave at least 2" between each case when installing multiple cases.</p> <p>TIP: For best results choose a place out of direct sunlight & extreme temperatures.</p> 	<p>Step 2 Lightly mark the wall</p> <p>Hold the installation template to the wall in the desired place.</p> <p>Mark the holes in template by piercing through the sheet with a sharp pencil or sharp pointed object.</p> <p>or</p> <p>Hold CLRCASE directly to the wall and outline the mounting point openings on the mounting panel.</p> <p>TIP: Use a level to ensure it is perfectly level.</p> 	<p>Step 3 Prep CLRCASE</p> <p>Place silicon feet on the backside of CLRCASE (for vibration dampening & mounting on un-even surfaces).</p>  <p>Make sure circular cover turns in securely. If loose, tighten screws on the back of cover.</p> 	<p>Step 4 Install wall anchors</p> <p>Identify the markings on the wall. Gently tap anchor in using a hammer till anchor can be screwed in.</p> <p>Screw the anchor in using a screw driver until the head of the anchor is near flush with the wall.</p> <p>TIP: For concrete, brick, and hard surfaces, pre-drill anchor hole with 3/8" drill bit and use concrete anchors.</p> 	<p>Step 5 Install display panel</p> <p>Drive the screws into the wall anchors. Repeat for all four screws.</p> <p>Tighten until CLRCASE is secured to the wall.</p> <p>Do not over tighten screws.</p> <p>TIP: For best results use a level tool to make sure CLRCASE is level, and the display panel is perfectly upright (not leaning forward or backward).</p> 	<p>Step 6 Close circular cover</p> <p>Align the screws on the back of the circular mounting panel cover to the openings on the mounting panel. Slide the circular cover in and turn clockwise until the the cover is snug.</p> <p>If the cover is loose, tighten screws on the backside of the circular cover.</p> 	<p>Step 7 You're all set. Enjoy!</p> <p>You're ready to enjoy your CLRCASE. Decide if you'll display a cover or record and position the spindle adaptor accordingly. Place the record in CLRCASE, put on the cover and enjoy!</p> 
---	---	--	--	---	---	--

FOAM TAPE INSTALLATION

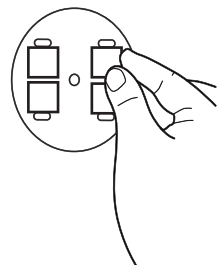
Step 4
Install foam pads

Disclaimer: Results of screw-free installation may vary. **Use at your own risk.**

Carefully clean the backside of the display panel with isopropol alcohol.

Peel the backing off foam pad and carefully place on the backside of the display panel in between the screw openings. Use template for reference.

Repeat for all four pads.



Step 5
Install display panel

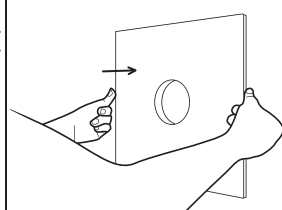
Clean the area where CLRCASE will be installed with isopropol alcohol. Remove the paper backing from the foam pads.

Align the CLRCASE with the clean area.

Press and hold against the wall firmly for 30-45 seconds.

TIP: Keep CLRCASE out of heat in excess of 100 F and out of cold below 60 F.

Foam pads will not hold well in extreme temperatures.



NEED HELP? WE'RE HERE

VIDEO GUIDE

ARTOFRECORDS.COM/GUIDES

EMAIL US

INFO@ARTOFRECORDS.COM

MADE IN CALIFORNIA, ASSEMBLED IN CALIFORNIA.
INSTALLATION ACCESSORIES MADE IN CHINA & USA

YOUR BEST VINYL JUST GOT BETTER.
SHARE YOUR COLLECTION #CLRCASE #VINYL



1 YEAR LIMITED WARRANTY

WARRANTY INFO

ARTOFRECORDS.COM/WARRANTY

ENJOYING CLRCASE

1 Display a record or record jacket

To display a record position the spindle adaptor facing toward you.
To display a jacket position the spindle adaptor facing away.



2 Insert Record & Close

Insert the record or record cover. Place record on spindle adaptor or place jacket in clear cover and re-attach cover to wall panel until 'click'

