

## INSTALLATION INSTRUCTIONS



### PRODUCT: ALL LIGHTS ON™

**INSTRUCTIONS FOR:** 2007.5-2013 Silverado, Sierra; 2007-2014 Tahoe, Suburban, Yukon, Escalade;  
2007-2013 Avalanche

FPE-2020-2  
January, 2020  
Page 1 of 1


**ESTIMATED INSTALLATION TIME:** 5-10 minutes

**STEP 1:** Locate the Body Control Module (BCM) located just under the dash on the driver's side of the vehicle. It will be necessary to remove the plastic vent to easily access the BCM. The BCM will 7 connectors of various colors, you will be removing the black connector.

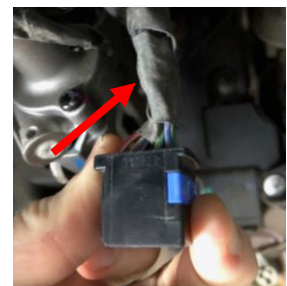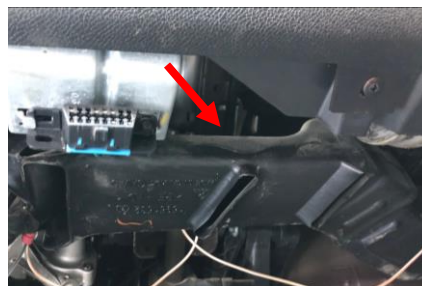


**STEP 2:** Disconnect the black connector from the BCM. Remove any tape or wrap to expose enough of the wires to install the All Lights On™ module (3-4" of material).

**STEP 3:** Locate pin 11 (fog lamp control). The wire is *green with a white stripe*. From the bottom right side of the connector, count over 8 pins and up 2 pins to locate the wire. It will be all the way on the left side of the connector. Route this wire through the circuit board and connection labeled "fogs".

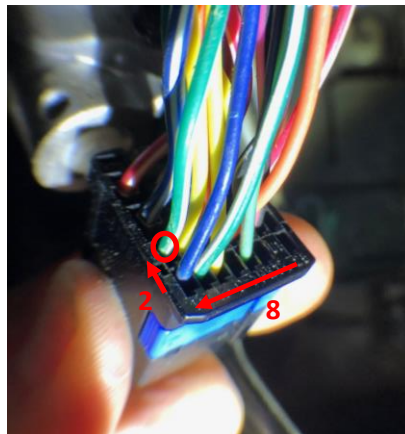

**Pin 11, Fog Light Signal**

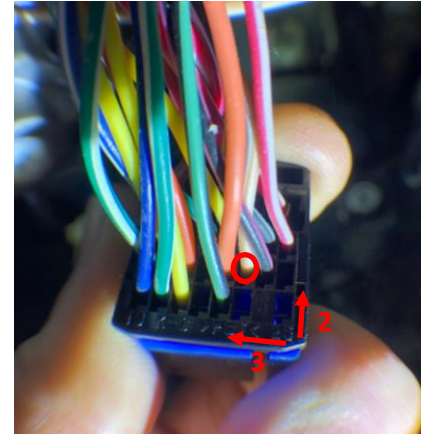

**Pin 16, High Beam Signal**

**STEP 4:** Locate Pin 16 (high beam control). The wire is *brown or tan with a white stripe*. From the bottom right side of the connector, count over 3 pins and up 2 pins to locate the wire. Route this wire through the circuit board and connection labeled "highs".

**STEP 5:** Position the All Lights On™ module so that it will not interfere with the connection when installed. Place the connector cover over the two wires and squeeze it downward with a pair of pliers to force the wires into the insulation displacement prongs. Install the black connector back into the BCM.

**NOTE:** The connector cover is a one-time use part. Double check the pin locations before installing the cover, it cannot be removed and re-used.


**Operation:** Low beams and fog lights will operate normally, when high beams are activated, the fog lamps and low beams will remain on.



**Route wires as shown**



**Install cover to seat wires**

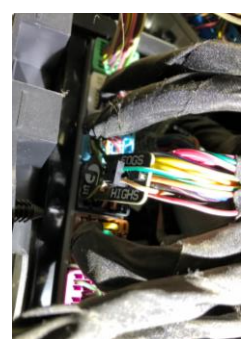

**Re-install Connector**