



Fleece Performance Engineering, Inc.
468 Southpoint Cir, Suite 100
Brownsburg, IN 46112
855-839-5040

***2003-2007 Cummins
Fuel Distribution Block Hose and Fitting Kit
Installation Instructions***
Part Number: (FPE-FFD-RF-HS-KIT-3G)


This kit is designed to be installed with our 2003-2007 Cummins Fuel Distribution Block (FPE-FFD-RF-3G). Please see the diagram on the next page for suggested routing instructions.

Kit Contents:

- (1) Push Lock CP3 Feed Fittings
- (1) -6AN to M12 Fitting
- (1) -8AN to M12 Fitting
- (3) -8AN 90° to Push Lock Fittings
- (1) -8AN 45° to Push Lock Fitting
- (1) -6AN 90° to Push Lock Fitting
- (1) -6AN 120° to Push Lock Fitting
- (3.5') -8AN (1/2") Push Lock Hose
- (2') -6AN (3/8") Push Lock Hose

-6AN to M12 Fitting
-6AN 120° to Push Lock Fitting

-6AN 90° to Push Lock Fitting

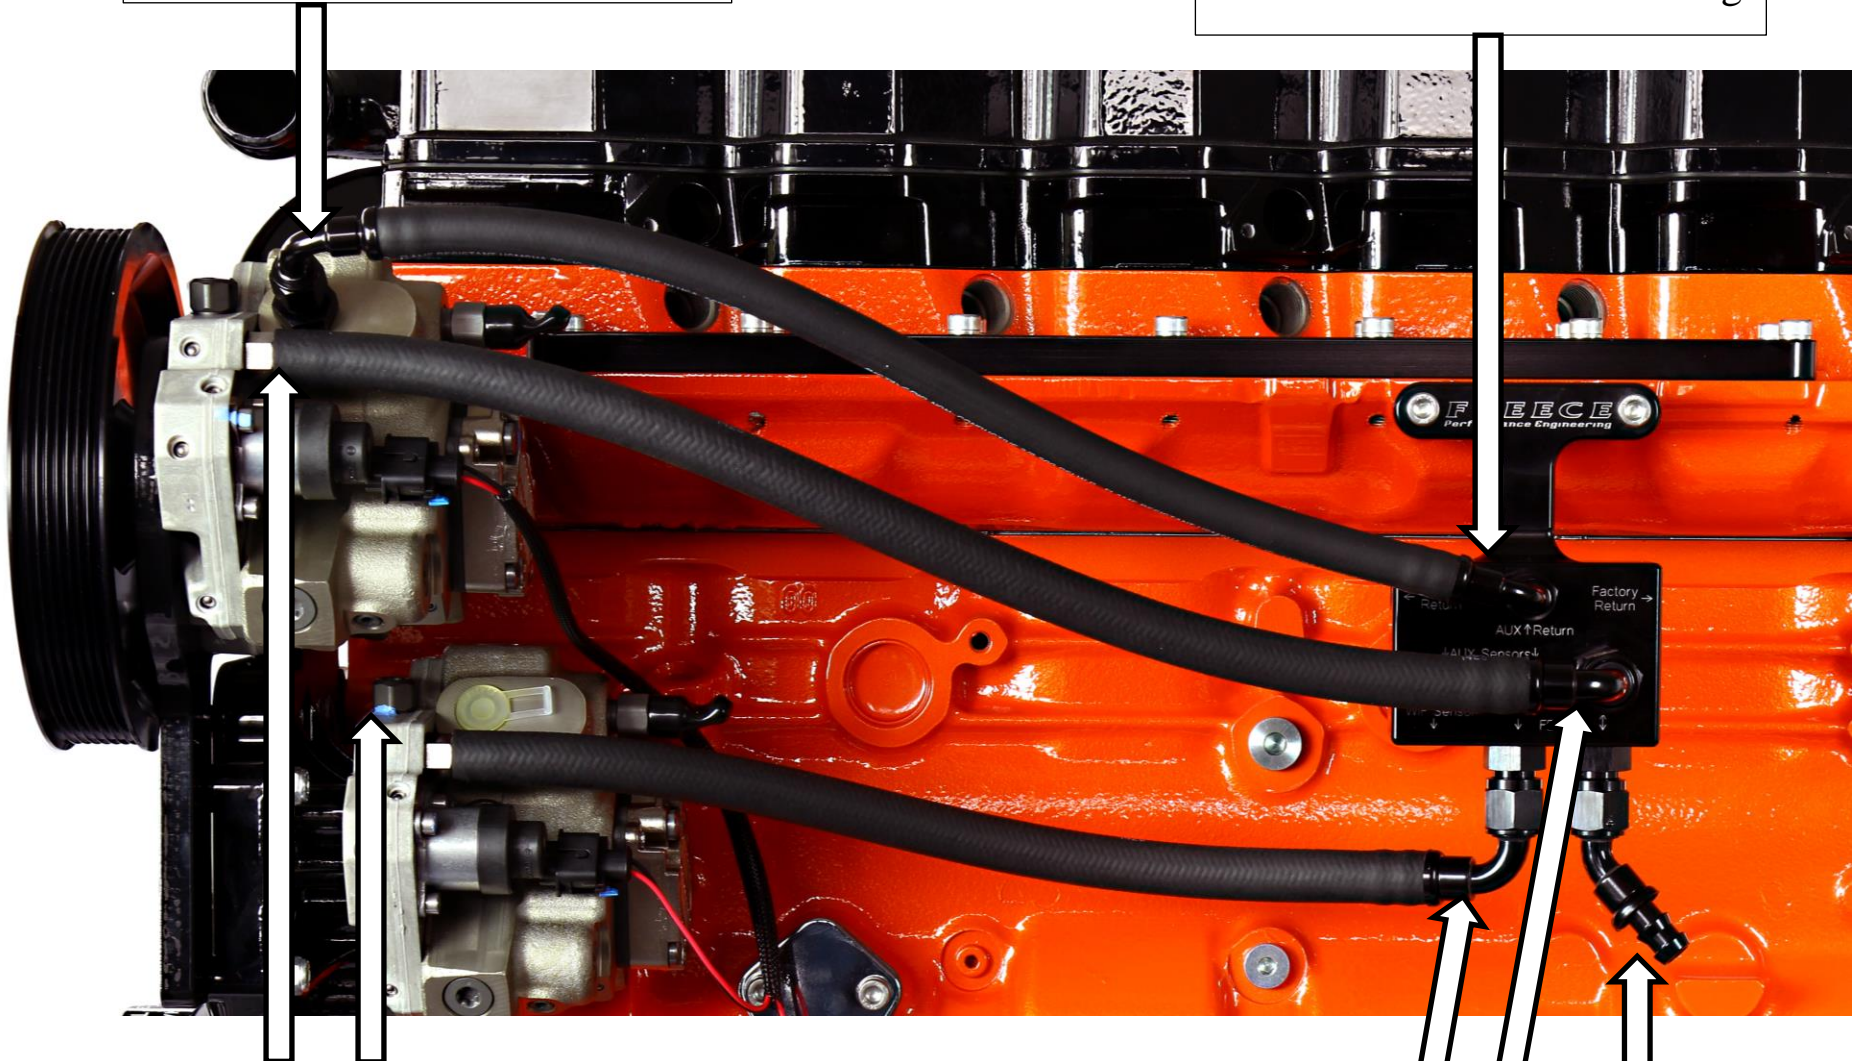

Push Lock CP3
Feed Fittings

-8AN to M12
Fitting Feed*

-8AN 90° to Push Lock Fittings

-8AN 45° to Push Lock Fitting

*Picture shows a 6.7L Pump on the bottom and 6.7L Pump on top. These instructions are for a 5.9L Pump on the bottom and 6.7L pump on the top.