




DOWNLOAD ENHANCED INSTALL MANUALS AT dieselperformance.com

1047034/35 Boot and Clamp Kit (I-00158) F-Series 2003-2007 Ford 6L – Powerstroke (Will NOT fit E-Series Vehicles)

All supplied boots are of the finest quality in the industry and exceed factory specifications. The silicone boots use a 4ply high temperature Nomex fiber for increased high temperature strength and long term durability. As well the boots are lined with flurosilicone to prevent the oil from reducing the operational life. All the clamps are made of stainless steel, with the heavy duty clamps providing over 400 lbs of clamp force.

1047034

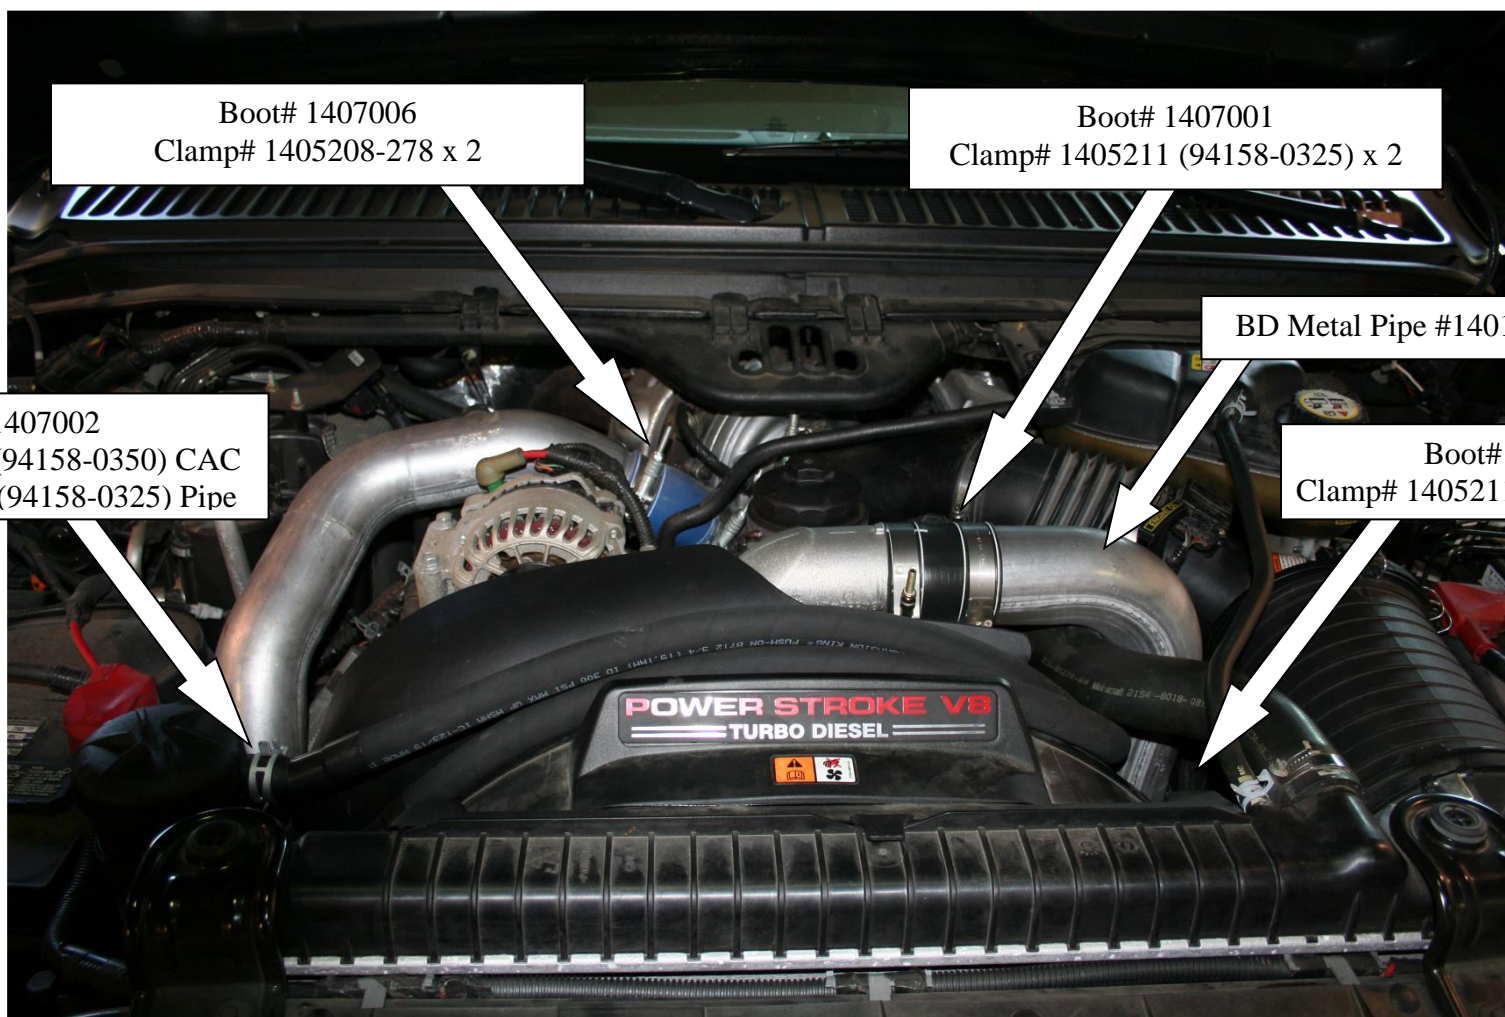

Boot# 1407006
Clamp# 1405208-278 x 2

Boot# 1407001
Clamp# 1405211 (94158-0325) x 2


BD Metal Pipe #1401579P

Boot# 1407002
Clamp# 1407030 (94158-0350) CAC
Clamp# 1405211 (94158-0325) Pipe

Boot# 1407003
Clamp# 1405211 (94158-0325) x 2



1047035

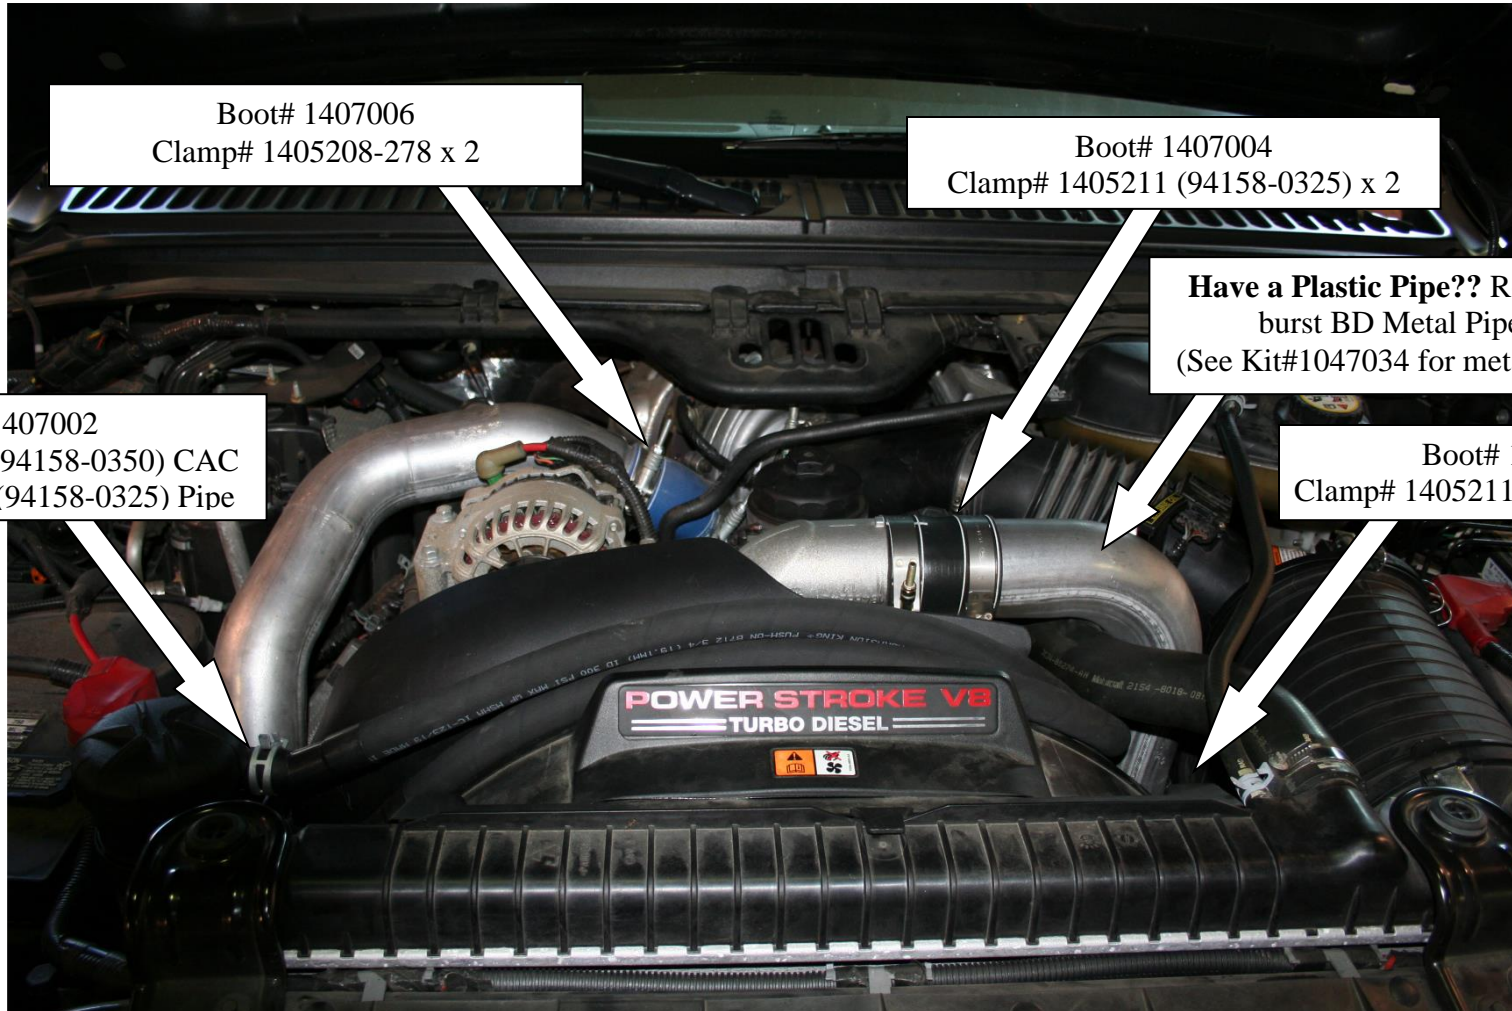

Boot# 1407006
Clamp# 1405208-278 x 2

Boot# 1407004
Clamp# 1405211 (94158-0325) x 2

Have a Plastic Pipe?? Replace it with a *no* burst BD Metal Pipe #1401579P
(See Kit#1047034 for metal pipe application)


Boot# 1407002
Clamp# 1407030 (94158-0350) CAC
Clamp# 1405211 (94158-0325) Pipe

Boot# 1407003
Clamp# 1405211 (94158-0325) x 2



Place clamp over top of internal ribbed section

Tighten clamp until spring is fully compressed

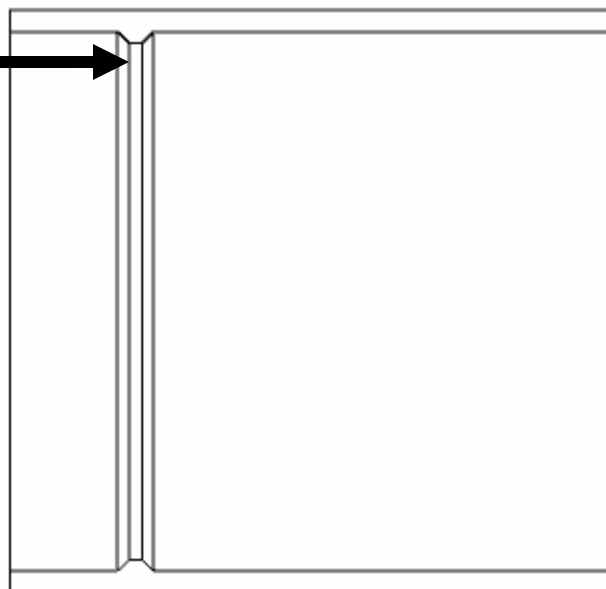

1407006 – Boot

2003-2004 – vehicles will need to trim the boot along the cut line.

2005-2007 – Vehicles do NOT need to trim the boot.

TRIM LINE

