



DIESEL PERFORMAÇOS


Click here to: Check out the installation video on YouTube! Or type into YouTube: Install Video - BD APPS Noise Isolator

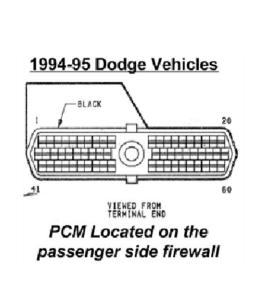

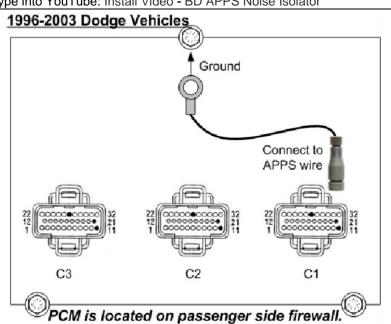

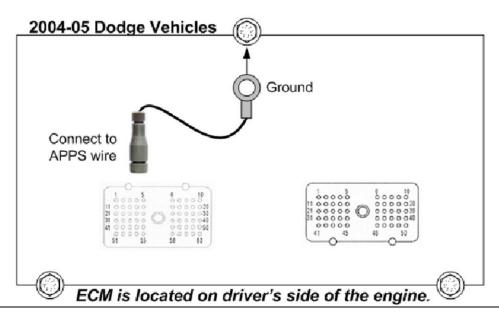



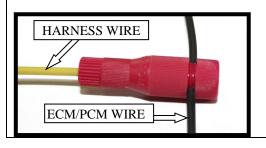

APPS WIRING			
Year	Pin#	OEM Wire Color	Computer Conn. #
1994-95	22	Orange/Dark Blue	
1996-03	23	Orange/Dark Blue	C1
2004	14	Brown/White	60 pin
2005	18	Brown/White	60 pin

Connect the apps filter to the specified wire using the supplied Posi-Tap™. Connect the ring terminal on the apps filter to the nearest ground point.