
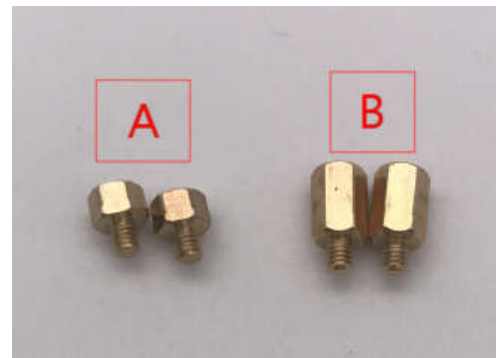


Quick installation guide of Eco PI Pro with M.2 v1.0

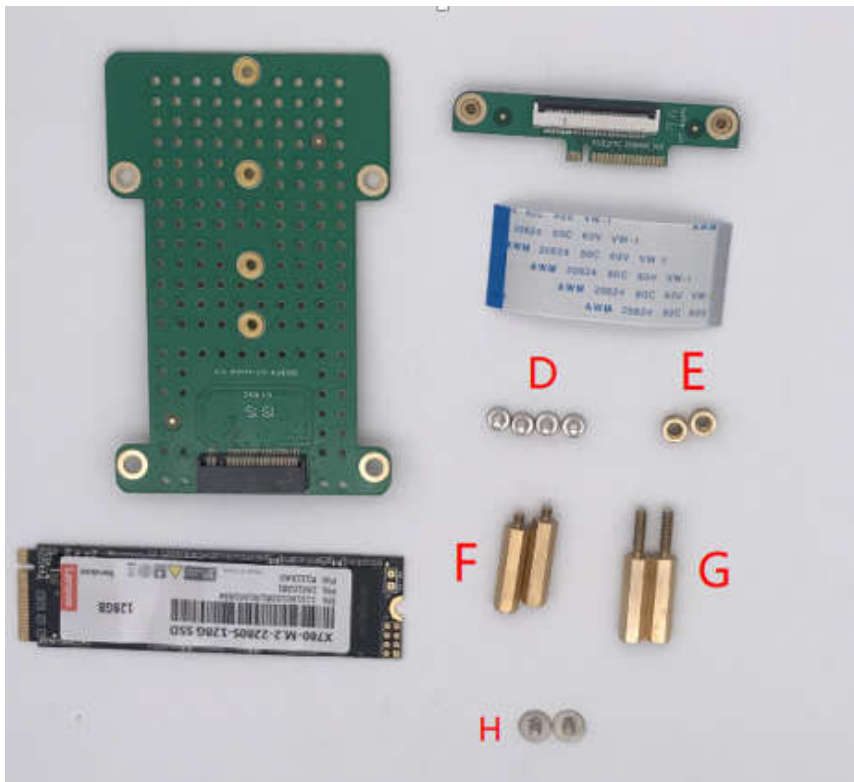

Step 1,

Remove the 4 screws on the bottom to


Remove the heat-sink.



Step 2,


Insert the mini adapter board into the M.2 slot

on the Bottom of the Rock PI board

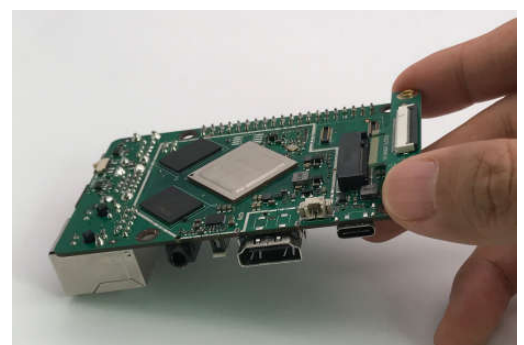

Step 3,

Install the ribbon cable on the mini adapter board

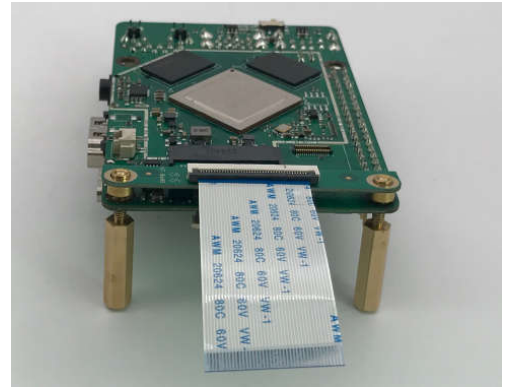


Step 4,

Mount the 2pcs copper bolt A on the heatsink

and prepare the 2pcs of copper spacers E for

fixing the board on the heatsink.

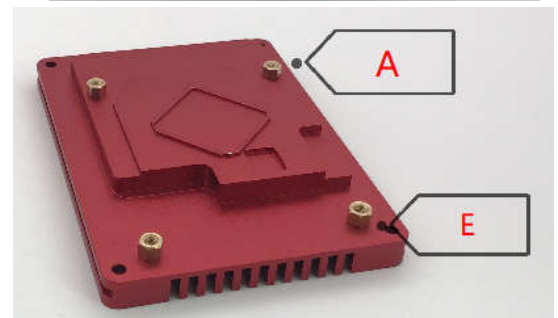


Put the heat conductive paste in the designated CPU space in the middle of the the heatsink. (less is more – please only place a small drip in the center!)

Step 5,

Mount the board from Step 3 onto the heat sink and



use the spacers E to keep the distance between

the small board and the heatsink.

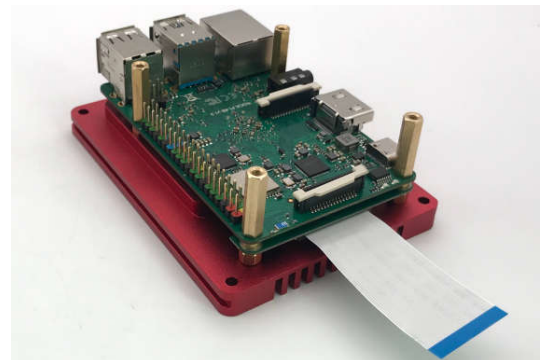

Step 6,

Install M.2 extension board and fix it with screw D

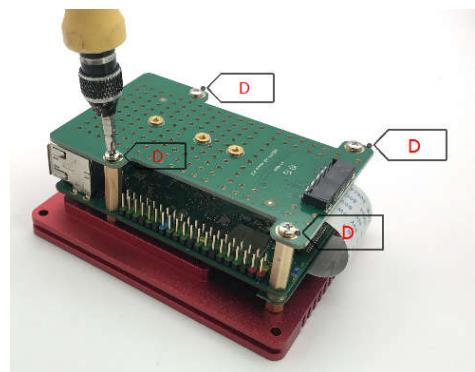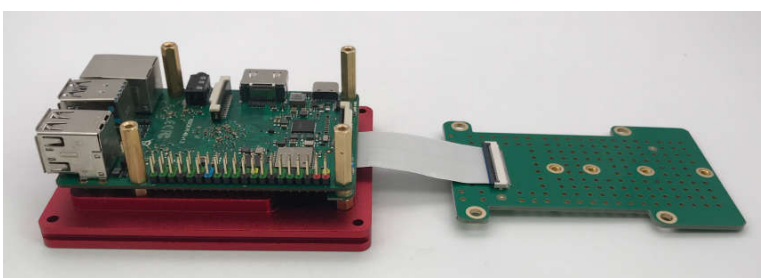

Step 7,

Finish the assembly with

putting the top cover on and fixing

it with the 4 screws through



the heatsink. Use the silicon feet and stick them on the outer sides of the heatsink.