


Bendtsen's Speed Gems Transmission Adapters

EMAIL: sales@transmissionadapters.com PHONE: (763) 767-4480

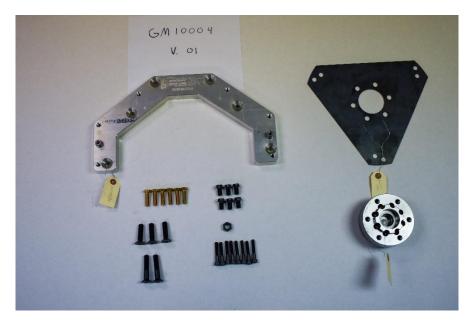

GM1000401 GM3800 Series V6 Engine to Chevy Auto

Make sure you clean all surfaces when mating these parts together. Always check bolt clearances. We try to make everything as simple as possible to help you, but the ultimate responsibility as to the assembly of the kit is up to the installer. Check and recheck as you go. We can't foresee every change or modification that could possibly occur in the building of a custom vehicle. Especially when we are dealing with 50-year-old motors.

Materials Included


- (1) Adapter plate GMC 3800 V6 Series 1 & 2 to Chev auto
- (1) Crank Adapter GMC 3800 V6 Series 1 & Chev V8 style automatic
- (1) Torque converter drive plate
- (3) FHSCS M12-1.75 X 45 P
- (2) FHSCS M12-1.75 X 60 P
- (1) HEX NUT M12-1.75 Z CL 10
- (8) SHCS 5/16-18 X 1 3/4
- (6) 7/16-20 x3/4 flexplate bolts
- (6) HCS 3/8-16 X 1 1/4 YZ 8

While performing this installation, please remember a few simple rules.

- 1. Install all bolts before tightening in a particular sequence
- 2. Use Loctite and torque bolts where applicable. Never force anything
- 3. Lubricate both threads
- 4. Trial fit everything to make sure it will fit. See rule #2.

Installation Intructions

- Use factory starter.
- Crank adapter goes over factory flex plate.
- There is an off-set bolt hole in crank shaft.
- This kit can be used to put a manual transmission on this engine

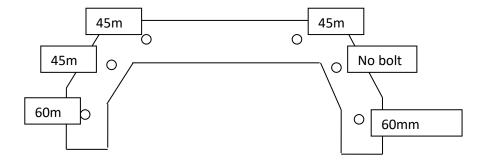

Bendtsen's Speed Gems Transmission Adapters. 806H S. Division St., Waunakee, WI 53597 sales@transmissionadapters.com (763) 767-4480

Copyright © 2002 Bendtsen's Transmission Center Inc. All rights reserved.