



PROFESSIONAL BALANCE BOARD STAND

Assembly Instructions

Tools Needed:

Screw Driver (Flathead or Robertson)

Parts Included:

Wood Side Panel x 2
Wood Spacer x 2

1 ¼" Screw x 4
Barrel Nut x 4




- 1.** Align the barrel nuts with the holes in the wooden spacers. Push the nuts in, using a screw driver if necessary to align the holes on either end.



- 2.** Ensure side panels match up. Place the spacer between the two panels, aligning with the pre-made holes. Use the screws to fasten together.



- 3.** Repeat step 2 on the other end of the stand. Make sure all screws are fastened tightly.

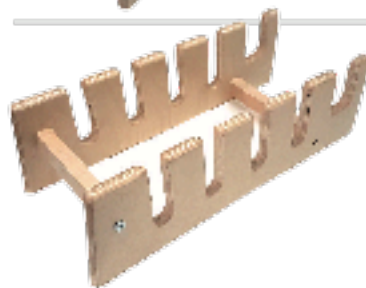

Fitter International Inc.

3050 - 2600 Portland St. S.E.
Calgary, Alberta, Canada T2G 4M6

p Toll Free: 1-800-fitter-1 (1-800-348-8371)

f Toll Free: 1-866-250-8824

e sales@fitter1.com

www.fitter1.com