
# Quingo

## **Docking Station Installation Guide**

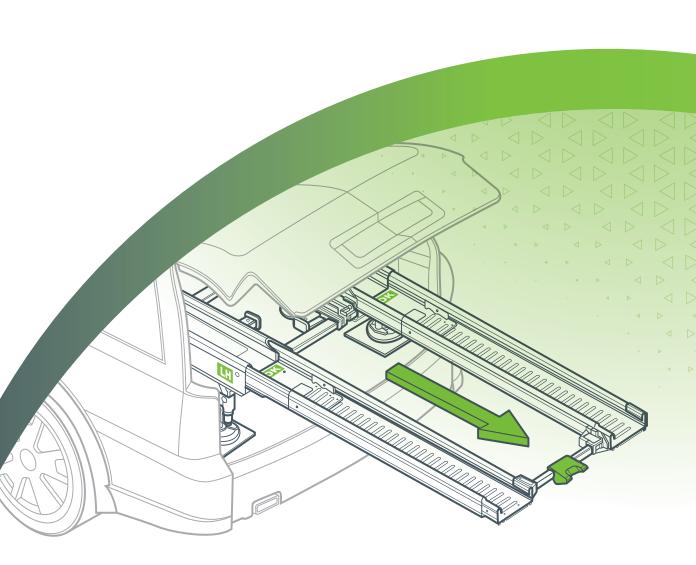

### Installation Step By Step




Fold the rear seats down in the car.



Remove the green protection caps of the suction pads.



Use the appropriate adjustable legs for the type of car. If it is a car, which has a flat trunk (ie no trunk lip), then use the small adjustable legs. If the car has a trunk lip, use the long adjustable legs. Attach the appropriate legs to the Docking Station frame.

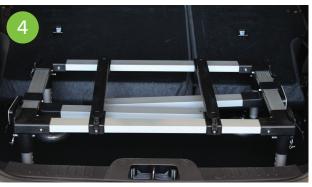

Now position the Docking Station frame in to the rear of the car, ensuring it is in a central position and approximately 3" – 4" (8cm-10cm) away from the trunk opening. At this stage do not secure the suction feet on the adjustable legs.



Install L1 until it clicks in to place and then ensure that the dial is turned to red and then push L2 rail in to L1 and then turn the dial to green and check that the trunk lid can close without hitting the Docking Station. If the trunk lid hits the Docking Station, then move the Docking Station further back in the car.



Now remove L2 by turning the dial on L1 to Red and pull out L2.



To remove L1, press the trigger on the L1 and slide the ramp out of the Docking Station.



Now we can secure the Docking Station into the car. Now place the metal plates underneath the adjustable legs suction pads (with Velcro on the metal plates on the trunk surface).



Now engage the lever on the suction pads to secure against the metal plates by pulling the lever over.



From the Docking Station frame, move the side arms in to a position where they can reach each side of the car. The side arms can be pushed out from the frame.



Now insert L1 Ramp in to the Docking Station frame and push in until it clicks in to place. Then repeat this process for R1. There are grooves on the docking station for L1 and R1 to locate in to when securing them in to the Docking Station.







Now connect the central bar between L2 and R2,



Pull the horizontal side arms from L1 and R1 so that they protrude over the rear seats. Then install the front support arms by clipping them in to the ends of the horizontal support arms and adjust front support arms height, so that the plate fixes just underneath the drivers and front passenger's seat.



To now use the Docking station, pull out the ramps, using central bar until you can see the "OK" labels. Lower on to the floor gently. Then check that on the side of the either L2 or R2, that the indicator is GREEN. This means that the docking station is safe to use. If it is RED, then either fit the SUV kit or move the car to "flatter" area.



To fit the SUV kit take L3 and R3 and slide them on to the end of L2 and R3. Then secure with the locating pin.



To load the Quingo Flyte vehicle in to the car, line up the yellow arrows on the bumper to the center of the Docking Station to the moulded part on the center bar.



Using remote control, hold button until fully docked, locked, and lights turn off automatically.



Push ramps back into docking station.



Close trunk.



Disassembling **Process Extras** 



Go to the side doors and pull from each side the seat belt and locate the seat belt around the front basket bracket. Repeat this each side.



Release lever and remove central bar.



Remove inner rails L2 and R2 by turning green to red.

### **Docking Station Components**









#### **Advanced Vehicle Concepts LTD**

7-8 Stadium Way Cradock Road Luton, Beds LU4 0JF United Kingdom

Tel: +44 (0) 1582 430 889 Web: www.quingo.com







