



# BS-N EXCEL PULL OUT WIREBASKET W/BLACK SLIDES


1. Follow the diagram and install the runner

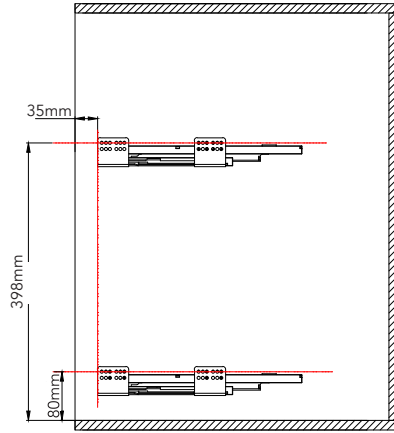

2. Follow the diagram and install the basket

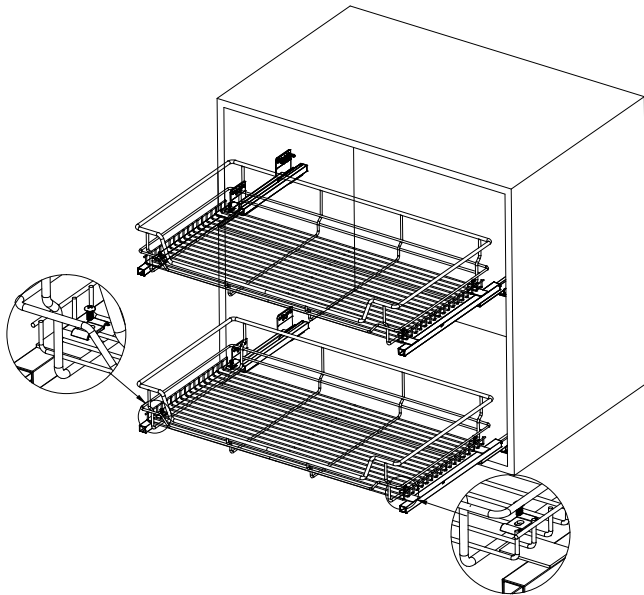

3. Follow the diagram and install the door panel

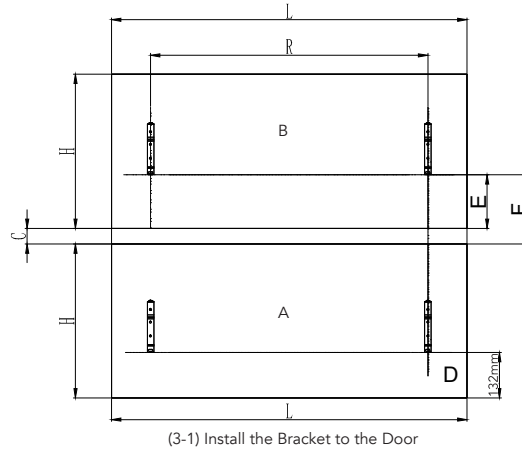

Note:  
 (H)The height of the door panel is subject to the actual object.  
 (L)Door Panel Length  
 (W)Cabinet Width, Install according to corresponding number.  
 - 900Cabinet, Install Bracket on 'R' 700mm  
 - 800Cabinet, Install Bracket on 'R' 600mm  
 - 700Cabinet, Install Bracket on 'R' 500mm  
 - 600Cabinet, Install Bracket on 'R' 400mm

