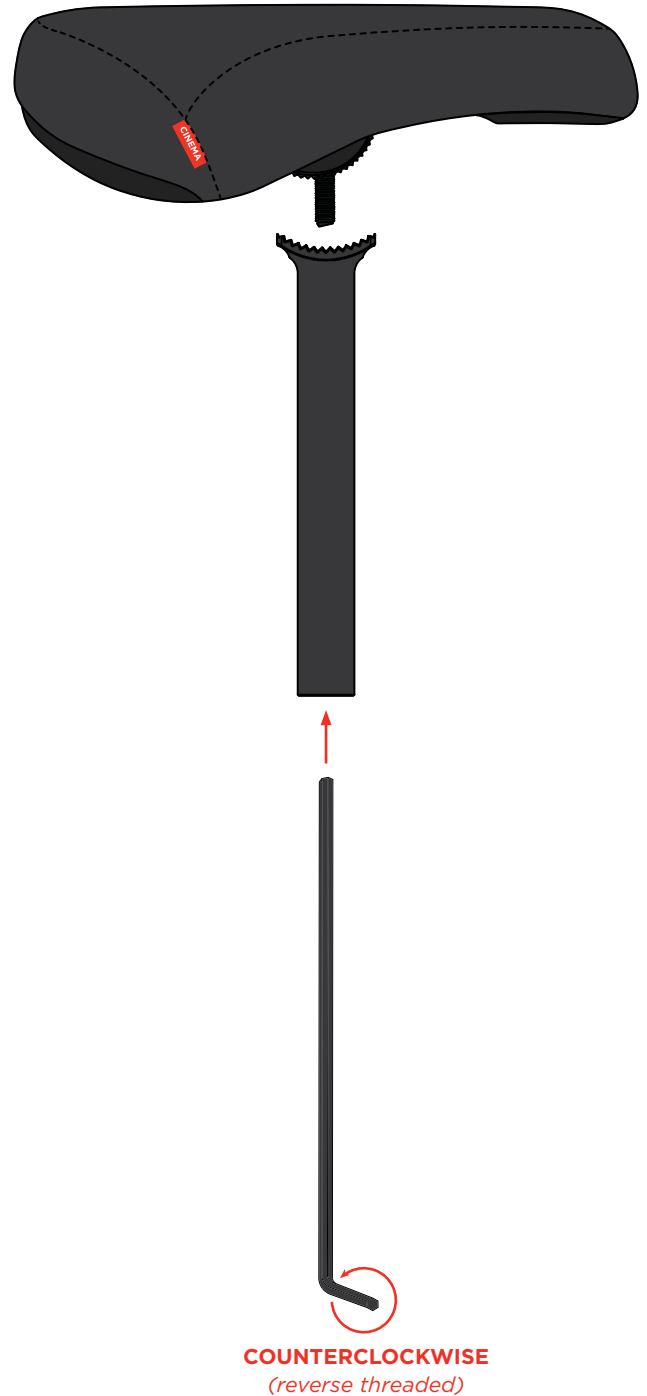


**STEALTH SEAT + STEALTH SEAT POST**  
*\*RECOMMENDED INSTALLATION\**

USE A STANDARD **5MM ALLEN KEY** OR ALLEN BIT TO INSTALL THE SEAT FROM THE UNDERSIDE. NOTE THAT THE BOLT TIGHTENS IN THE **COUNTERCLOCKWISE** DIRECTION.

**STEALTH SEAT + PIVOTAL SEAT POST**

IF YOU DO NOT HAVE A STEALTH SEAT POST, A STEALTH SEAT MAY BE INSTALLED WITH A TRADITIONAL PIVOTAL SEAT POST BY USING AN EXTRA-LONG **5MM ALLEN KEY**. INSERT THE EXTRA-LONG **5MM ALLEN KEY** UP THROUGH THE SEAT POST, UNTIL IT EXTENDS OUT OF THE TOP OF THE POST. NOTE THAT THE BOLT TIGHTENS IN THE **COUNTERCLOCKWISE** DIRECTION.