

Installation Instructions

MODEL SS960ED – EXTRA DEEP FOLDING SHOWER SEAT

AS1428.1 Compliant



Description:


Foldup Shower Seat for disabled, aged care facilities and home assist use.

Size:

960mm wide with seat to finish 480mm AFL

Materials:

304 Grade Satin Stainless Steel leg and frame. White Plastic Seat with drain slots.

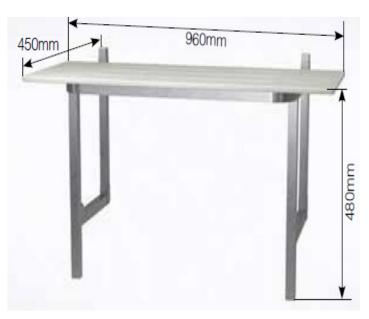

To meet requirements of AS1428.1

- 1. Coach Screw fixings supplied are for timber stud / noggin fixing only.
- 2. Fixings to be able to withstand a force of 1100N applied at any position and in any direction.
- 3. If studs or noggins cannot be screwed in. Then a BMK bracket mounting kit is recommended to be used. This can be purchased as a separate product.
- 4. In the fold down position. Mark hole centre against wall, drill appropriate holes for substrate and supplied fasteners. Screw into timber studs or noggins.
- 5. It is highly recommended that this product should only be installed by a licensed builder or tradesperson.

Note: To the extent permitted by law Bendtech does not provide any warranty in relation to bolts, screws or other fasteners provided with Bendtech products. You should obtain appropriate advice from a licensed trade person before affixing or installing.

7 Barrinia Street Slacks Creek QLD 4127
Phone: (07) 3290 4007 Fax: (07) 3290 4001

Email: info@bendtech.com.au web: ww.bendtech.com.au