

Skip Shift Installation

Tools needed: Long skinny flat blade screwdriver

1-Jack up front of vehicle and properly support with jackstands


2- Look on the driver's side of the transmission and locate the temperature sensor which is located on the left bottom side of the transmission. Look straight up from the temp sensor and that is the shift solenoid.



Skip shift solenoid

3- With the long screwdriver you can release the connector and unplug the solenoid.

4- Once unplugged install the Gen5DIY skip shift harness into the factory connector

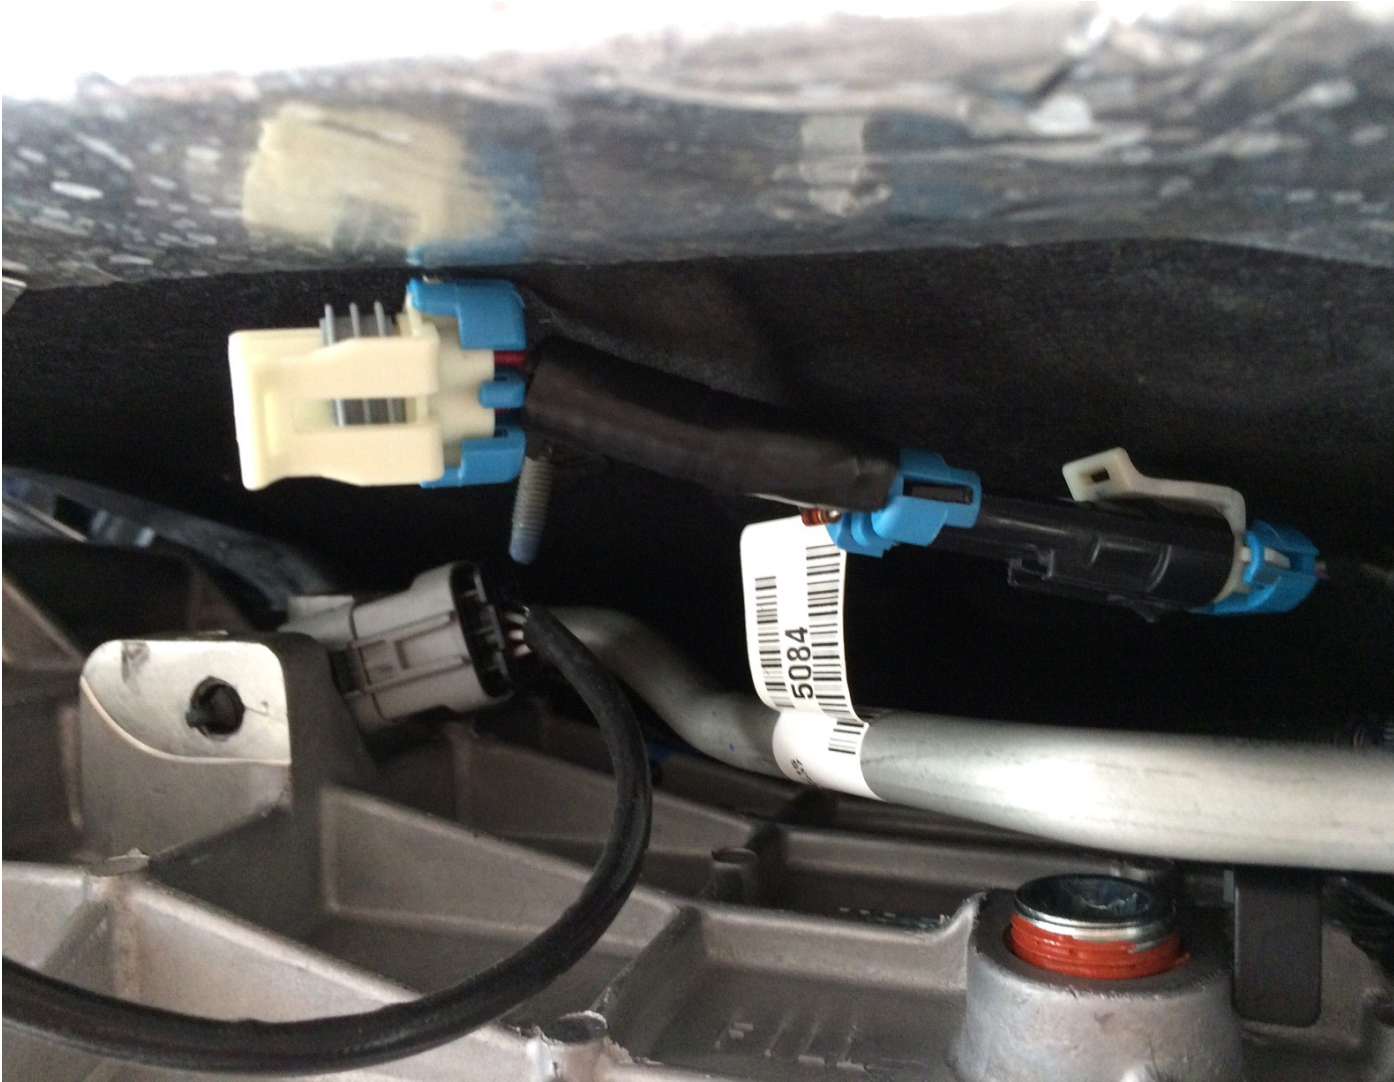

5- Plug other end of the Gen5DIY harness into the shift solenoid