



<http://www.gen5diy.com/>

## 2014-2015 CHEVROLET IMPALA LED FOG LAMP KIT

### INSTALL INSTRUCTIONS

#### KIT INCLUDES THE FOLLOWING:

QTY-2 IMPALA LED DRL FOG LIGHTS (RIGHT & LEFT)

QTY-2 :LED DRL FOG LIGHT TRIM PANEL (RIGHT & LEFT)

QTY-1 WIRING HARNESS

QTY- 4 RETAINING CLIPS

QTY-4 SCREWS



#### TOOLS REQUIRED:

-9/32 SOCKET

-CORDLESS DRILL OR SOCKET WRENCH

-TRIM TOOL REMOVER

\*\*OPTIONAL\*\* PAINT TAPE TO MASK  
OFF AREA UNDER TRIM PANEL\*\*






<http://www.gen5diy.com/>

**STEP 1: JACK UP THE FRONT END OF THE CAR OR PUT IT ON RAMPS SO YOU CAN GAIN EASY ACCESS TO THE UNDERSIDE OF THE VEHICLE.**

**STEP 2: USING THE DRILL OR SOCKET REMOVE THE 8 SCREWS HOLDING THE ACCESS PANEL ON THE DRIVERS AND PASSENGER SIDE OF THE UNDERSIDE OF THE FRONT BUMPER. THIS WILL GIVE YOU ACCESS TO PUSH OUT THE TRIM PANELS. YOU CAN PUSH BACK THE TRIM PANEL TO GAIN ACCESS.**

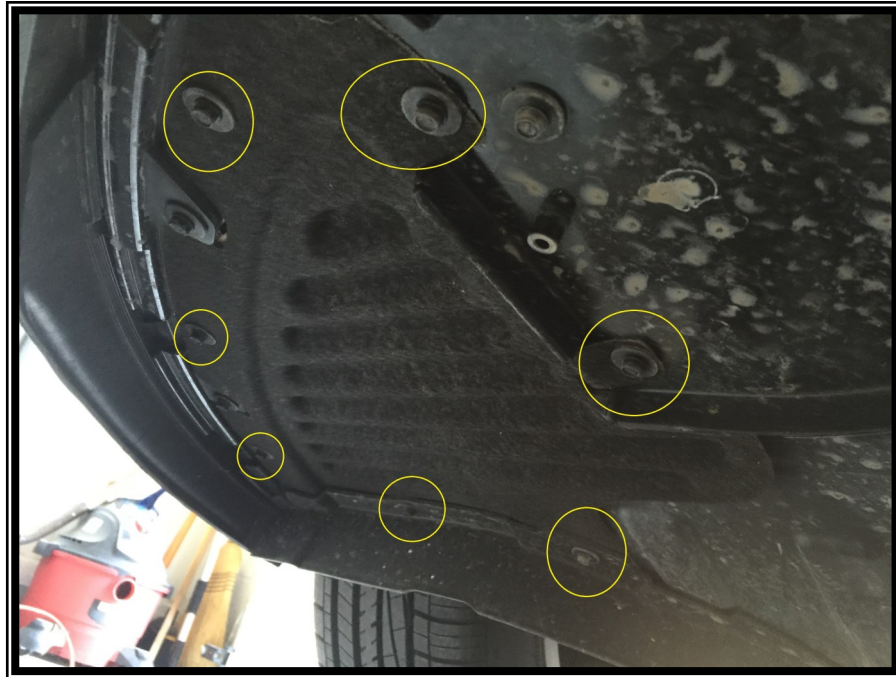

**STEP 2**



<http://www.gen5diy.com/>

**STEP 3: ONCE YOU PULL DOWN ON THE PANEL AND YOU LOOK UP YOU WILL SEE THE TRIM PANEL. THE PANEL ITSELF HAS 8 TABS THAT HOLD IT INTO PLACE, SIMPLY BEND EACH TAB (BOTTOM ONES UP, TOP ONES DOWN, EACH TAB HAS A SMALL TAB IN THE MIDDLE SIMPLY PUSH DOWN AND PUSH THE TAB FORWARD SO THE TABS WILL GO PAST THE OPENING SO YOU CAN SLIDE THE TRIM PANEL OUT DO THIS WITH EACH TAB.**

**\*\*YOU CAN USE PAINT TAPE TO TAPE THE AREA IN FRONT OF THE TRIM PANEL ON THE FRONT BUMPER SO YOU DO NOT SCRATCH YOUR PAINT WHEN REMOVING THE TRIM PANEL\*\***



**STEP 3**



<http://www.gen5diy.com/>

**STEP 3.. CONT.... GENTLY SLIDE THE TRIM PANEL OUT**




**STEP 3**



<http://www.gen5diy.com/>

**STEP 4: REMOVE THE TRIM PANEL CLIPS (QTY-4) USING THE TRIM PANEL TOOL. FROM THE TRIM PANEL UNDER THE FRONT BUMPER (THIS WILL GIVE YOU BETTER ACCESS WHEN FEEDING THE WIRING HARNESS FROM THE PASSENGER FOR TO THE DRIVERS SIDE FOG LIGHT.**

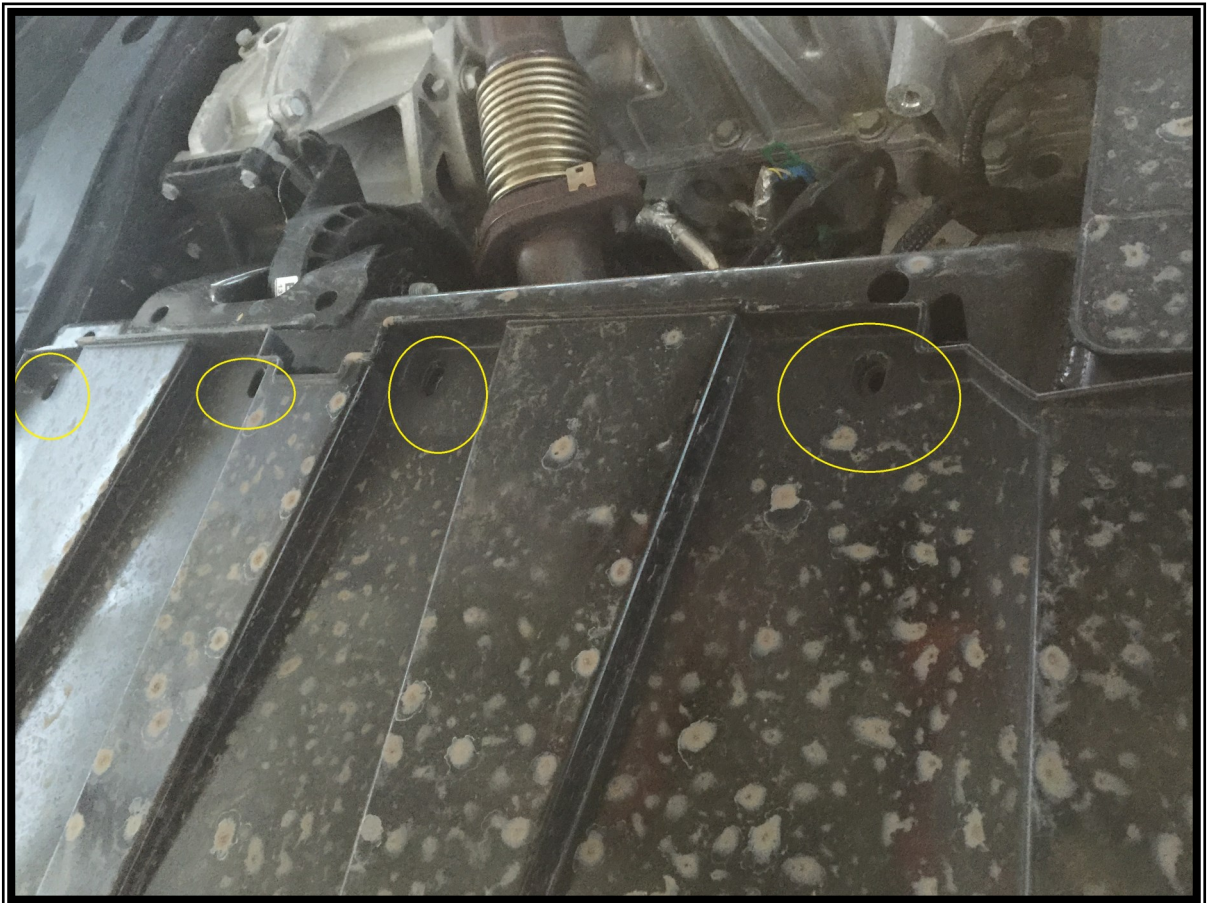


**STEP 4**



<http://www.gen5diy.com/>

**STEP 5: INSTALL THE 4 INCLUDED RETAINING CLIPS (2) ON EACH SIDE**

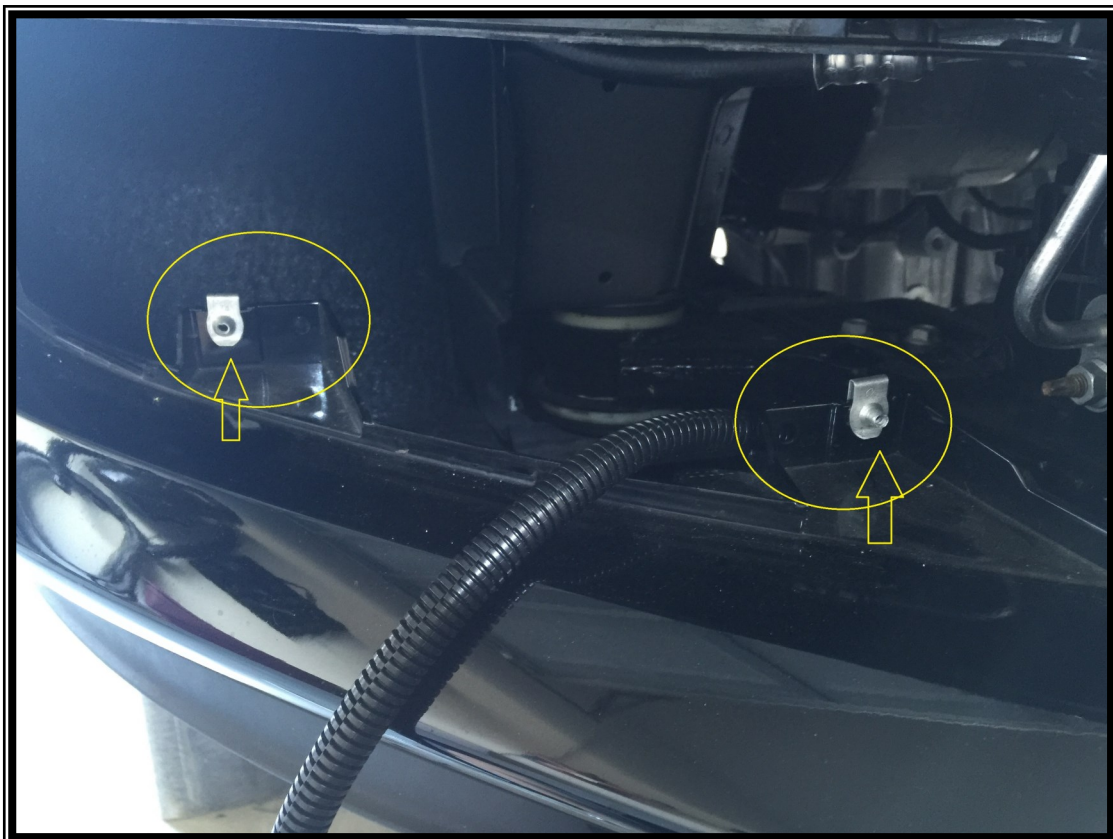

**STEP 5**