



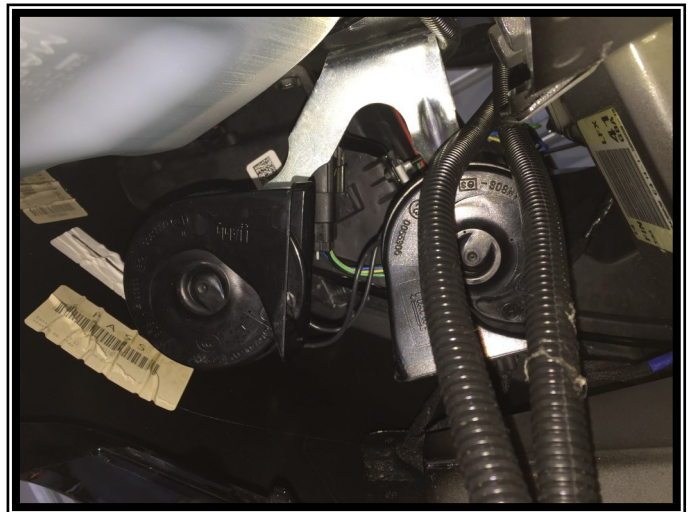

<http://www.gen5diy.com/>

STEP 6: RUN YOUR WIRING HARNESS FROM ONE END OF THE BUMPER TO THE OTHER, MAKE SURE THE PIGTAIL PORTION IS ON THE DRIVERS SIDE. PULL DOWN ON THE TRIM PANEL IN THE MIDDLE TO RUN YOUR WIRING HARNESS FROM LEFT TO RIGHT. FEED THE PIGTAIL, RED WIRE WITH THE FUSE UP TO THE TOP OF THE DRIVERS SIDE HEADLIGHT AND PAY THE EXCESS ONTOP OF THE ENGINE COVER.

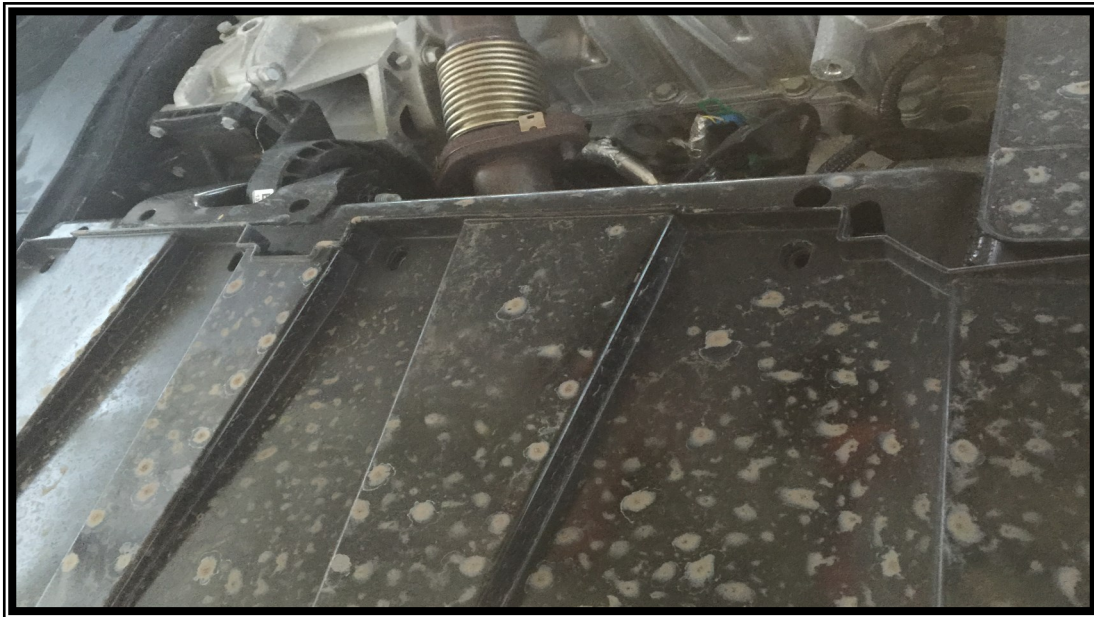


STEP 6



<http://www.gen5diy.com/>

STEP 7: INSTALL THE TRIM PANEL LINE UP THE CLIPS AND PUSH IN THE PANEL WILL SNAP AND LOCK INTO PLACE.

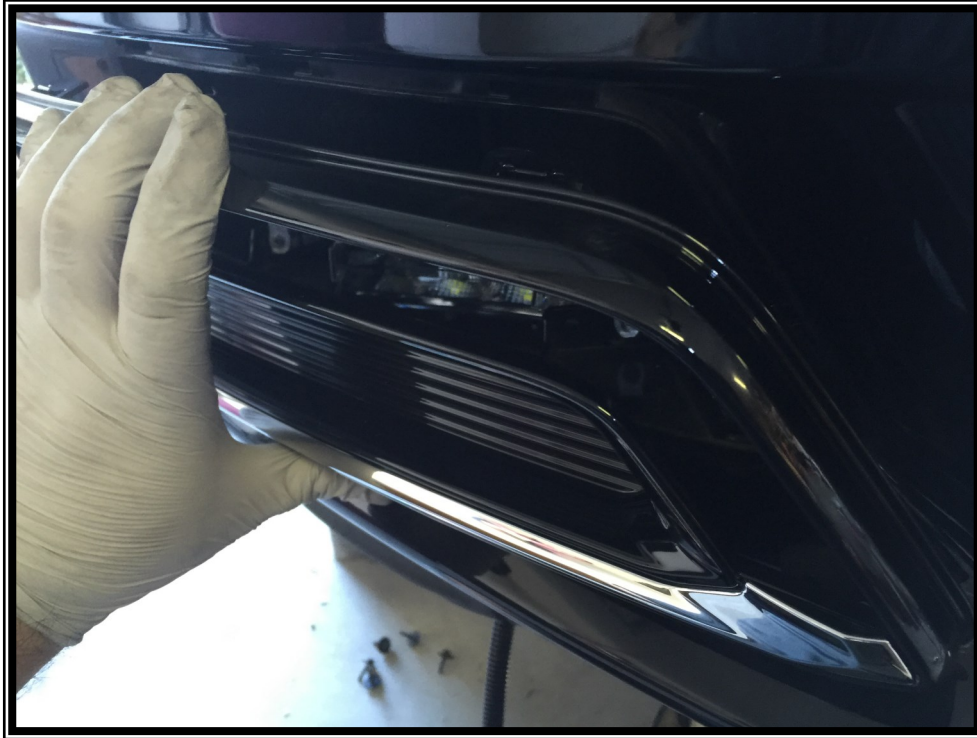

STEP 7



<http://www.gen5diy.com/>

STEP 8: NEXT PULL DOWN ON THE TRIM PANEL ON THE UNDERSIDE (DRIVERS & PASSENGER SIDE). TAKE YOUR DRIVERS SIDE LED FOG LAMP AND POSITION IT IN PLACE SO IT SITS FLUSH IN THE TRIM PANEL. DO THE SAME WITH THE PASSENGER SIDE LED FOG LAMP. NOW TAKE YOUR TWO SCREWS (4 TOTAL 2 ON EACH SIDE) AND SCREW THEM INTO PLACE TO SECURE THE FOG LAMP IN PLACE.



STEP 8



<http://www.gen5diy.com/>

STEP 9: DRIVERS SIDE & PASSENGER SIDE LED DRL FLOG LIGHTS INSTALLED.




STEP 9



<http://www.gen5diy.com/>

STEP 10: PLUG IN THE WIRING HARNESS ON THE PASSENGER SIDE INTO THE FOG LIGHT PLUG AND DO THE SAME FOR THE DRIVERS SIDE.

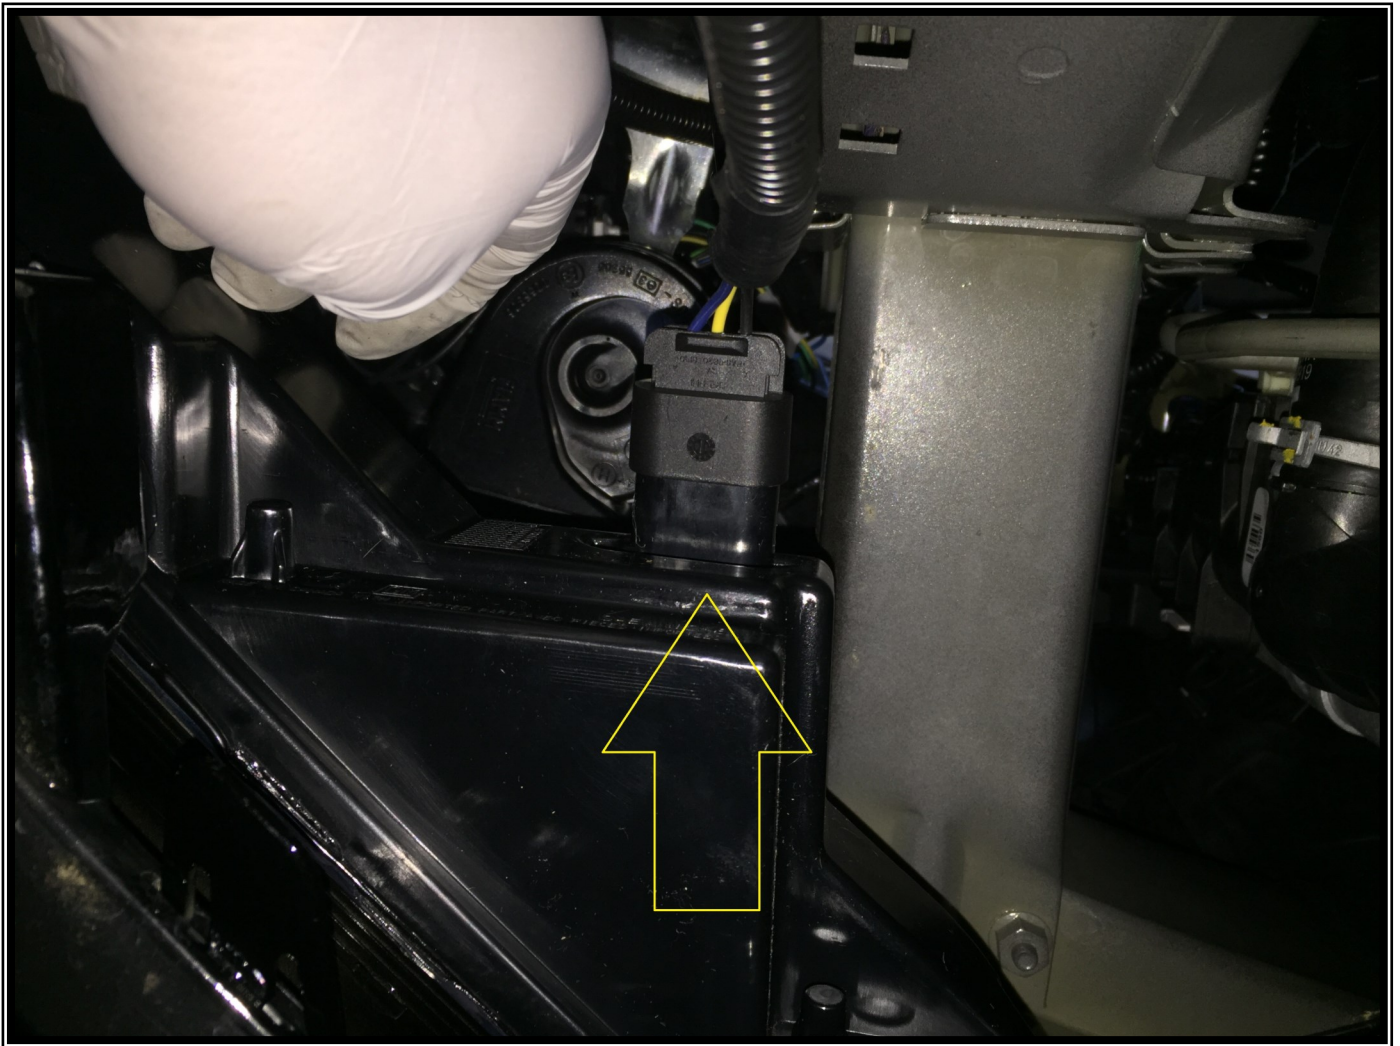

STEP 10