

Frameless Mirror Installation P1

Tools needed: T10 torx- T15 torx-10mm socket with ratchet-7mm nut driver-suitable plastic pry tools

Step 1 : Remove plastic trim from around the mirror by using pry tools and pulling off. First pull off the section shown and then remove the remaining trim piece



Step 2: Remove the mirror screw using a T15 torx bit



Step 3: Unplug mirror harness from factory mirror and remove mirror



Step 4: Install the new frameless mirror and plug the Gen5DIY harness inline with the new mirror and existing mirror harness. Harness is marked with(mirror side), if unmarked the side with the longer green wire goes inline at the mirror.



Step 5: Route green wire up along outside edge of headliner over to driver's A-pillar. Carefully pull down on the edge of the headliner and tuck the wire behind it. You can use a pry tool to push the wire in. Once wire is run you can tuck the new wiring harness behind the mirror and re-install the previously removed mirror trim.






Step 6: Remove A-pillar trim by first removing the handle access cover's and then removing the bolts holding the handle in.



Step 7: Remove A-pillar trim by pulling out and up



Step 8: Remove side panel trim plastic pry tool

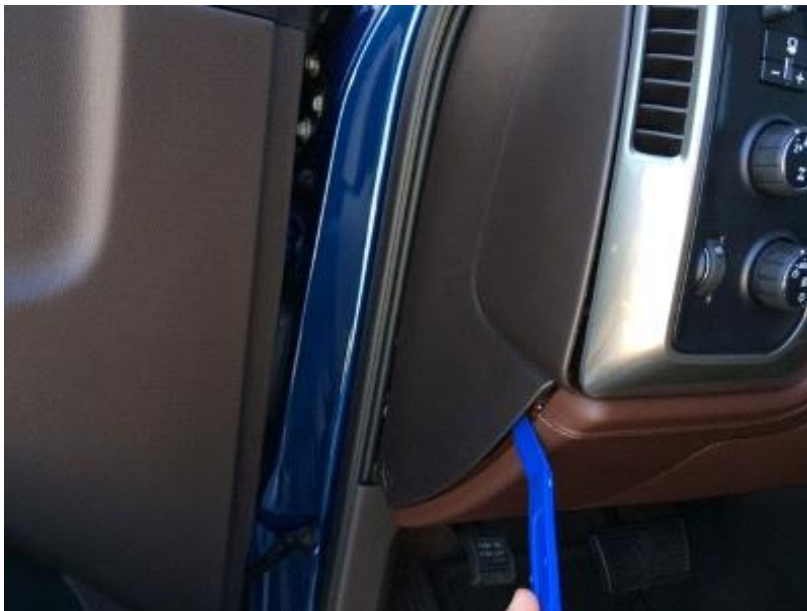

Step 9: Route green wire from headliner, down the a-pillar and thru the opening between the side trim and a-pillar



