BFI INSTALL GUIDE

PARTS LIST:

1/ BFI Transmission Mount

TOOLS REQUIRED:

3/8" Ratchet w/ Extensions 10, 13, 16, 18mm sockets

Jack Stands Floor Jack T-25 Torx bit/Driver








- 1. Using a 10mm socket, disconnect the battery and remove it from the battery tray.
- 2. To remove the battery tray, you must remove three 10mm bolts.
- 3. Pull up and lift away the wire loom running above transmission mount.





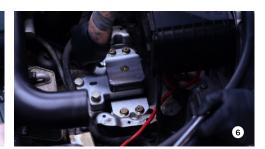

- 4. Lightly support the engine with the floor jack.
- 5. Start by removing the 4 frame side bolts and then the 3 engine side bolts. You will now be able to remove stock mount.
- 6. Now install the BFI transmission mount in place of the existing mount.
- 7. Install all frame side bolts and engine side bolts before torqing any of them. Torque the new engine bracket bolts to **44ft/lbs**, and torque new frame side bolts to **32ft/lbs**.
- 8. Re-install all other components in reverse order of removal.