


WIRING DIAGRAM FOR LES PAUL® #1

Directions: Tie white & green wires together, (Ground) and solder to volume pot. Take orange wires (hot) and connect to switch where noted by arrows.

Note: All Lead wires are on the same side as the high "E" lead string. If leads are up on the side of the bass then the high "E" drop out will occur.

We recommend 250K pots with .022 mfd caps, however you can also use 500k pots with .047 mfd caps. Please note, higher value pots will add more brilliance to the top end and reduce the amount of taper/rolloff.

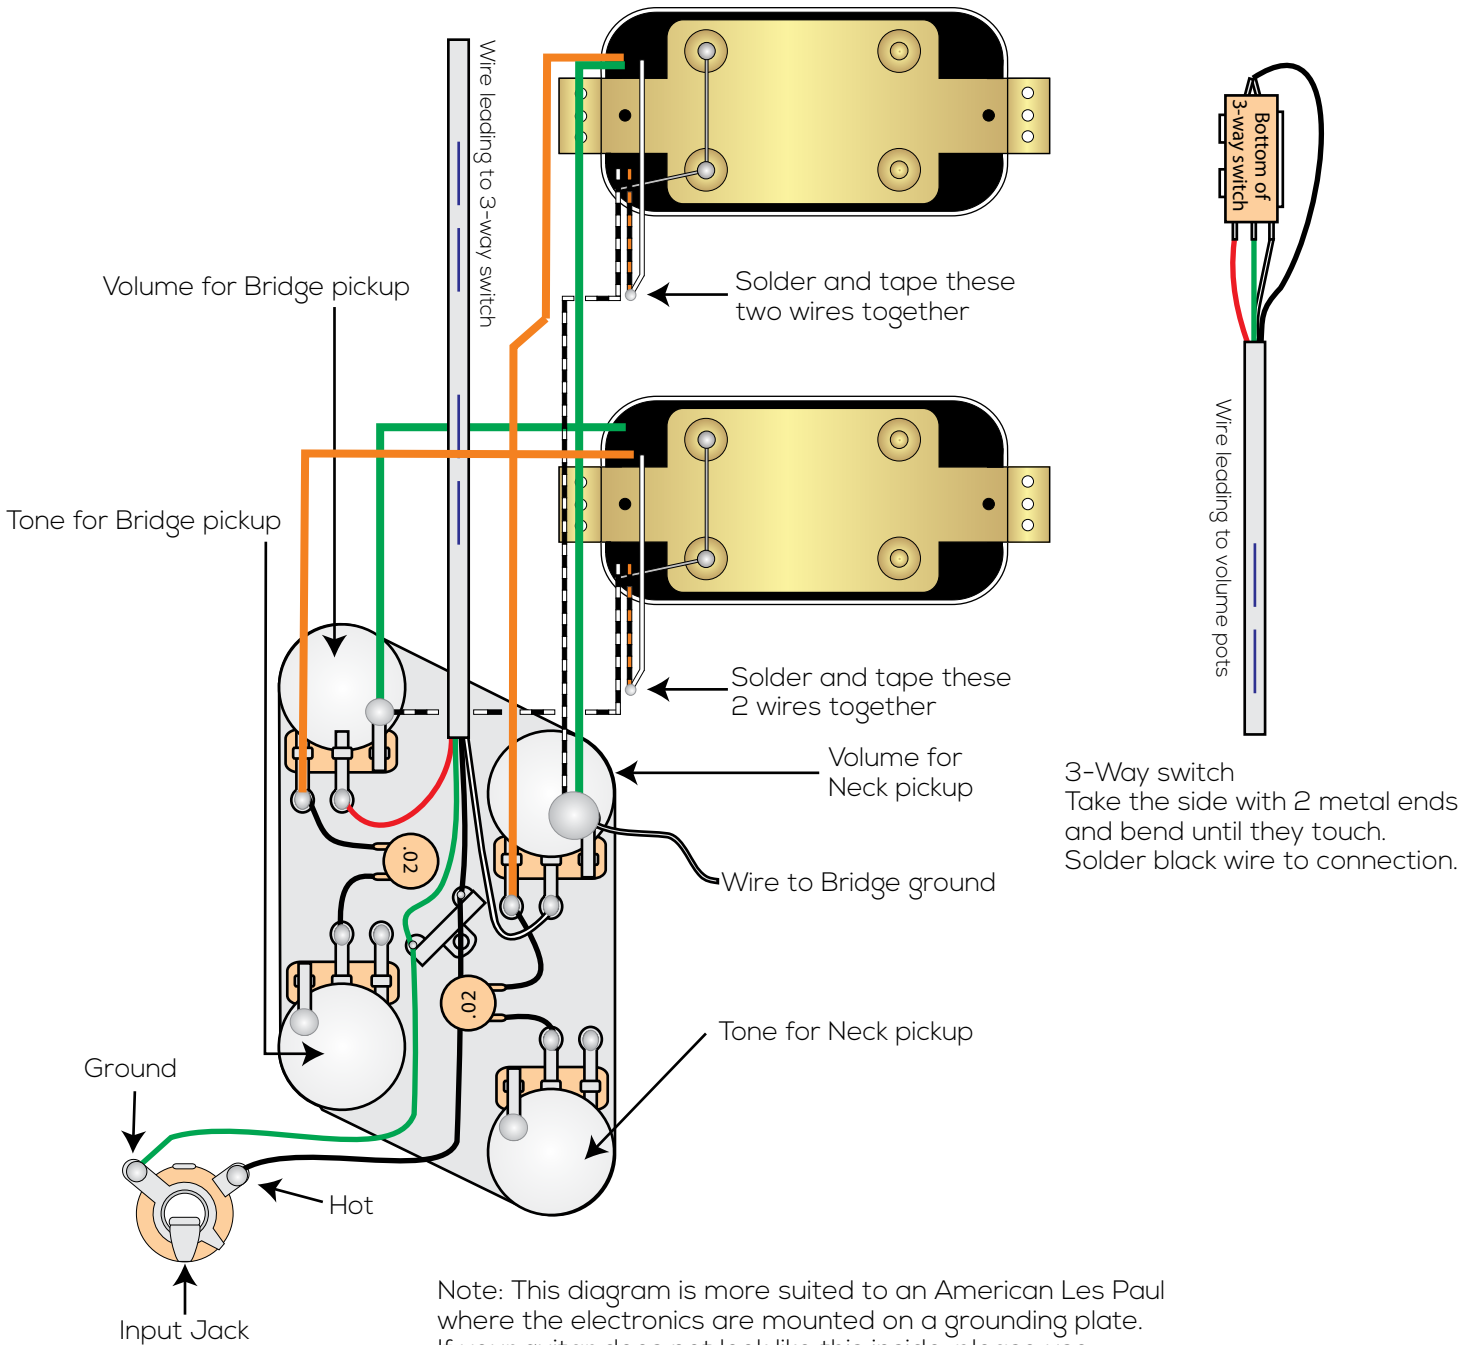

Note: This diagram is more suited to an American Les Paul where the electronics are mounted on a grounding plate. If your guitar does not look like this inside, please use Les Paul wiring diagram #2