
## WIRING DIAGRAM FOR SINGLE-SINGLE-HUM WITH SPLITTING SWITCH

Directions: Tie white & green wires together (Ground) and solder to volume pot. Take orange wires (hot) and connect to switch where noted.

Note: All Lead wires are on the same side as the high "E" lead string.

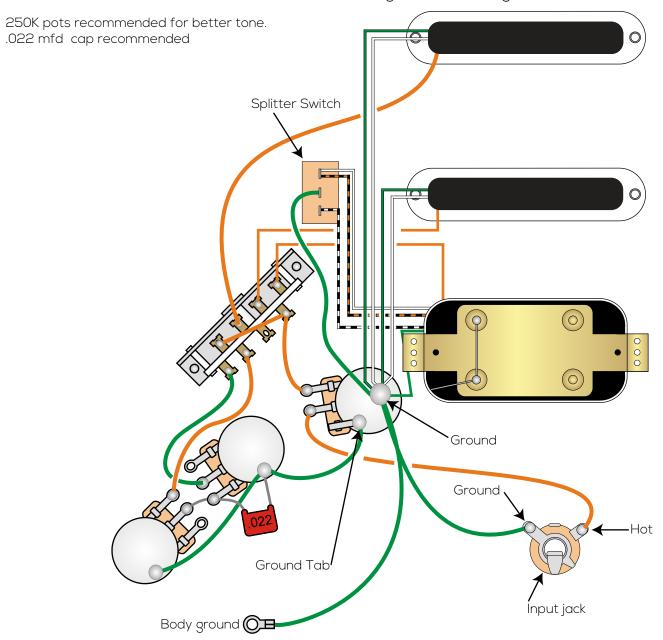

To use a Push/Pull pot, simply treat one side of the six lugs on the Push/Pull pot as the three lugs of the Mini-Toggle switch in the diagram above.

