


# BASTENS.com QuadSteer Kit Assembly Instructions

ver20180104a

- 1) mark circuit board pins A0, A1, 2, 7 with black marker on back side of board for easier reference while soldering
- 2) solder right angle pins "RAW" and "GND"





- 3) cut supplied cables in half


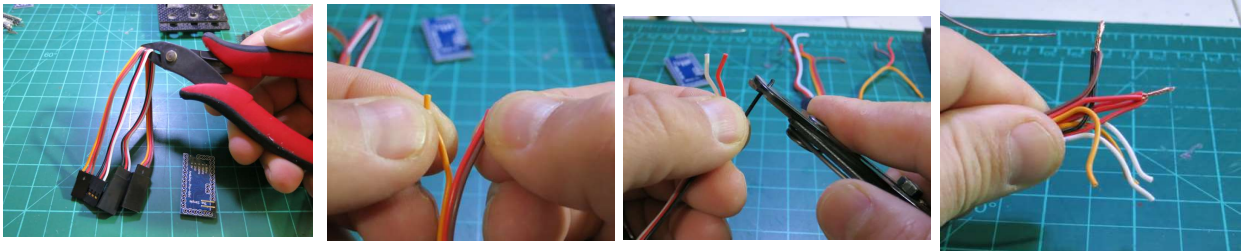


- 4) solder wires

- \* A0 (white receptacle)
- \* A1 (yellow receptacle)
- \* 7 (yellow plug)
- \* 2 (white plug)
- \* black & brown to "GND"
- \* red to "RAW"

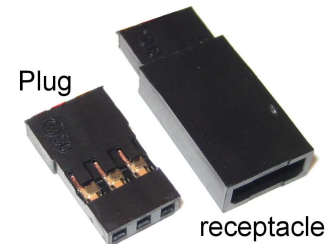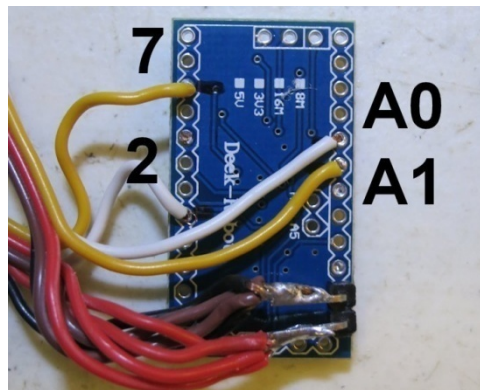

- 5) arrange wires

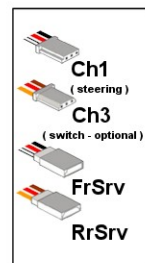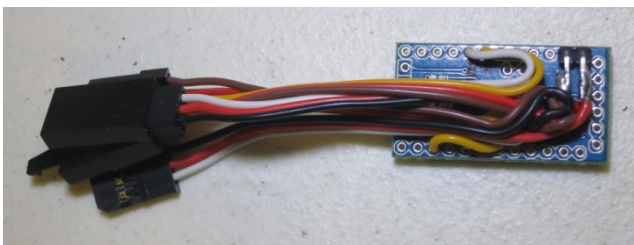

- 6) we suggest adding hot glue around brown, black and red pins

- 7) add label (pictured to the right) & heat shrink

- \* note LEDs line up with boxes on label
- \*\* also note the circuit board has a reset button, be sure this isn't pressed by heat shrink

