






Product No: PRN013736


Kit Contents



- (A) 1 x Main Bracket
- (B) 1 x Number Plate Bracket
- (C) 1 x P-Clip
- (D) 2 x Indicator Plates
- (E) 2 x Indicator Mounts
- (F) 2 x Plastic Spacers
- (G) 2 x M8 Penny Washers
- (H) 2 x M8 Black Washers
- (I) 2 x M5 x 20 Black Button Heads
- (J) 2 x M5 x 10 CounterSunk Screw
- (K) 4 x M8 x 30 Black Button Heads
- (L) 4 x Indicator Clamps (Plastic)
- (M) 5 x M4 x 8 Black Button Heads

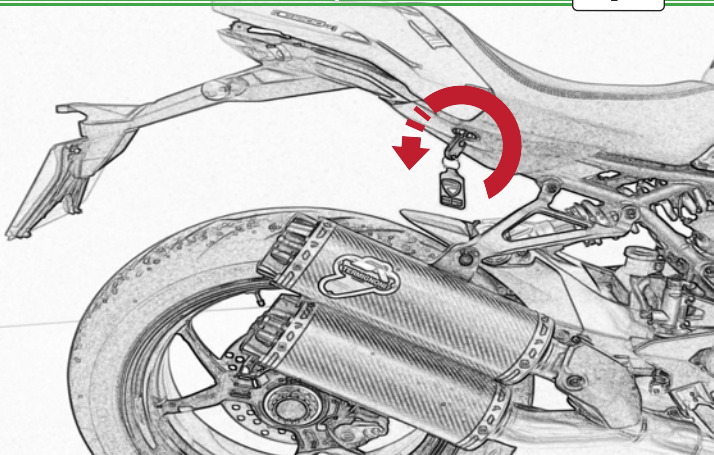


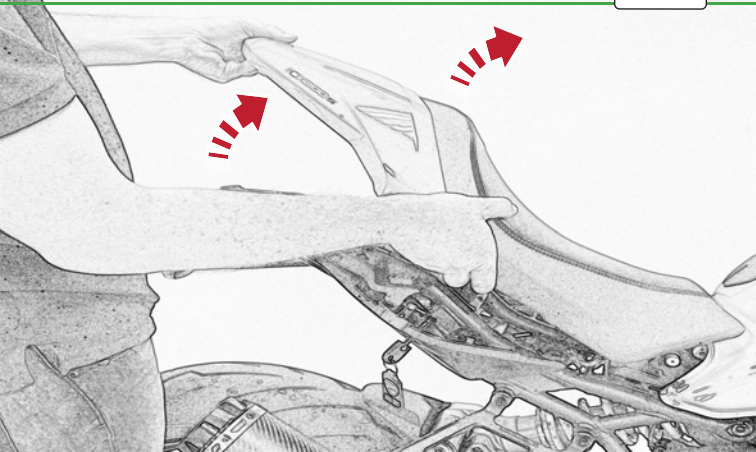


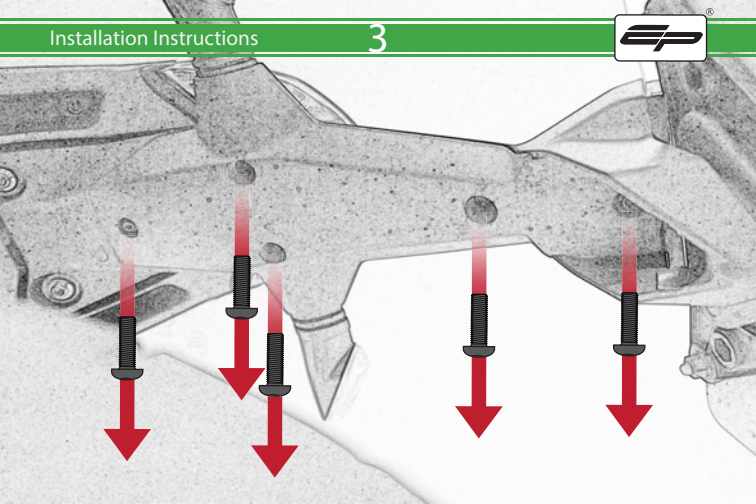


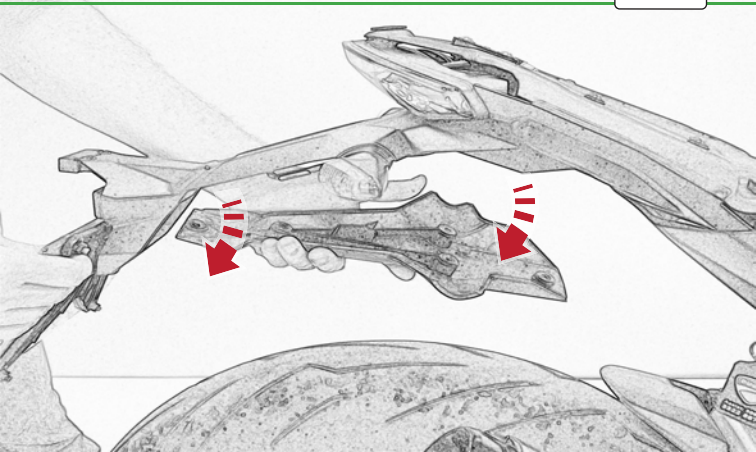


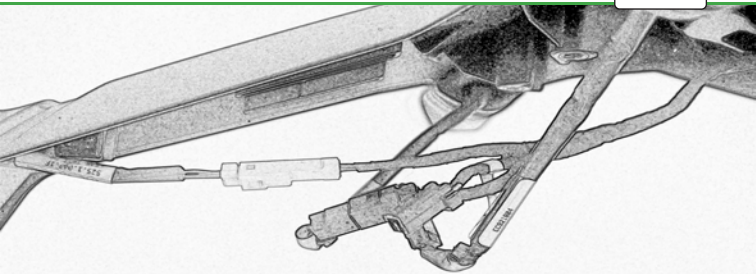


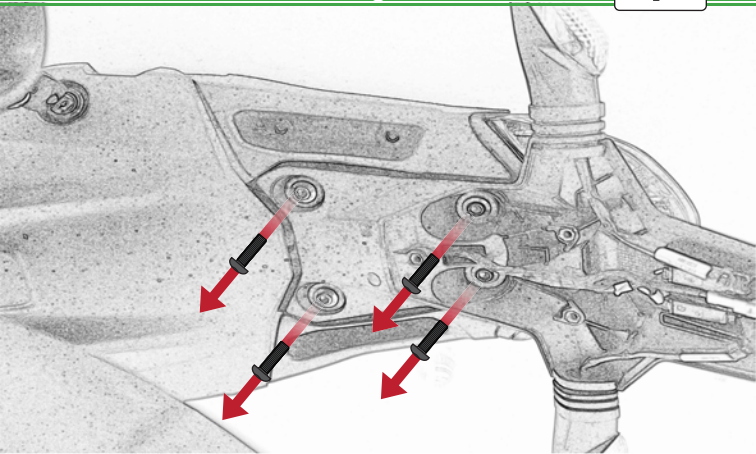


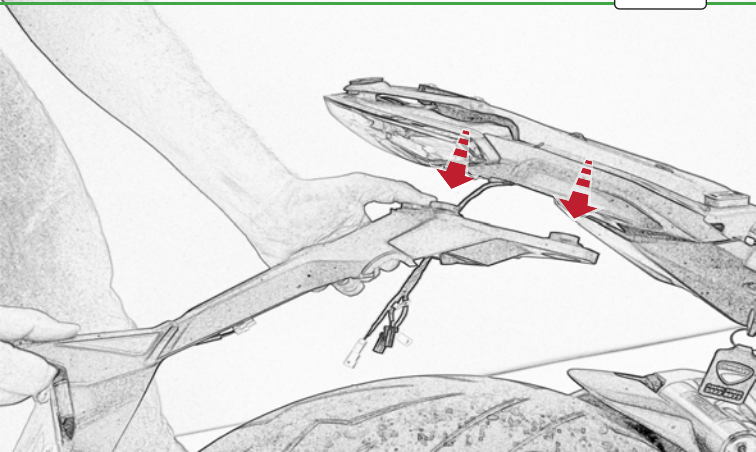


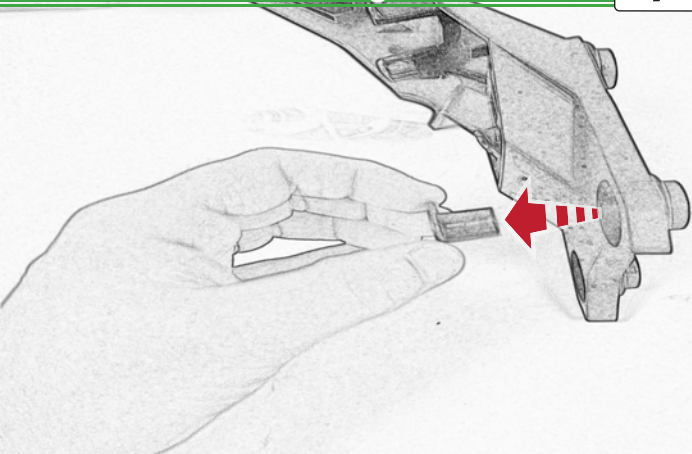

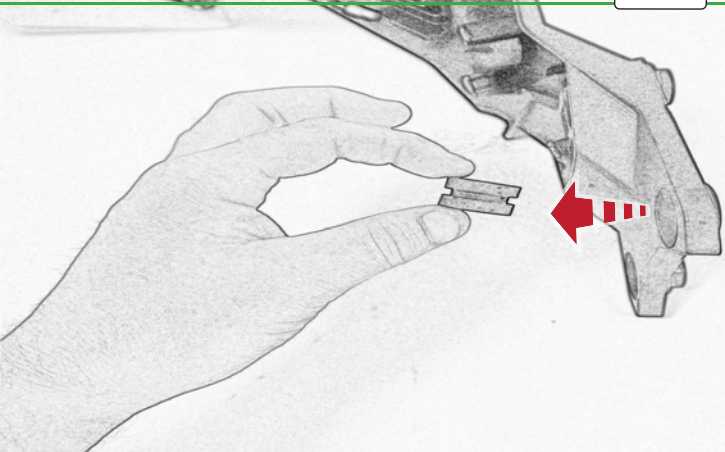

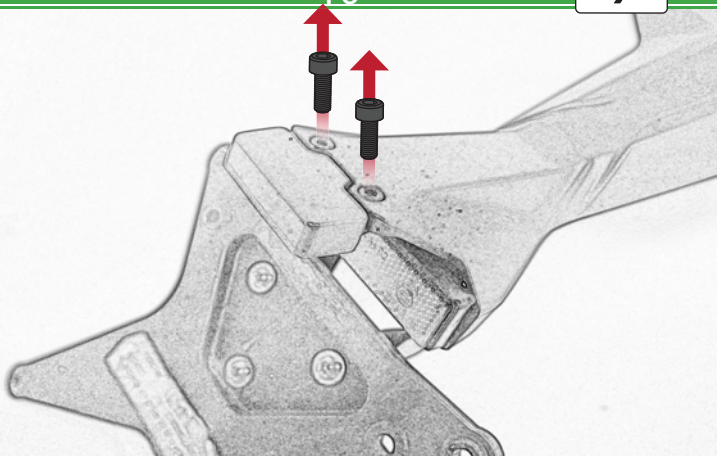

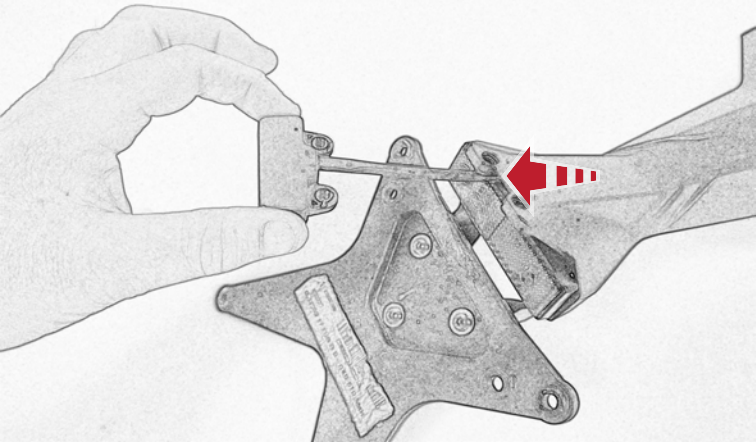

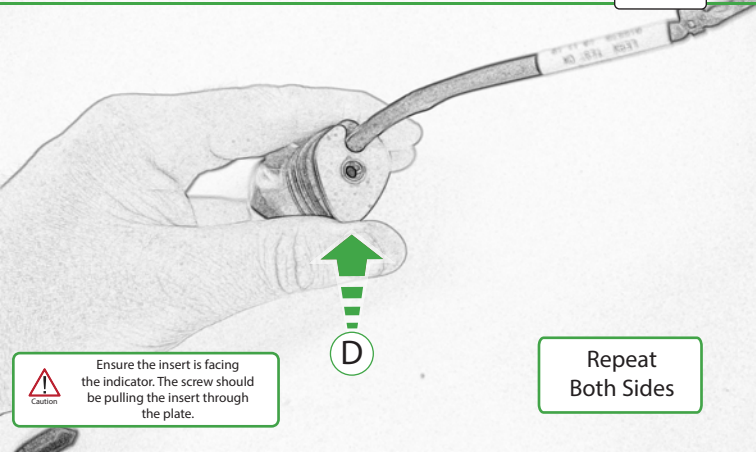


Caution


Ensure the insert is facing the indicator. The screw should be pulling the insert through the plate.

D


Repeat
Both Sides

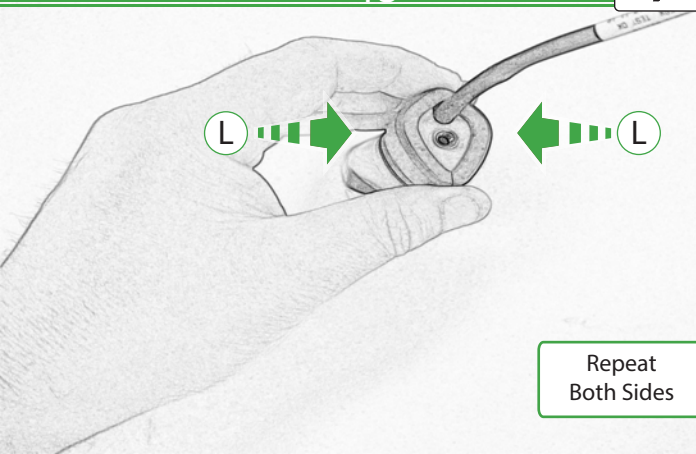


Repeat
Both Sides

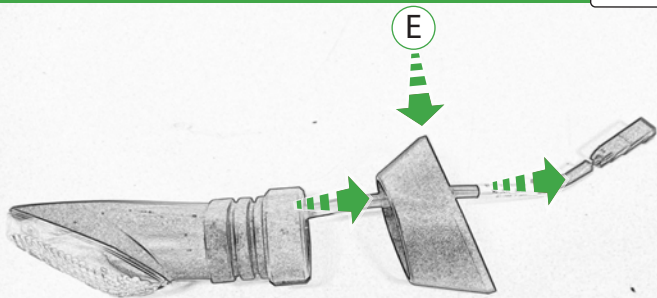



Repeat
Both Sides

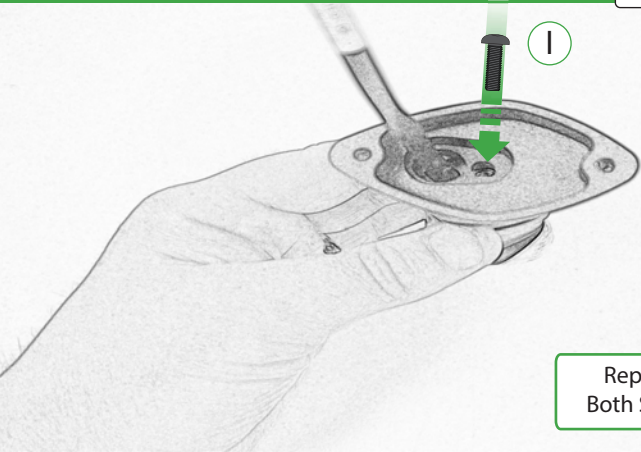


Repeat
Both Sides

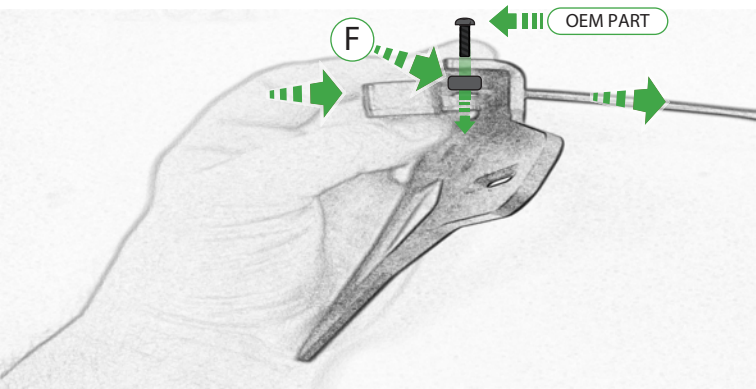

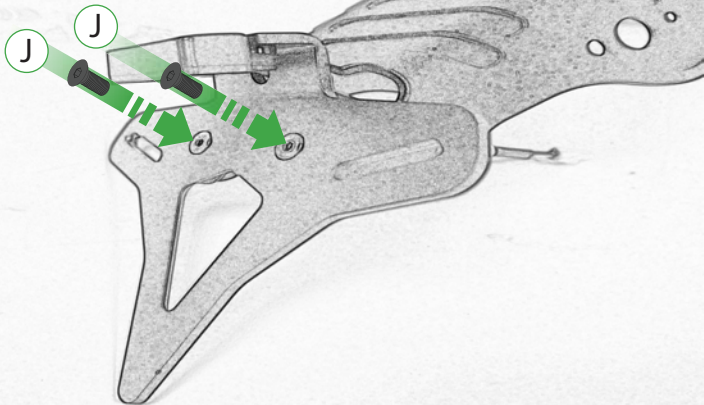

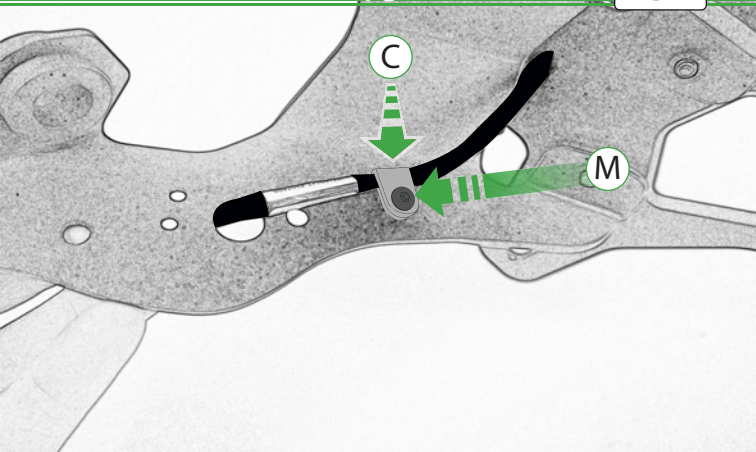


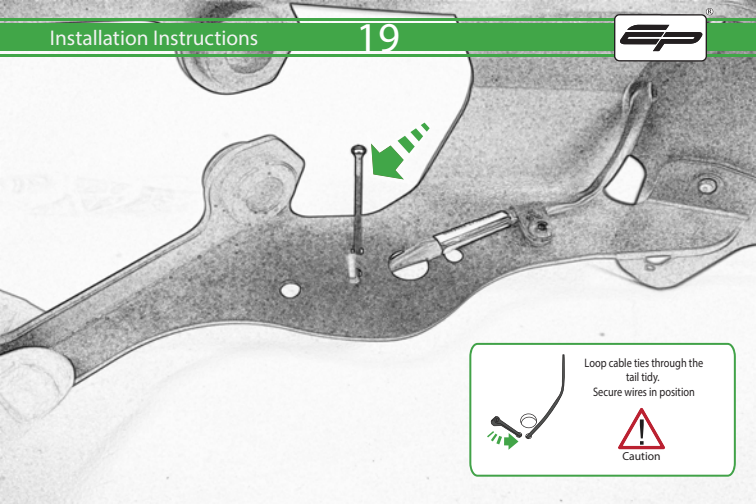

Loop cable ties through the
tail tidy.
Secure wires in position





Caution

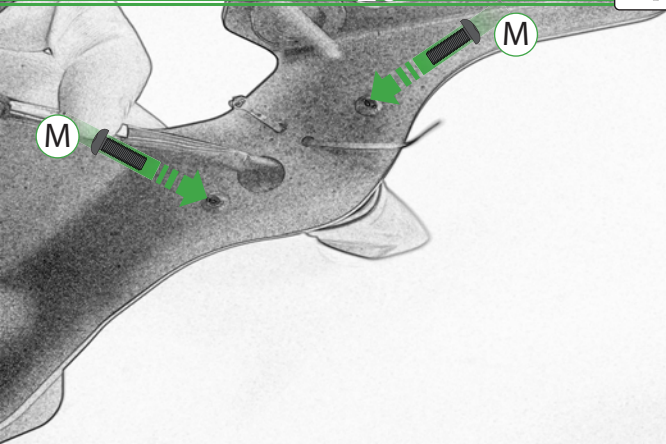







OEM PART

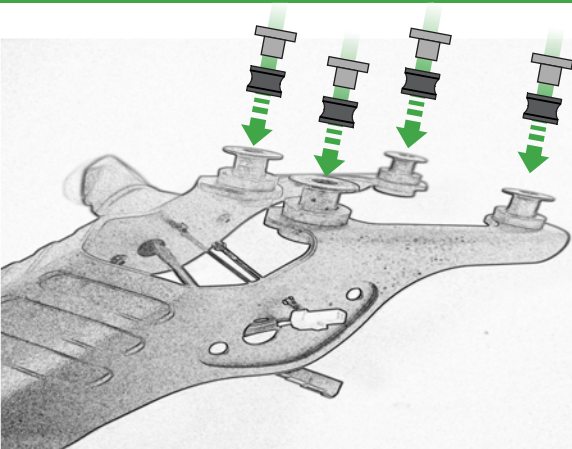


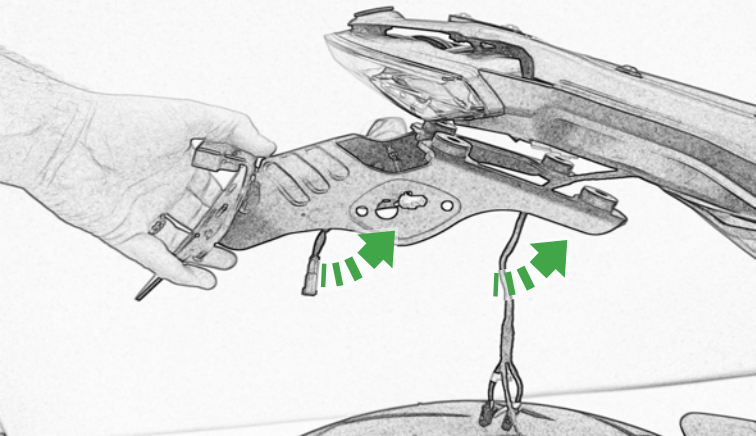

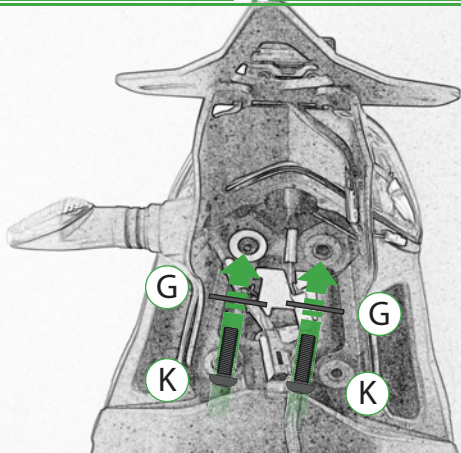

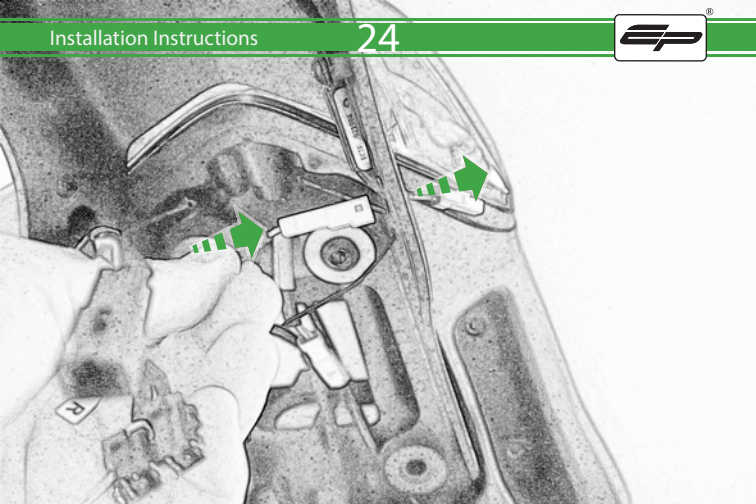

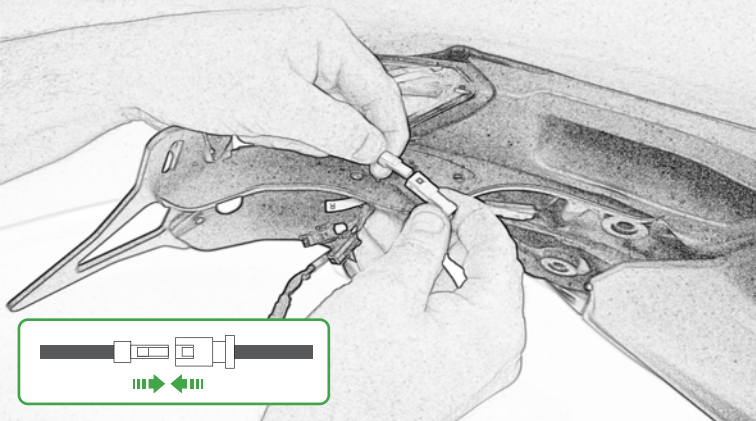


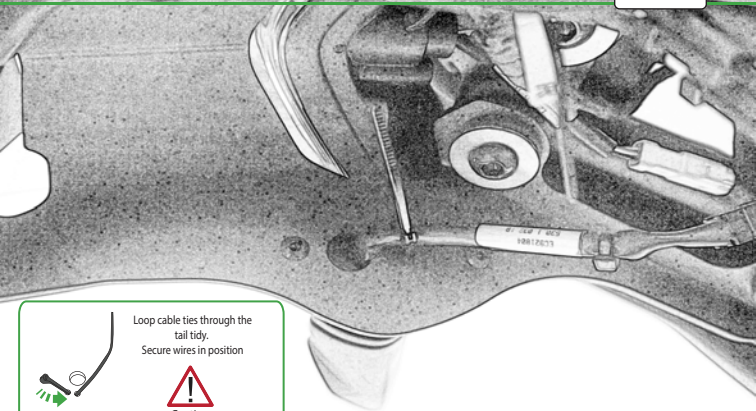



Loop cable ties through the
tail tidy.
Secure wires in position



Caution

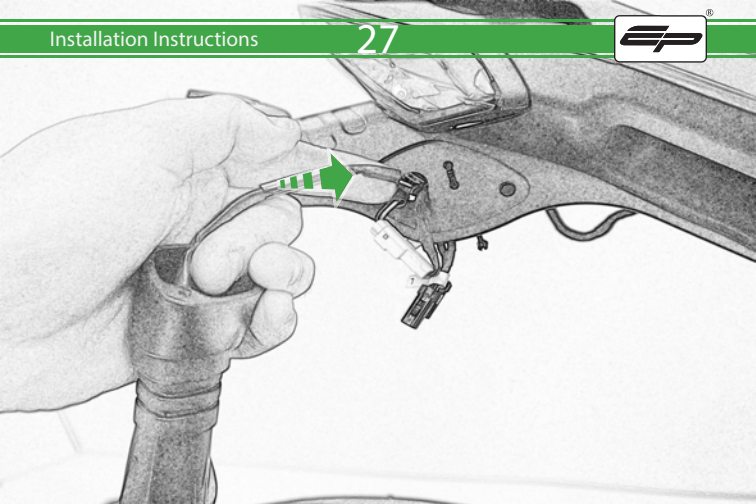

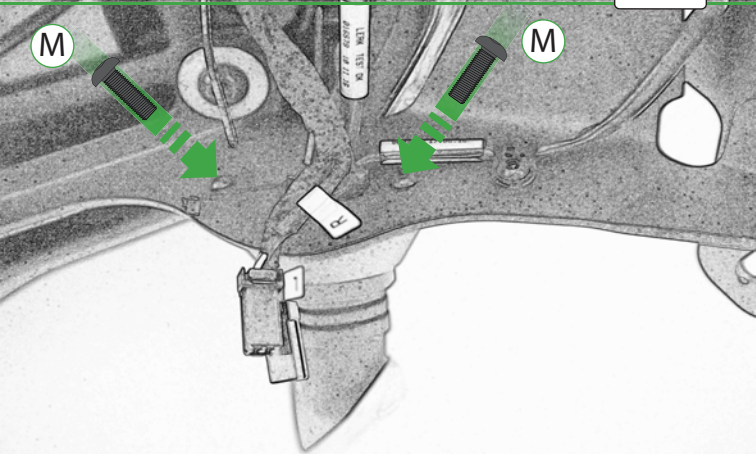

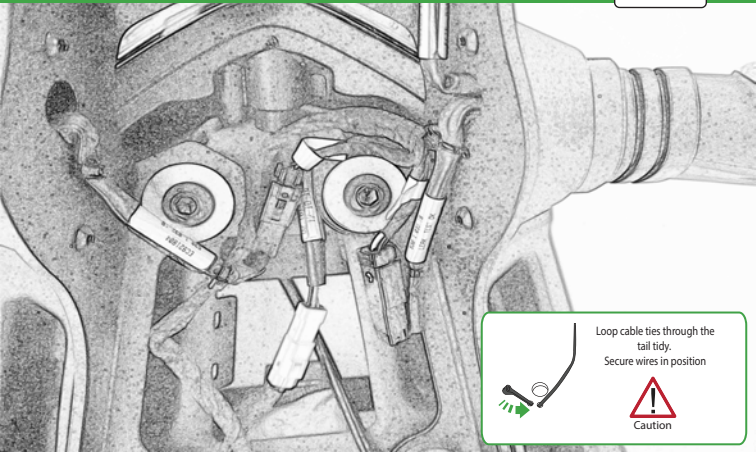

Loop cable ties through the
tail tidy.
Secure wires in position



Caution



Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed




EVOTECH
PERFORMANCE

K





H

K



H

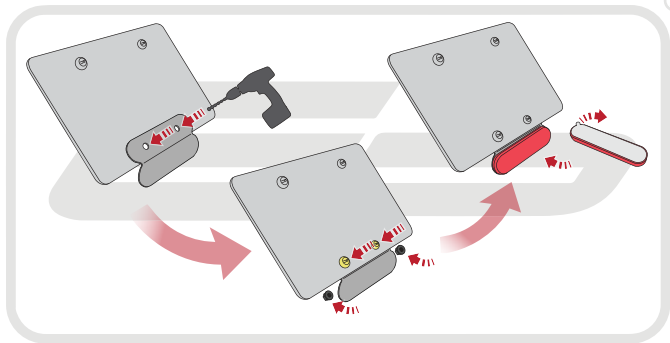

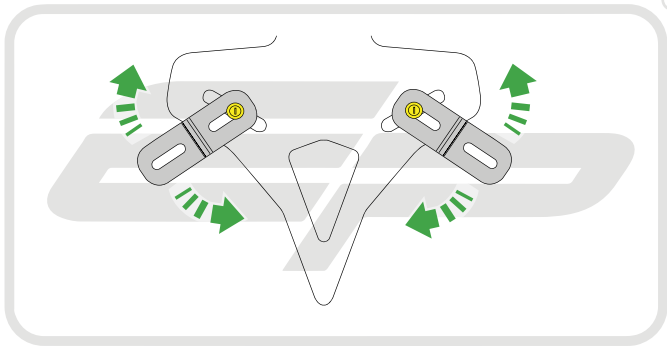



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightened.