
## Installation Instructions

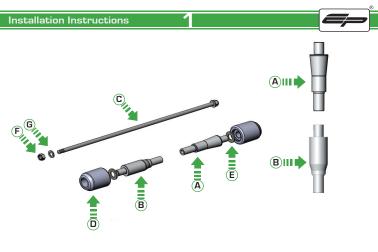



## Kit Contents PRN013903

- A 1 x L/H Stem
- B 1 x R/H StemC 1 x M12 Shaft
- © 2 x Bobbin Heads
- © 2 x Polyurethane Washers
- F 2 x M12 Nuts
- © 2 x M12 Washers






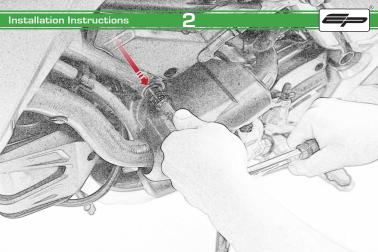


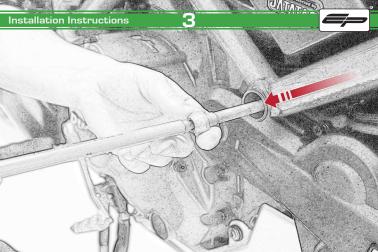






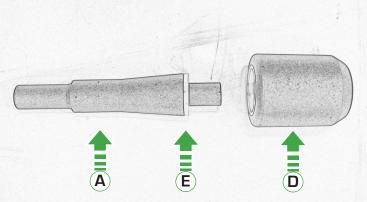


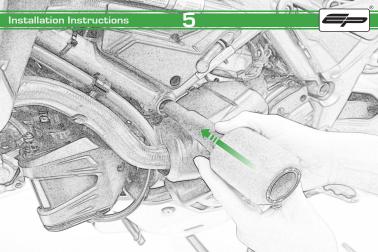


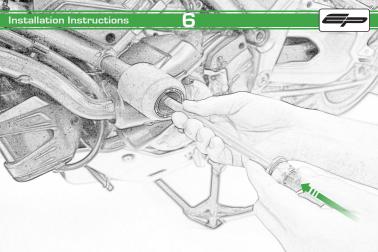


## Installation Instructions



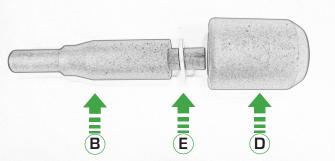

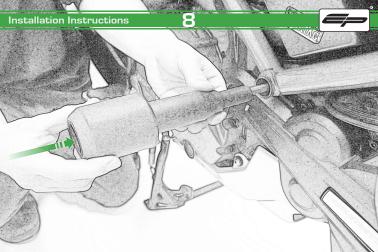



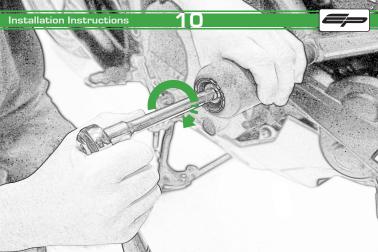





## M ESSENTIAL CHECKS /



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

