







## Kit Contents PRN013979 & PRN012541


- (A) 1 x Exhaust Bracket
- (B) 1 x Header Bracket
- (C) 1 x Inner Grill
- (D) 2 x Cable Ties
- (E) 2 x Grommets
- (F) 2 x Top Hat Spacer
- (G) 3 x M6 Black Washer
- (H) 4 x M4 Flange Nuts
- (I) 5 x M6 x 12mm Black Button Head Bolts

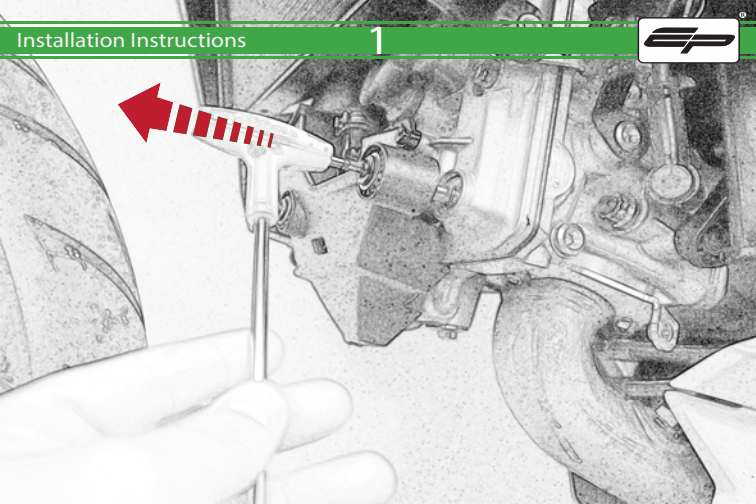

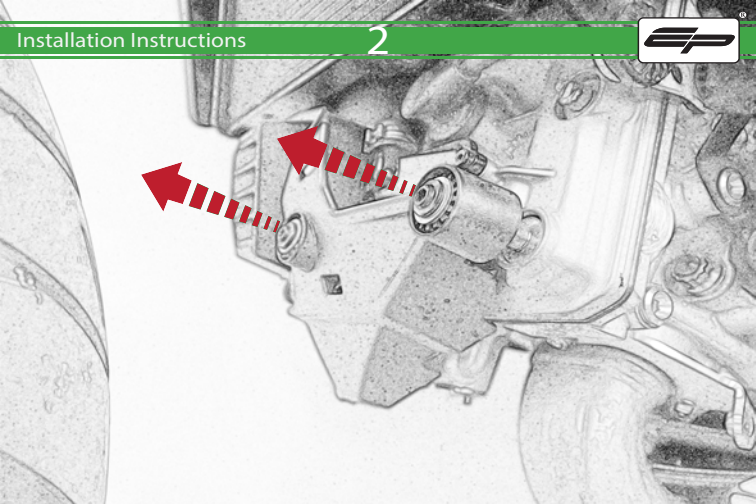




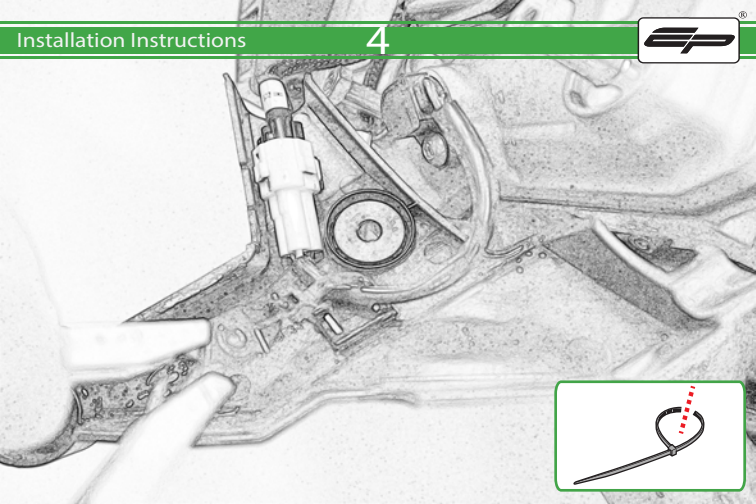


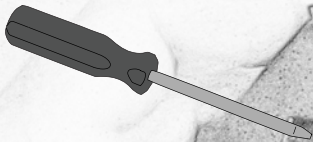


Caution


Remove Clip Using  
A Screwdriver

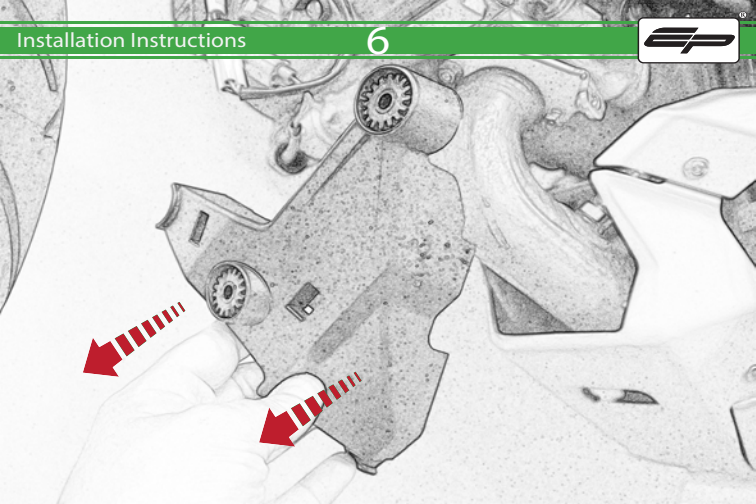

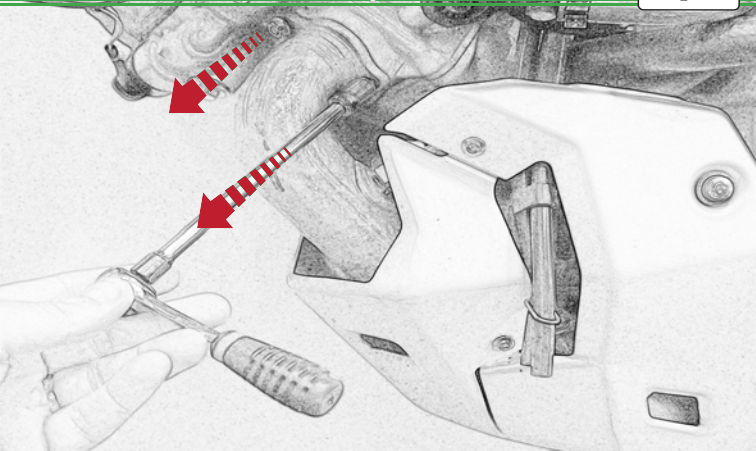






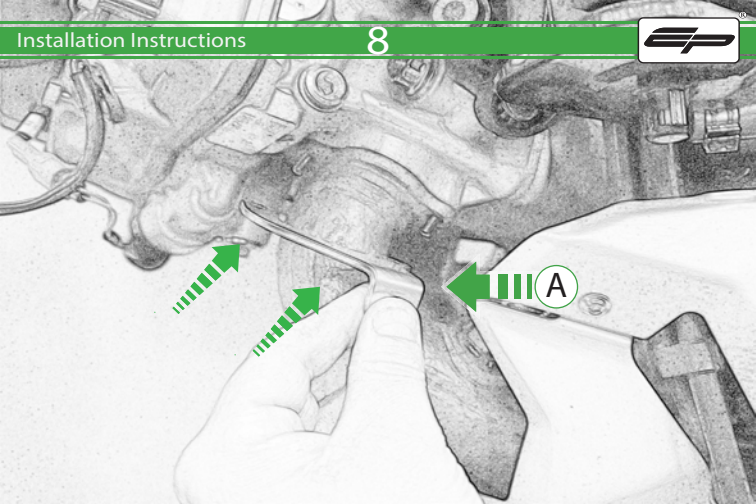



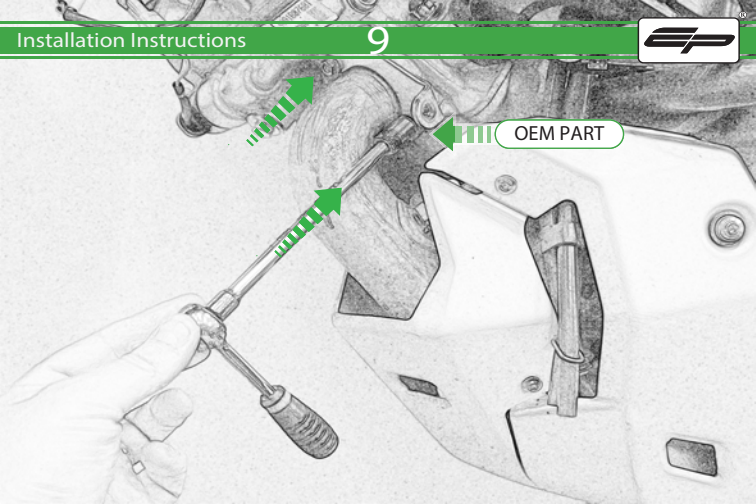



OEM PART

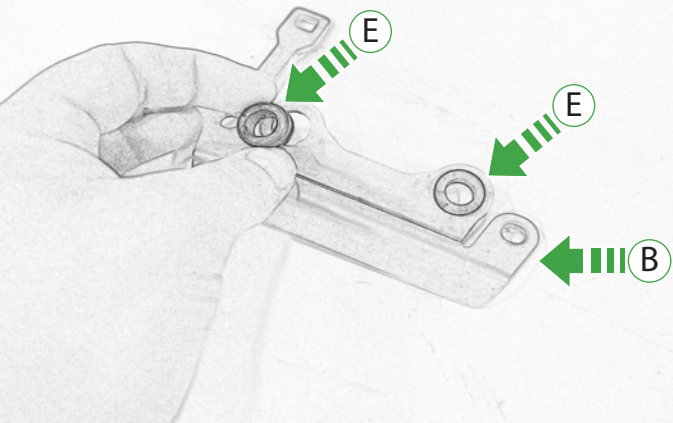


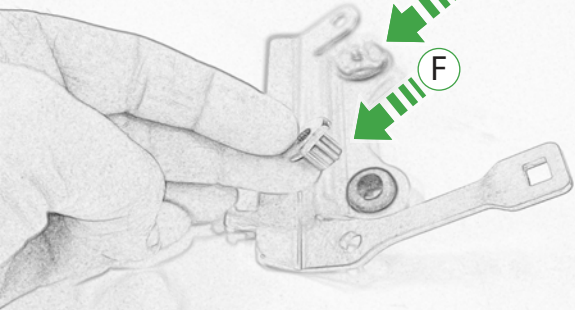

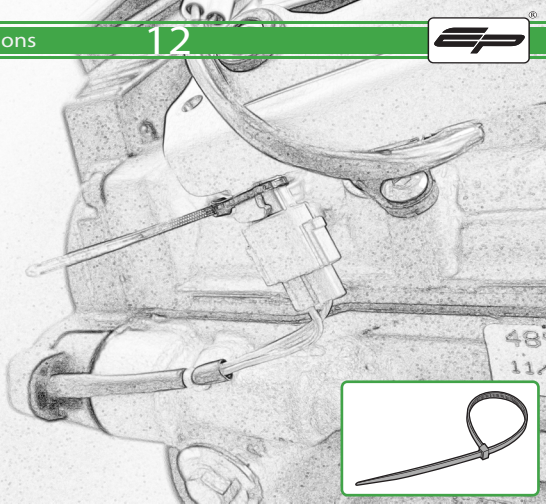


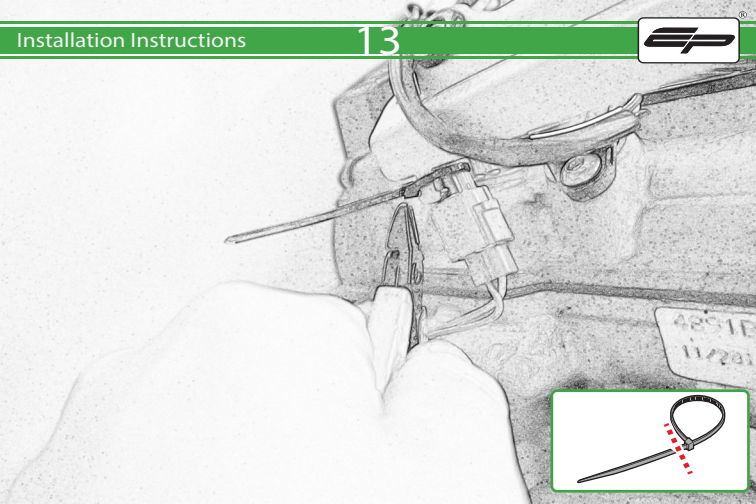

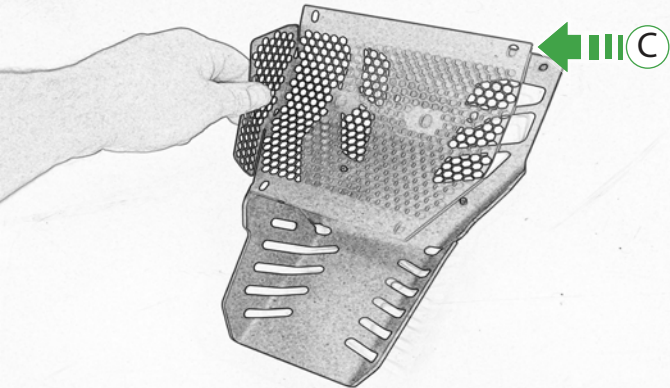


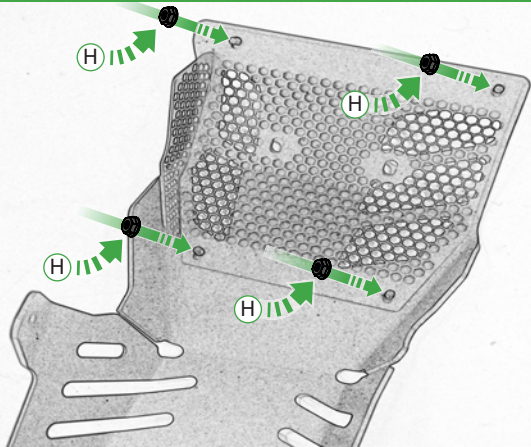





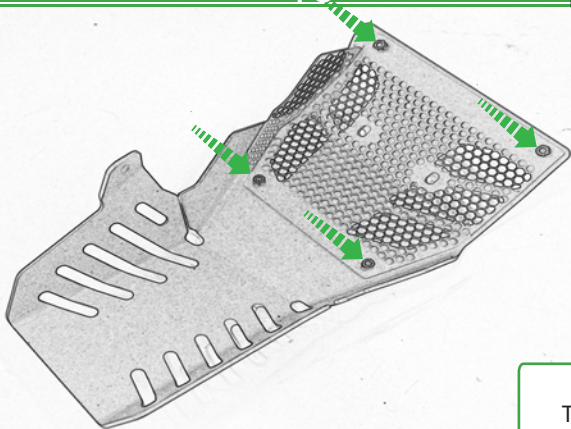


Fully  
Tighten

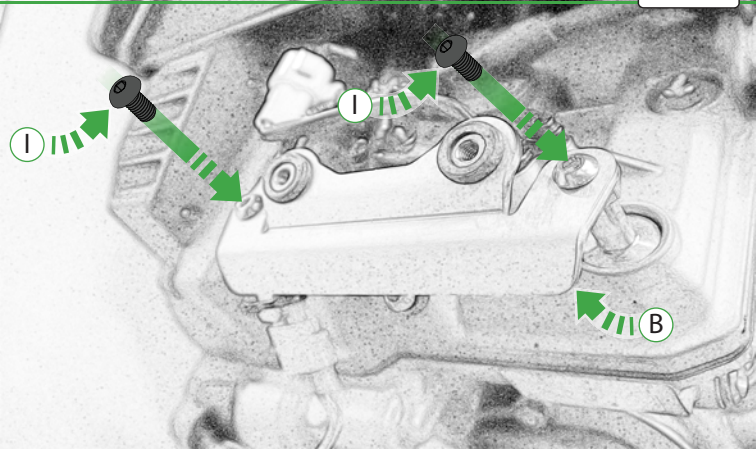

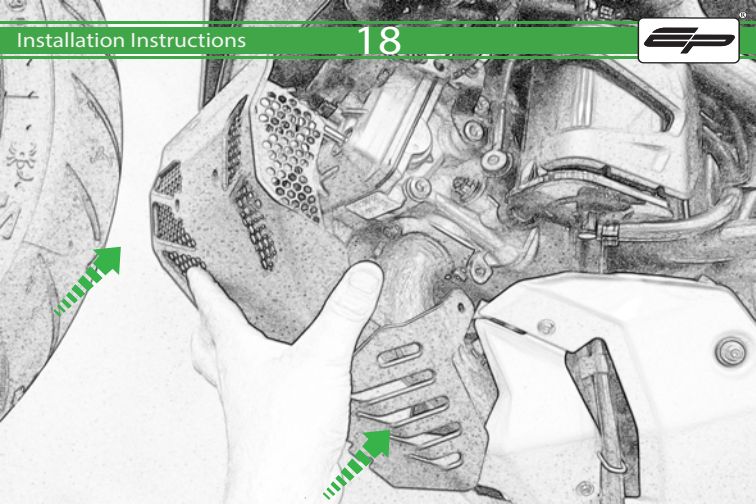

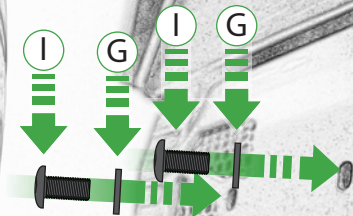


Do Not  
Fully Tighten

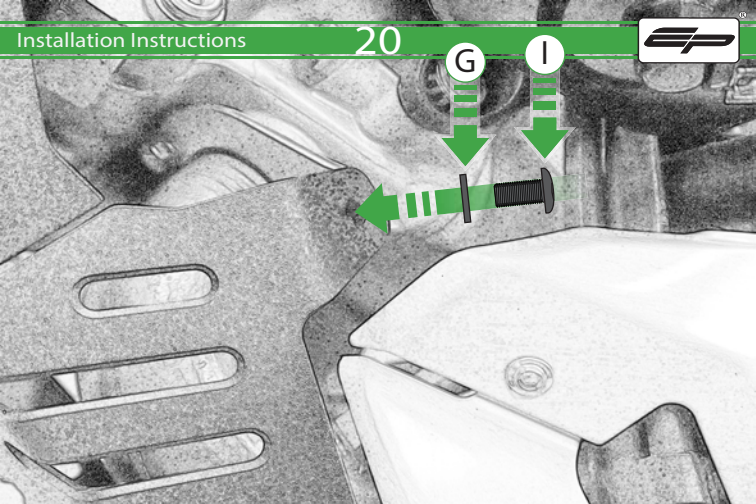

G

I

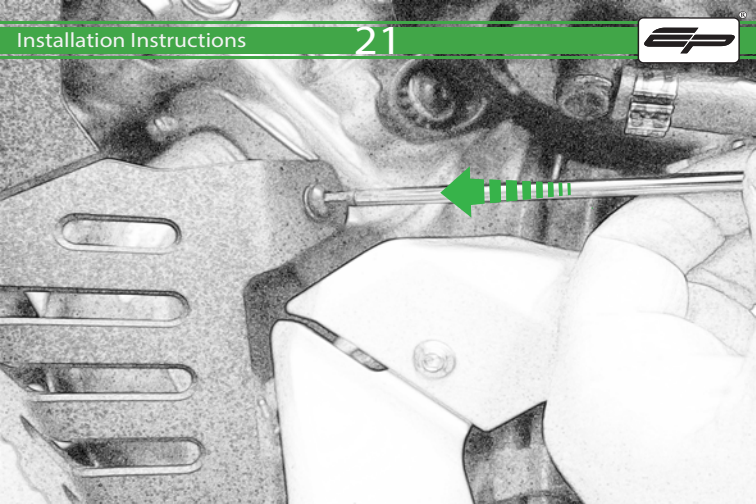



Adjust Guard  
And Fully Tighten



Adjust Guard  
And Fully Tighten





 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced