




Kit Contents PRN014090

- (A) 1 x Bracket
- (B) 2 x Spacer
- (C) 2 x Rubber Bungs
- (D) 4 x M6 x 10mm Black Button Head Bolts

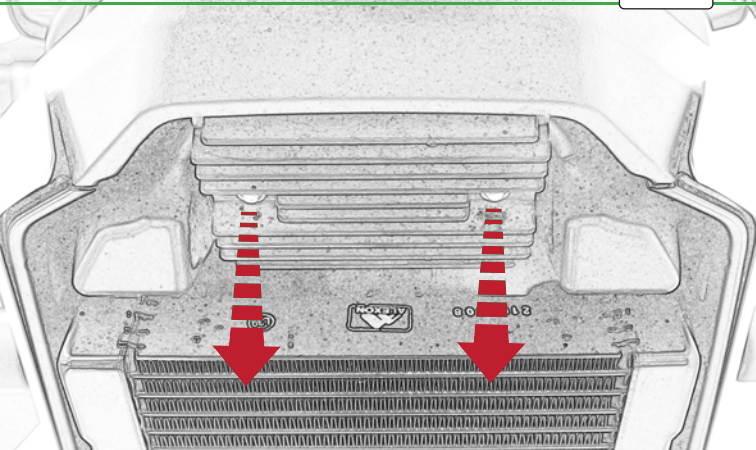




B




Repeat
Both Sides


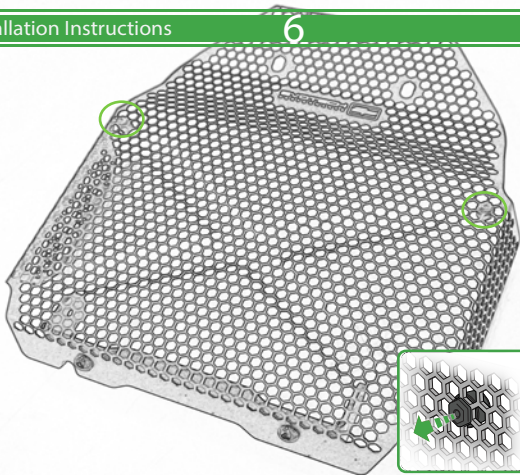


Repeat
Both Sides

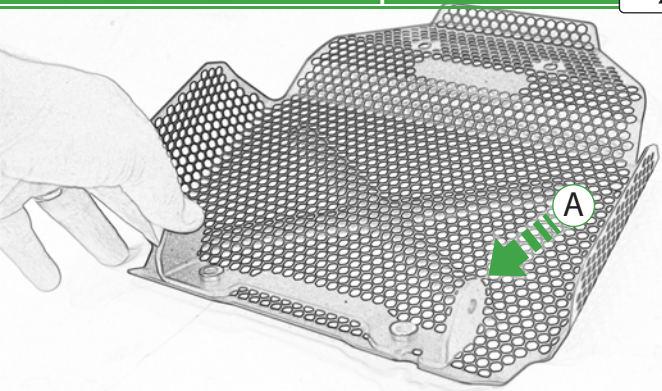

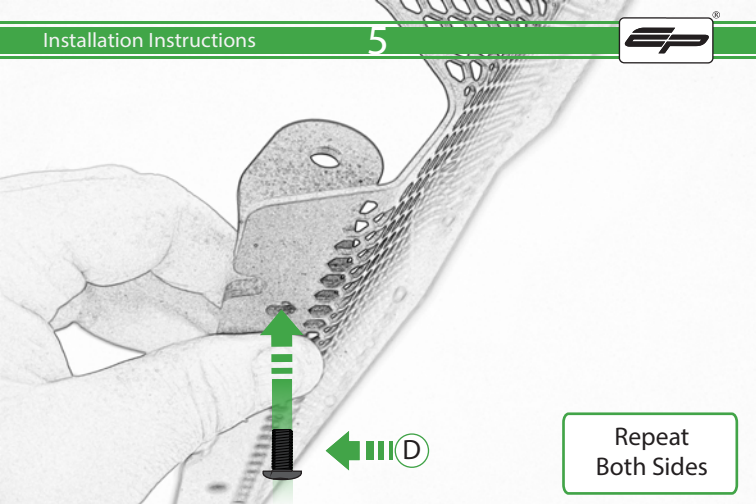


Repeat
Both Sides




Locate round holes amongst hexagons.

Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face


The inset diagram shows a close-up of the hexagonal mesh. A black rubber spacer, which has a hexagonal shape on one end, is being pushed through a hole from the back side. A green arrow points to the left, indicating the direction of the push. The spacer's hexagonal end is shown protruding from the front side of the mesh.

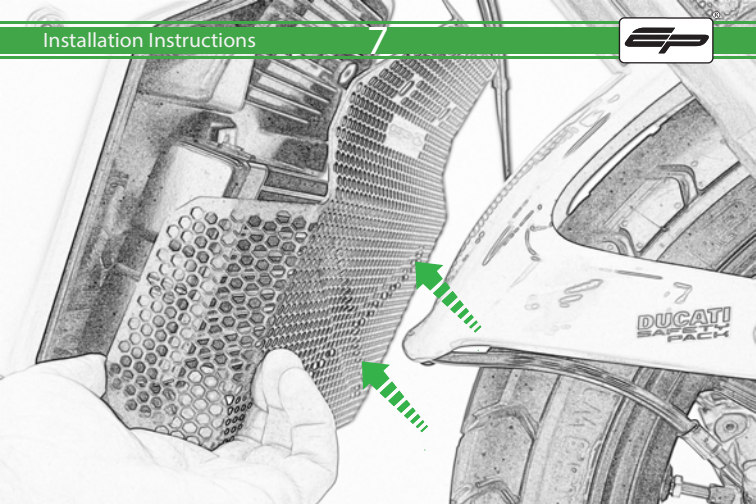


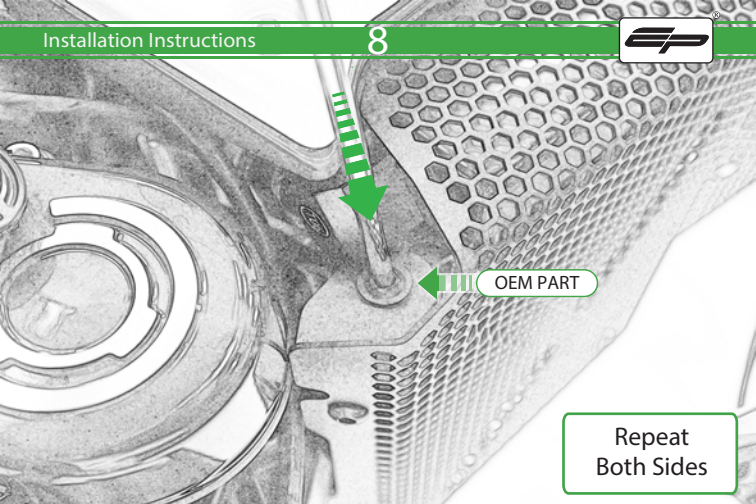

OEM PART

Repeat
Both Sides

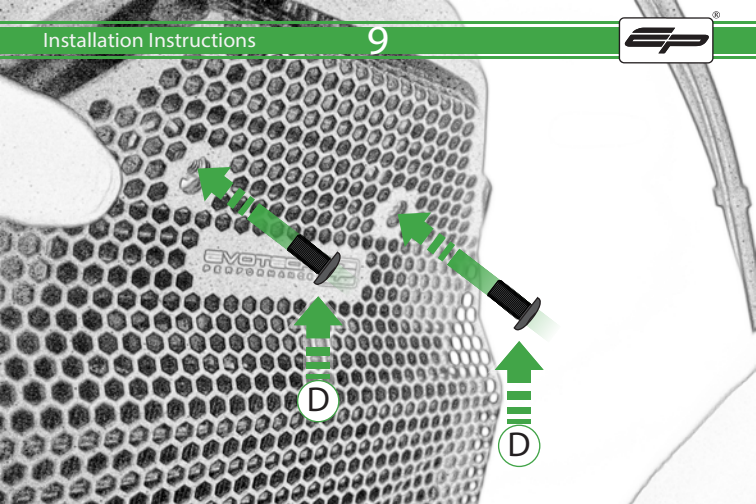

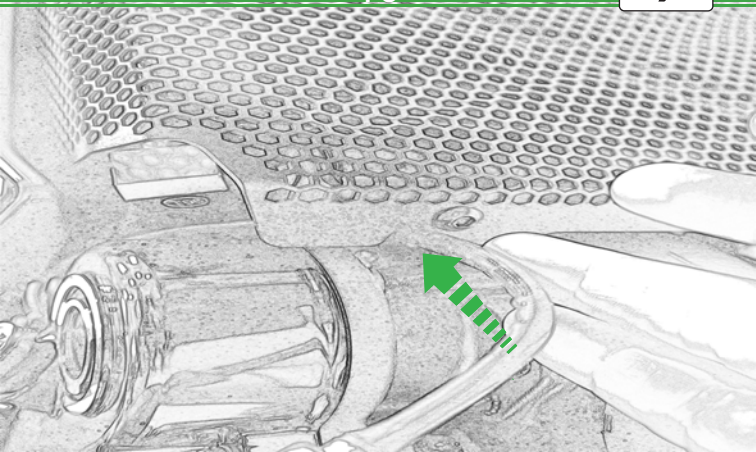



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.