







## Kit Contents PRN014118



- (A) 1 x Reflector Kit
- (B) 1 x P-Clip
- (C) 1 x M4 x 8mm Black Button Head Bolts
- (D) 2 x M4 x 10mm Capheads
- (E) 2 x M5 x 12mm C/Sink
- (F) 2 x Spacer (Rear Light Spacer)
- (G) 2 x Spacer
- (H) 4 x M6 x 16mm Black Button Head Bolts


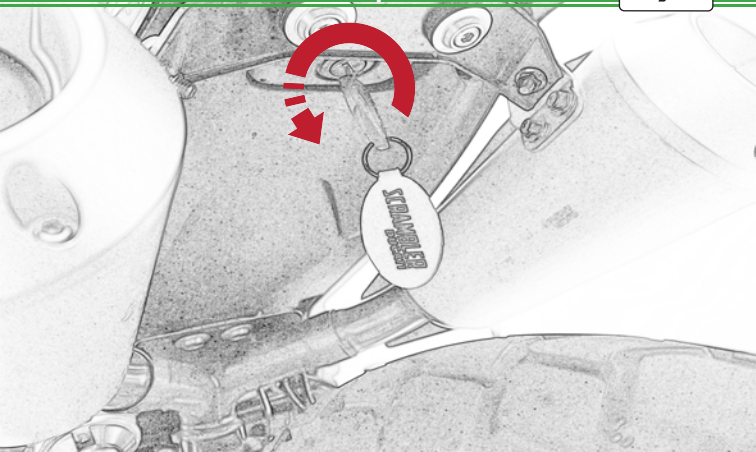


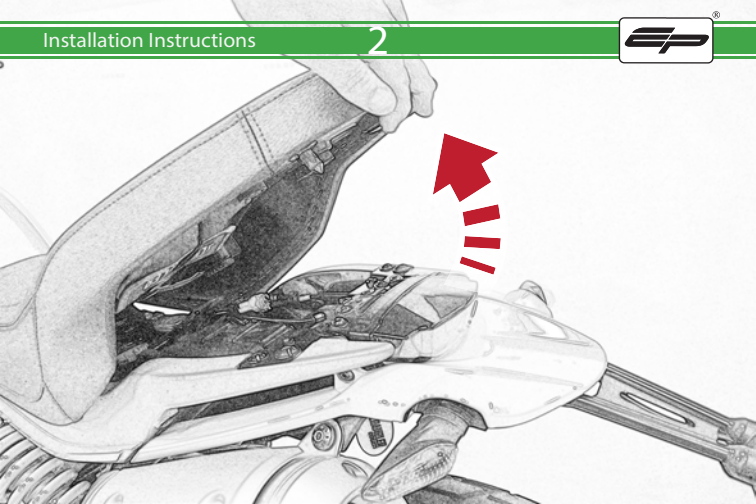


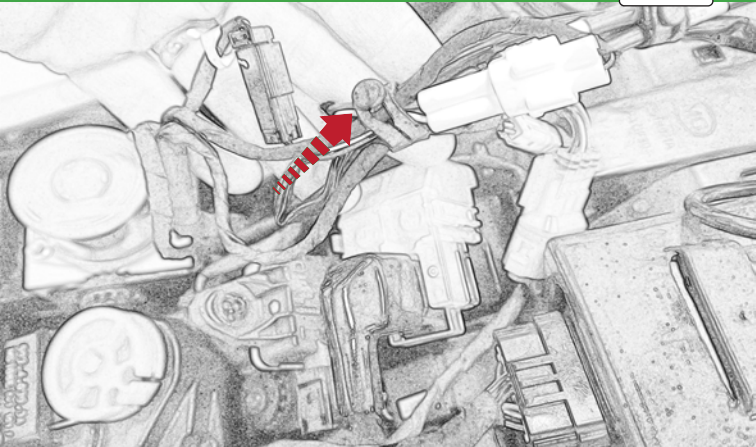

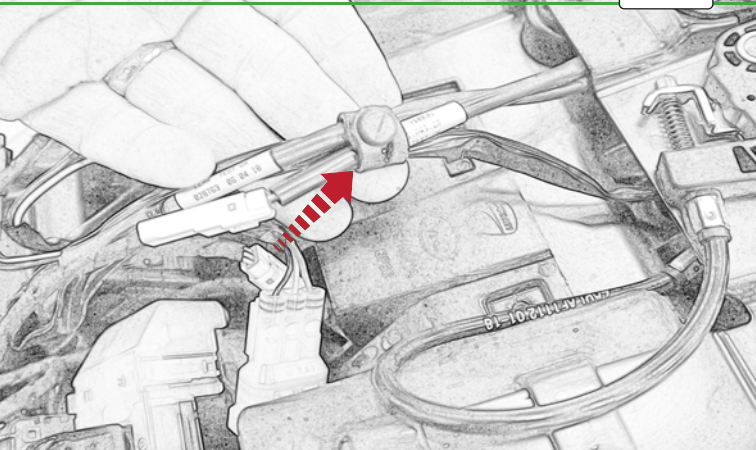

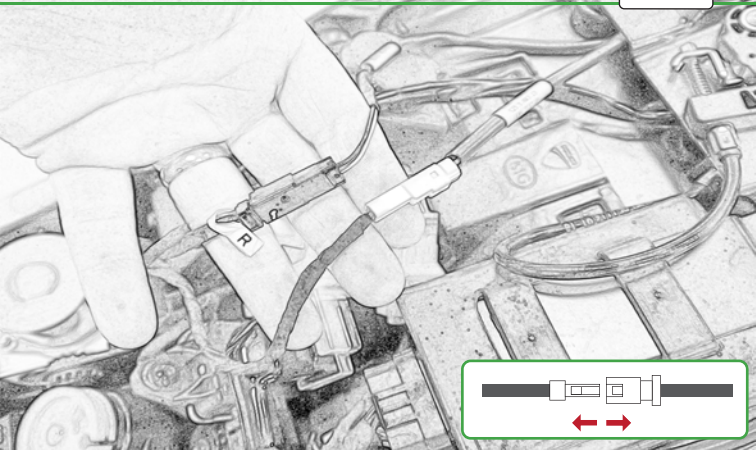


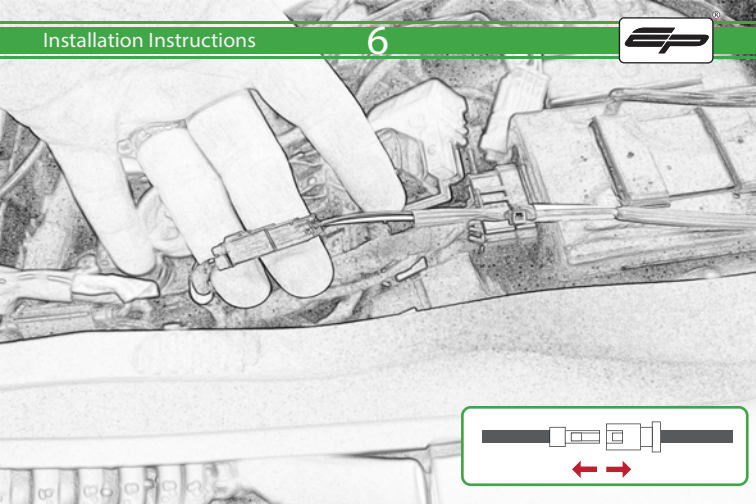

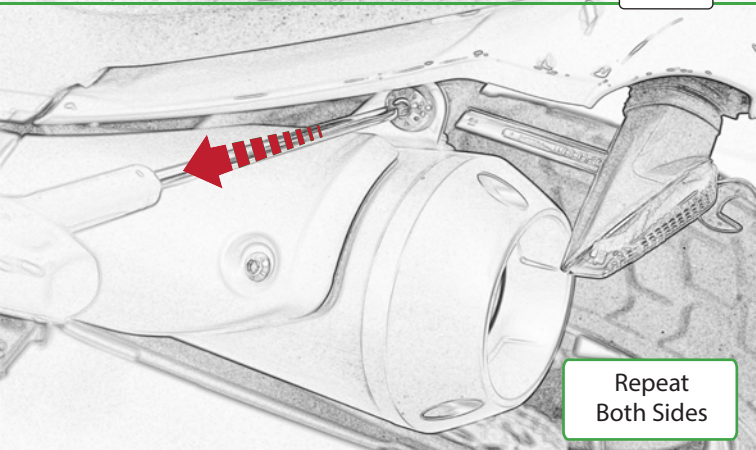



Repeat  
Both Sides



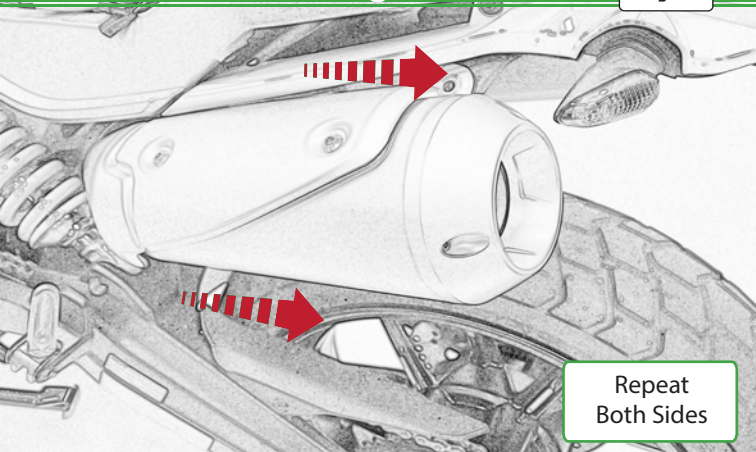


Repeat  
Both Sides

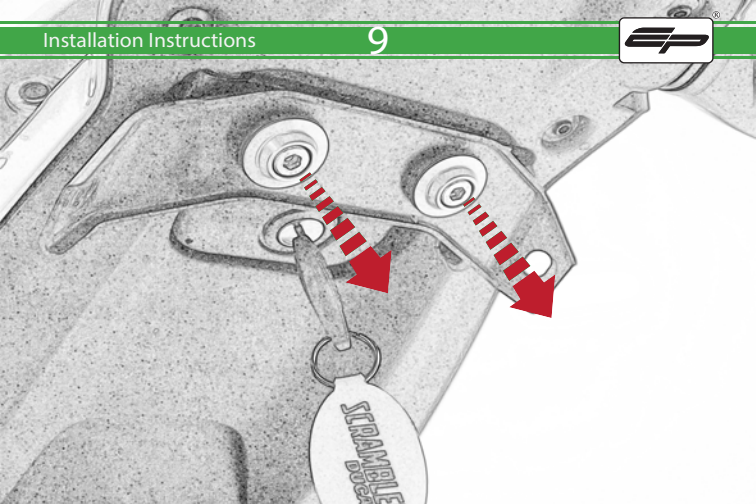


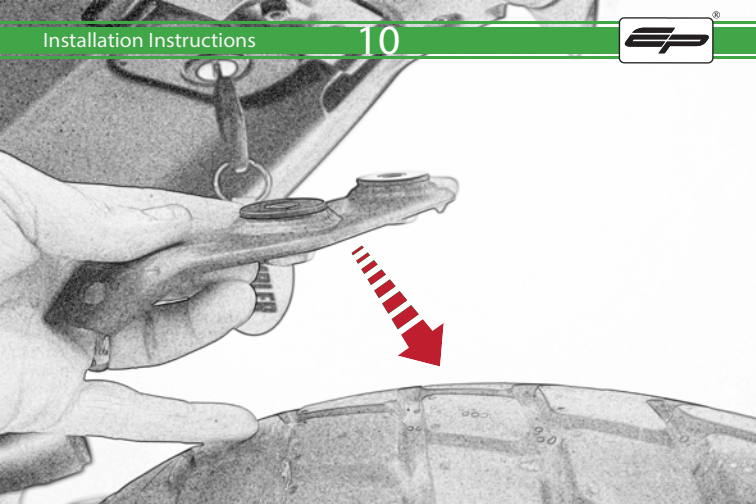



## Installation Instructions

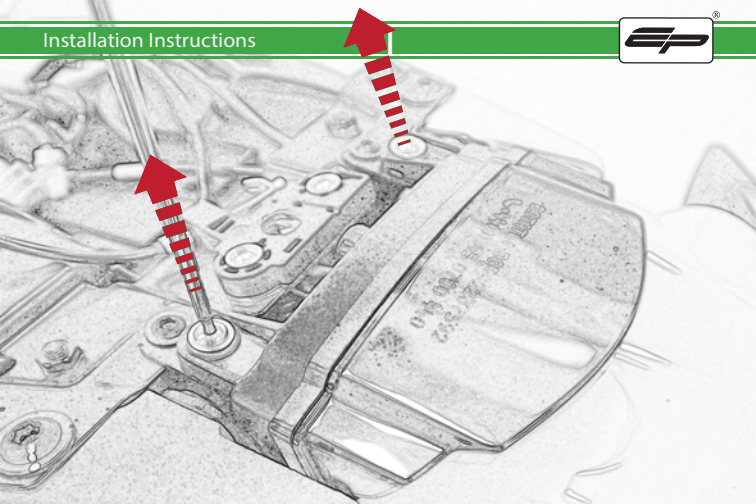




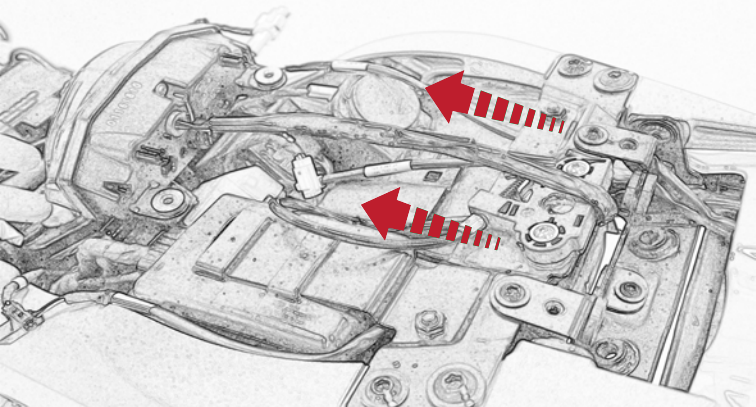

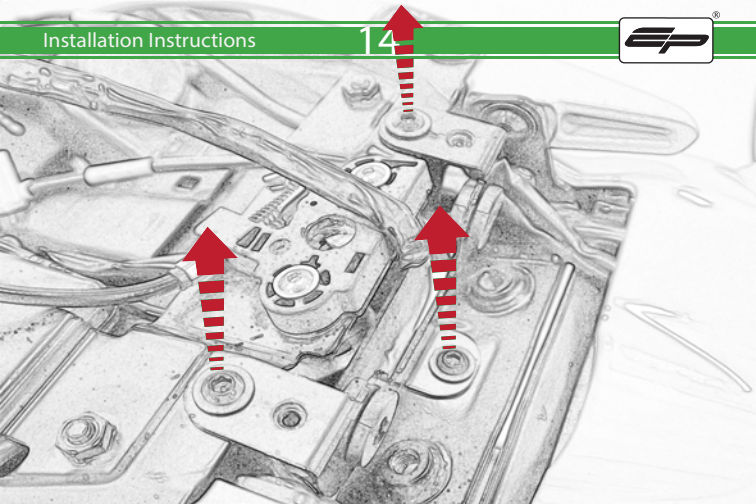


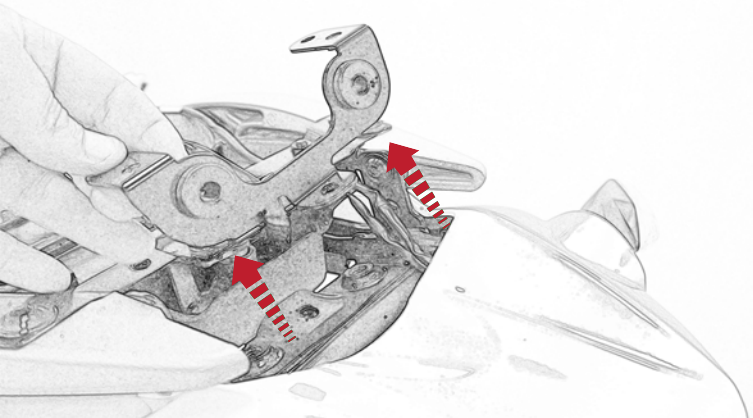




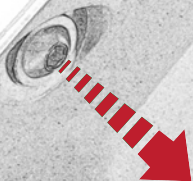


Repeat  
Both Sides

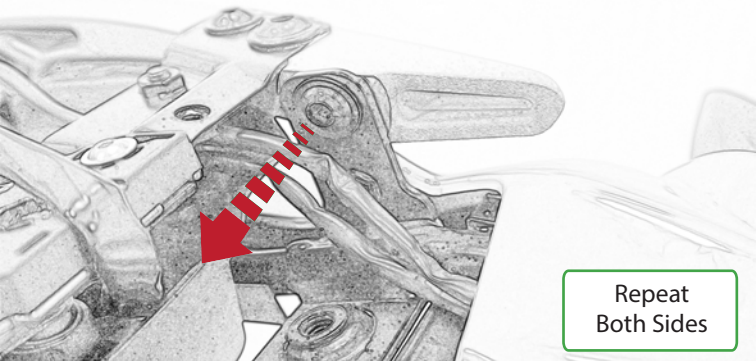


Repeat  
Both Sides

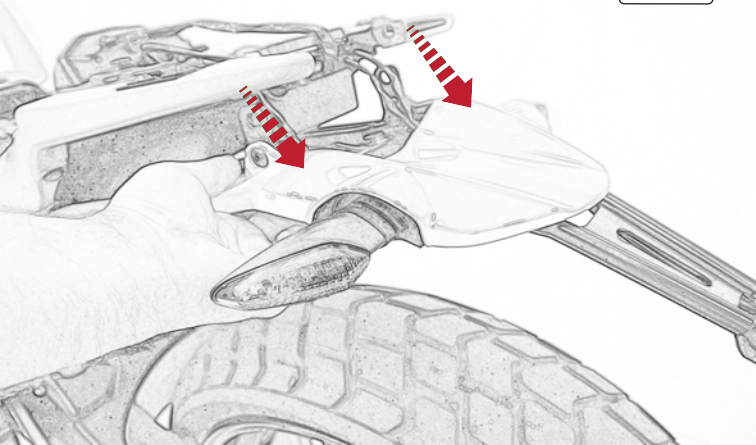

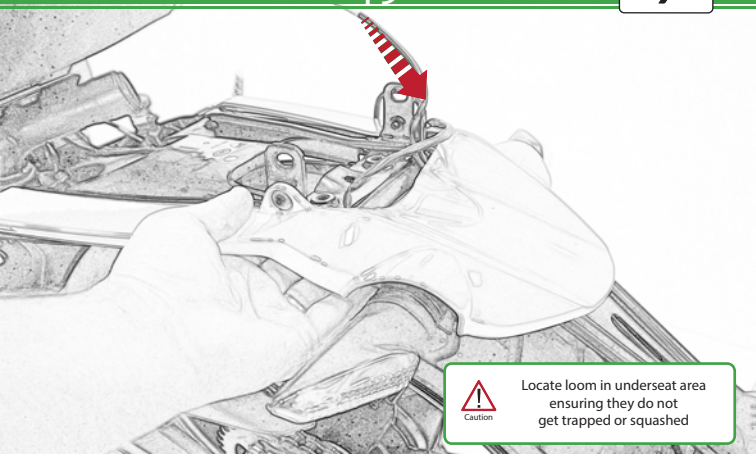



Caution


Locate loom in underseat area  
ensuring they do not  
get trapped or squashed

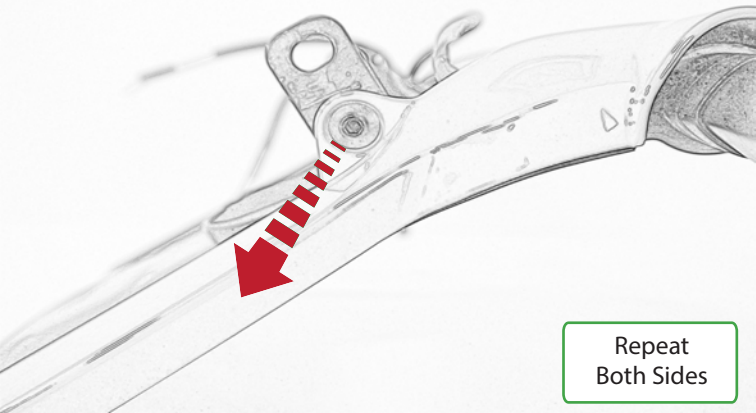


Repeat  
Both Sides

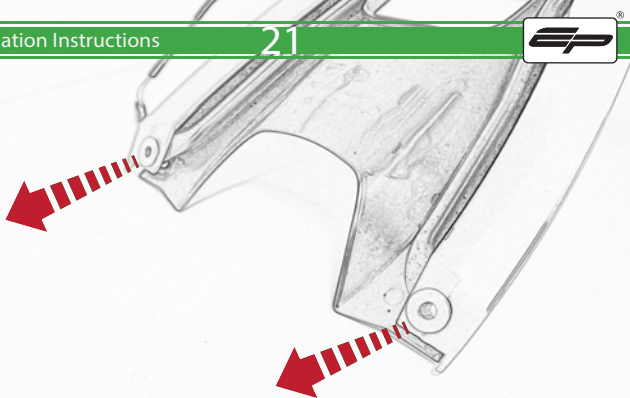


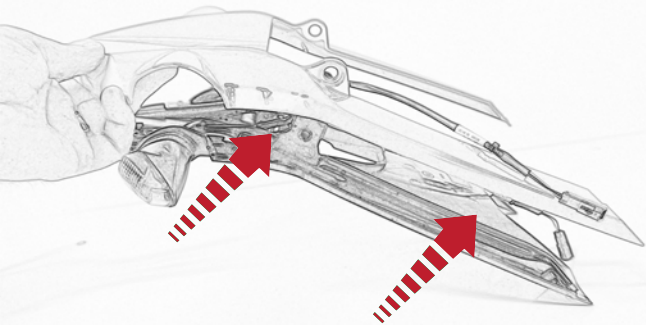


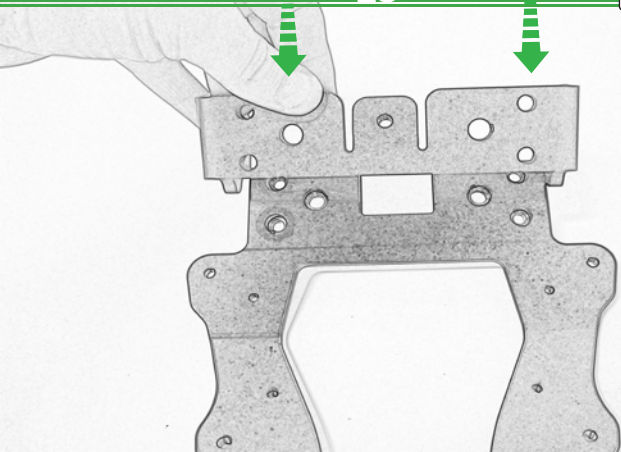




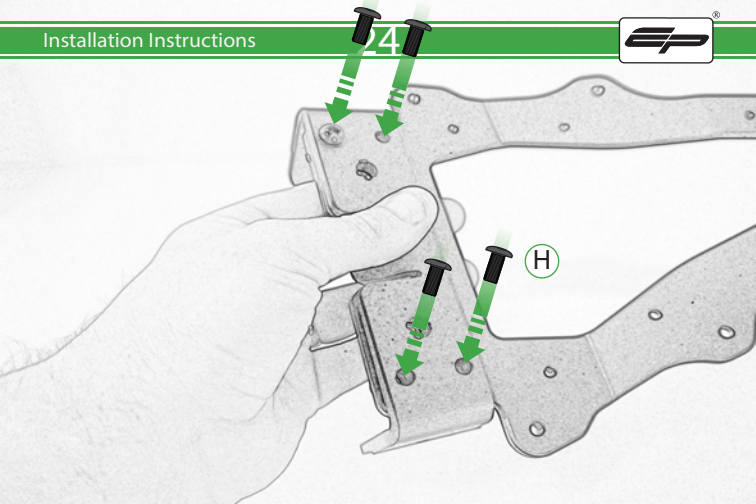


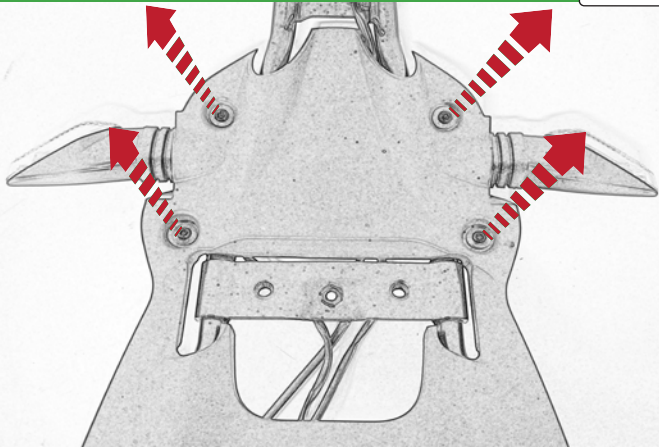



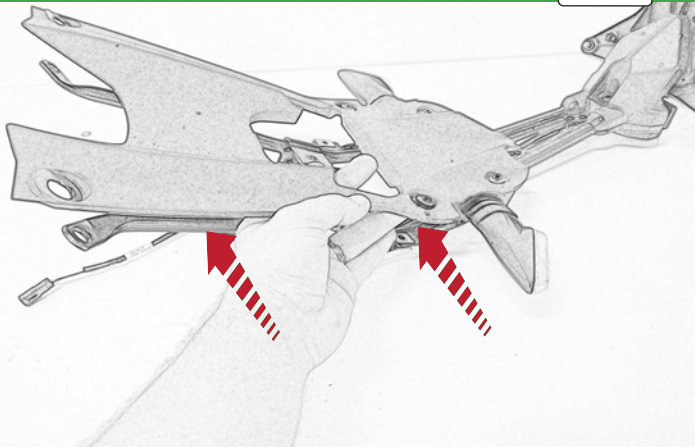


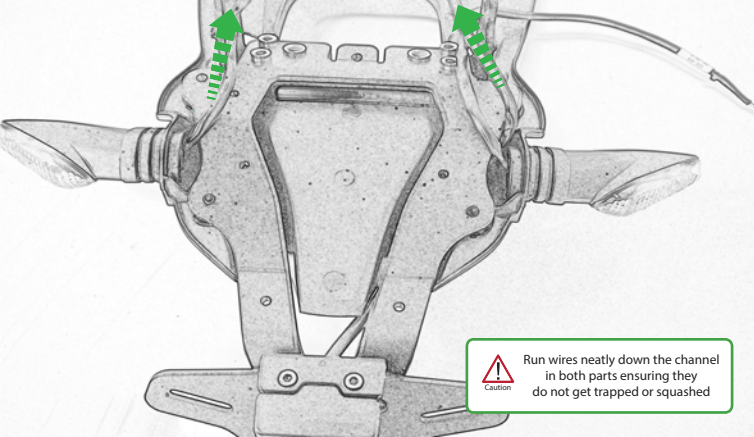


Run wires neatly down the channel  
in both parts ensuring they  
do not get trapped or squashed

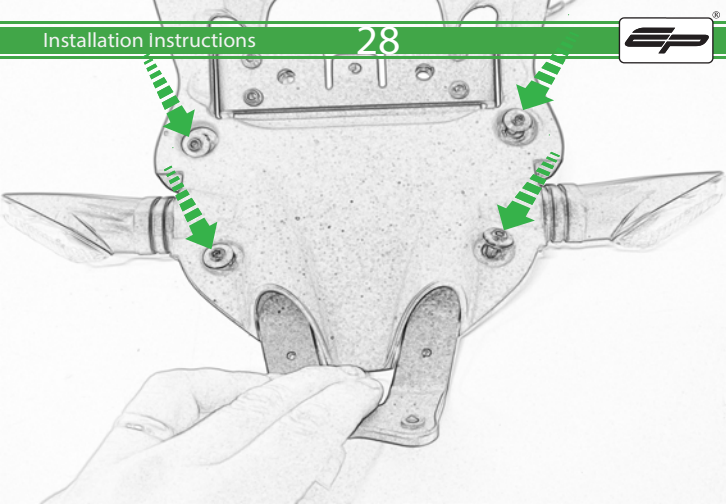


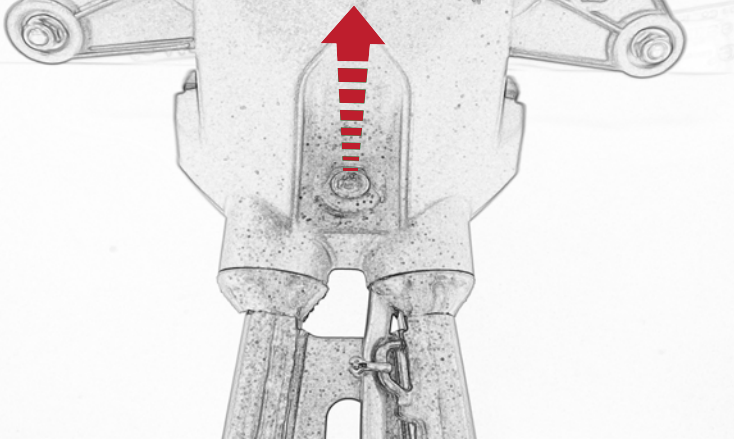


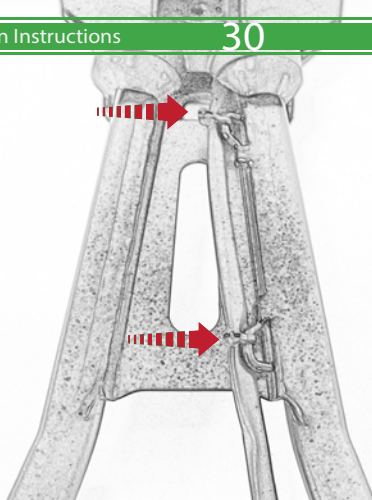


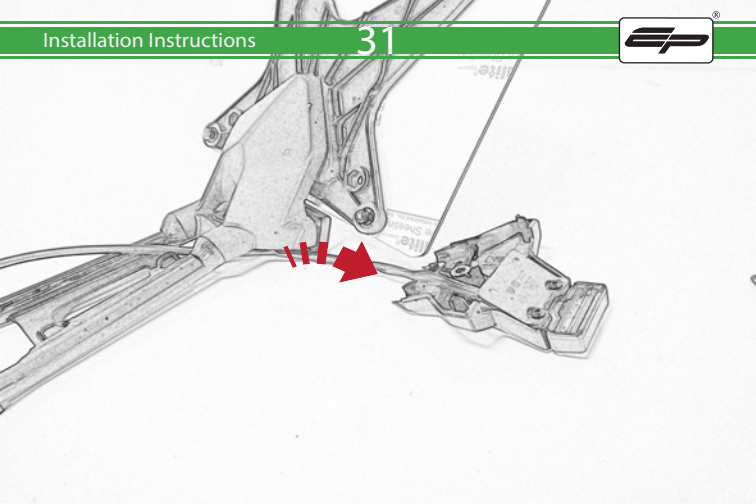





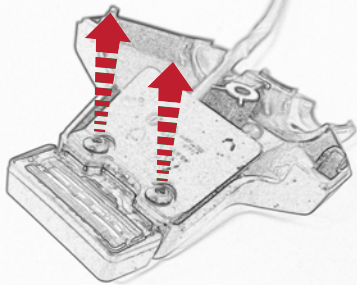


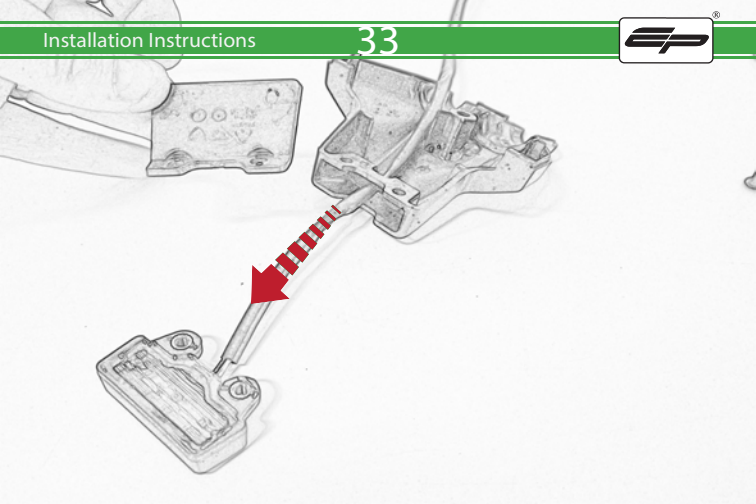


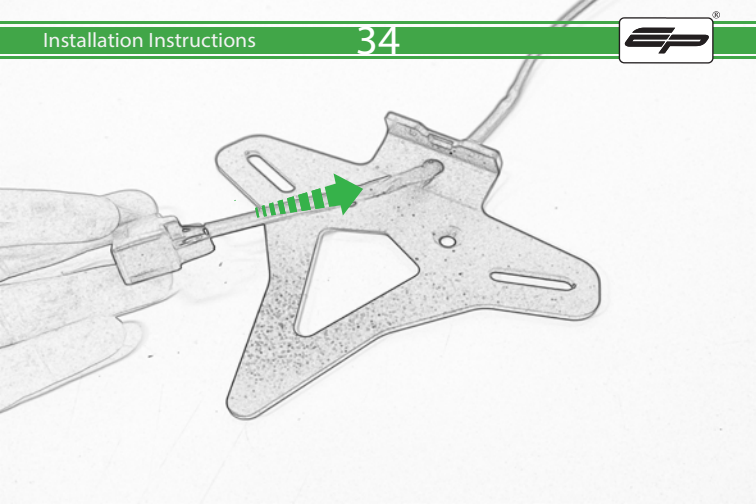


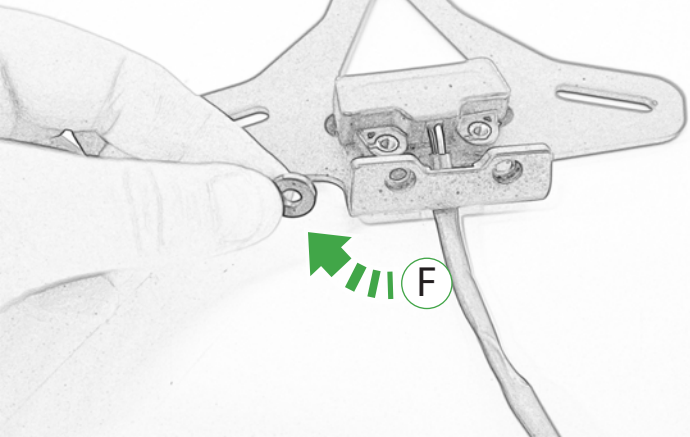

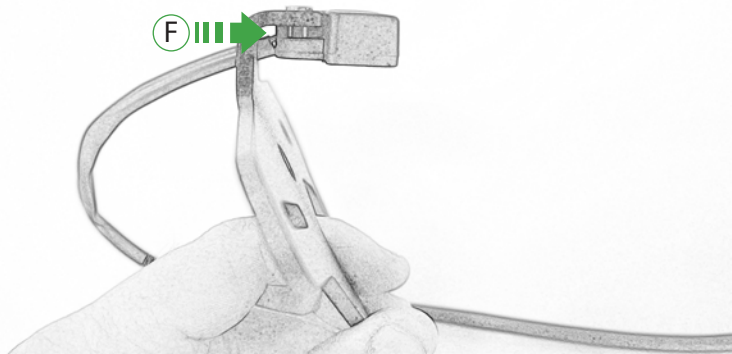


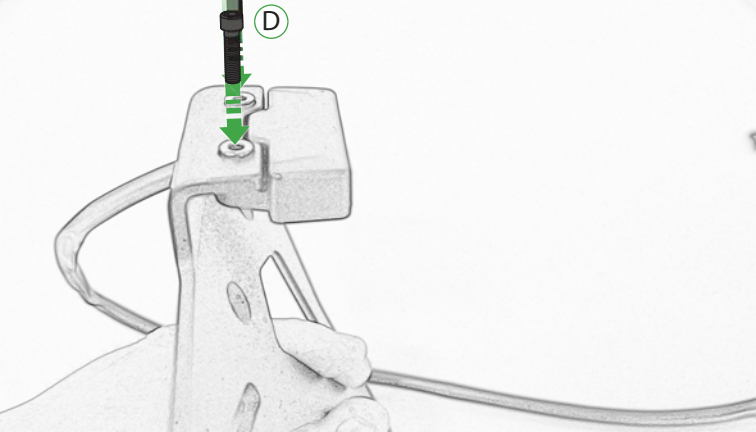

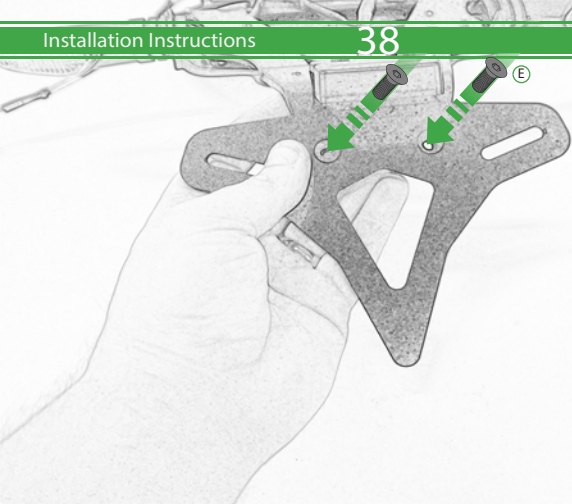

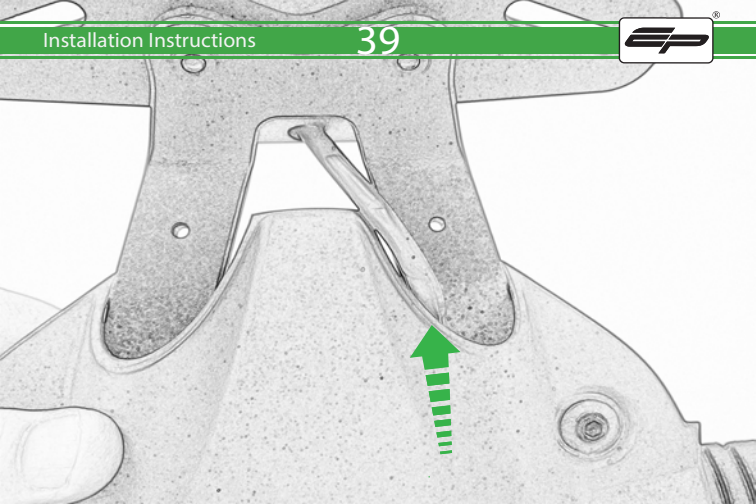



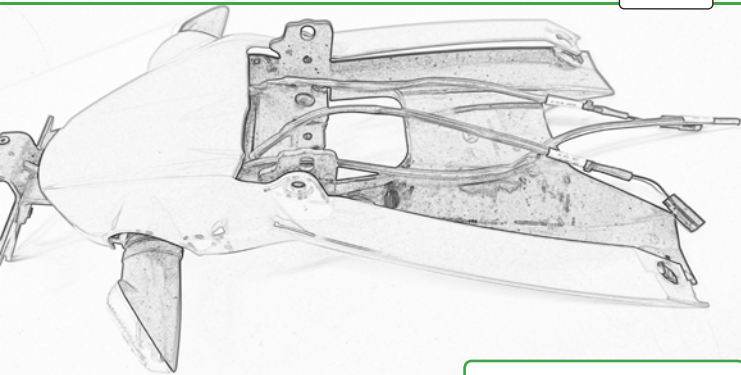

Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed




OEM PART

The diagram shows a close-up of a vehicle's rear suspension assembly. A metal rod is being inserted into a circular hole in a metal housing. A green arrow with white diagonal stripes points from the text 'OEM PART' to the hole. Another green arrow with white diagonal stripes points from the bottom right towards the rod. The background shows the complex metal structure of the suspension system.


Repeat  
Both Sides




B

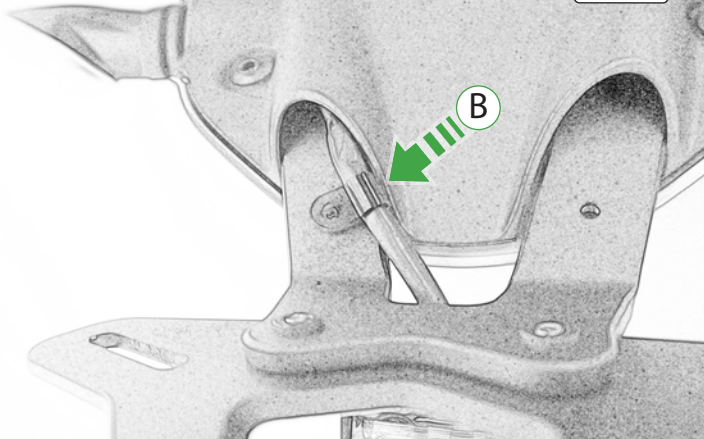



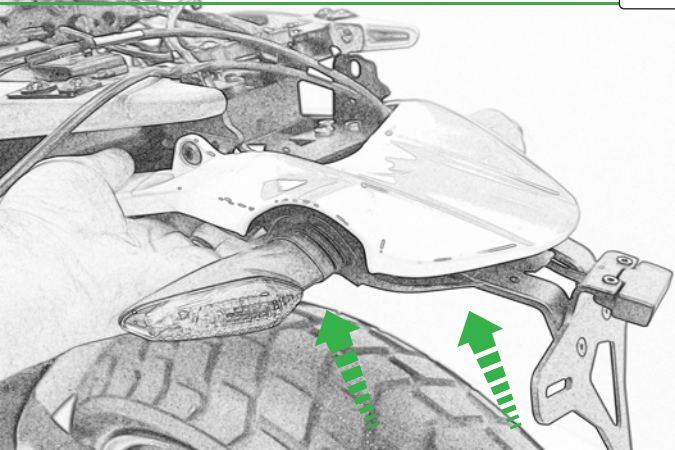

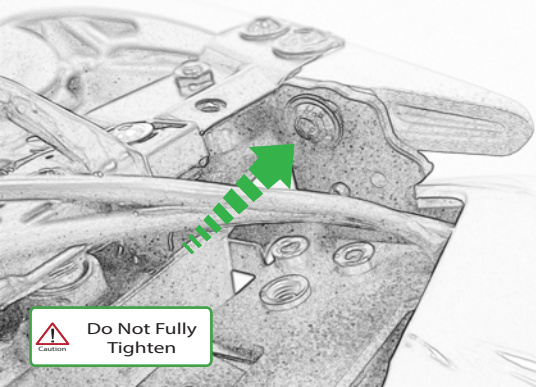


**Do Not Fully  
Tighten**

**Repeat  
Both Sides**



Do Not Fully Tighten

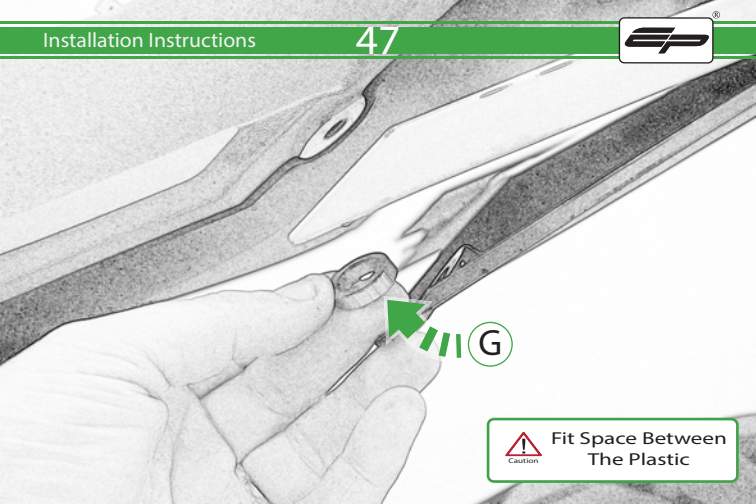


G




Caution

Fit Space Between  
The Plastic




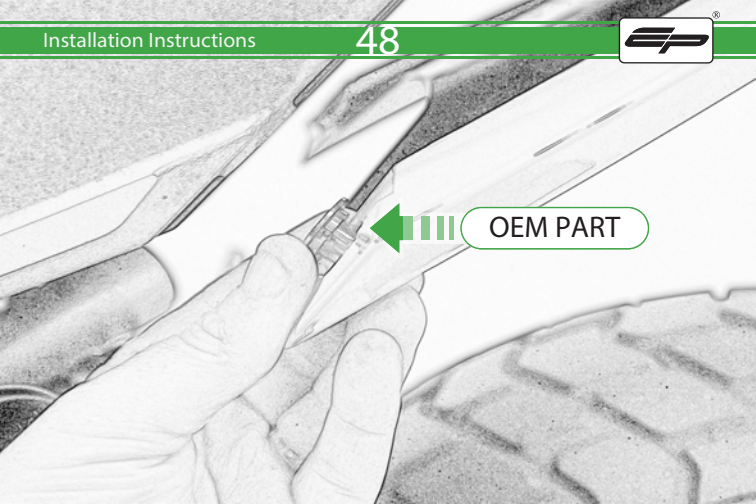



OEM PART

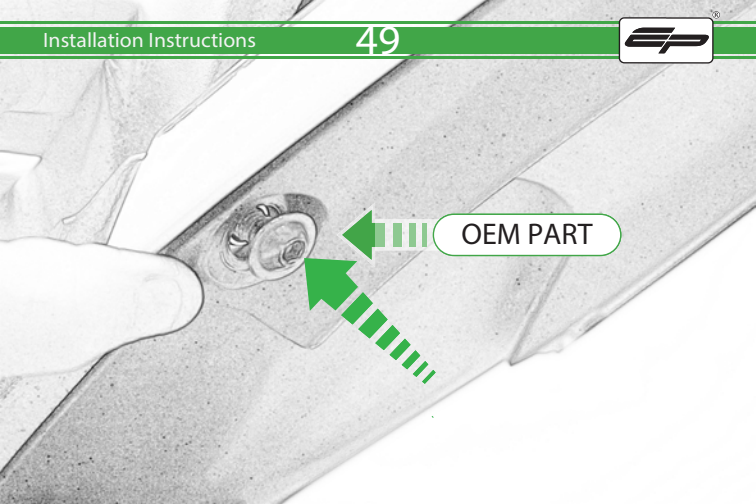


OEM PART

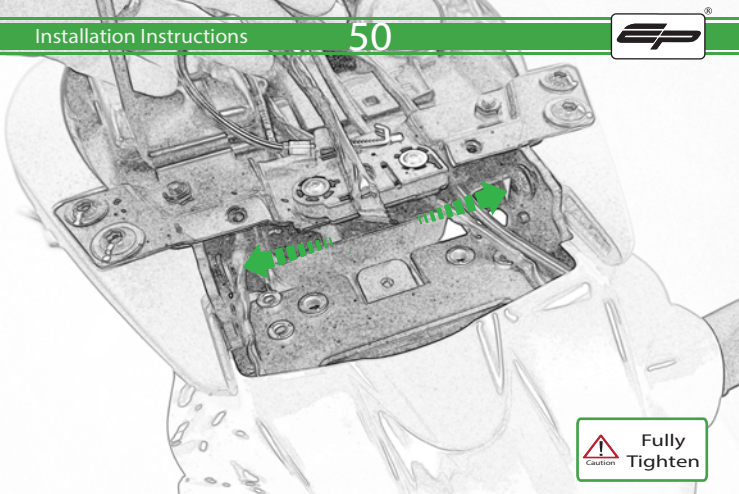

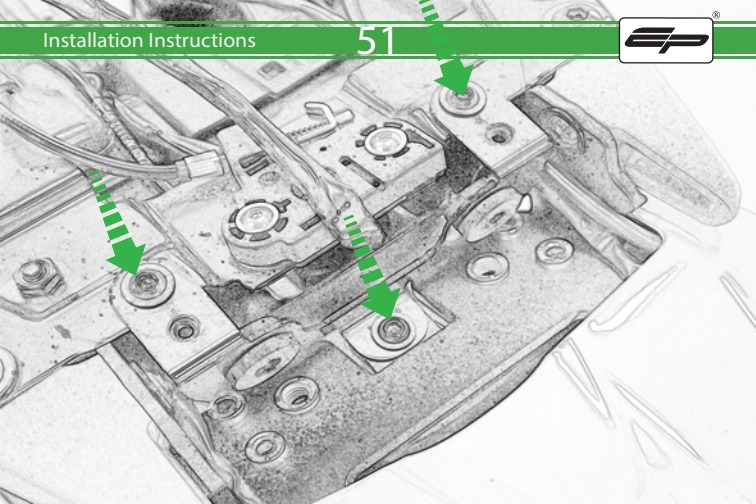

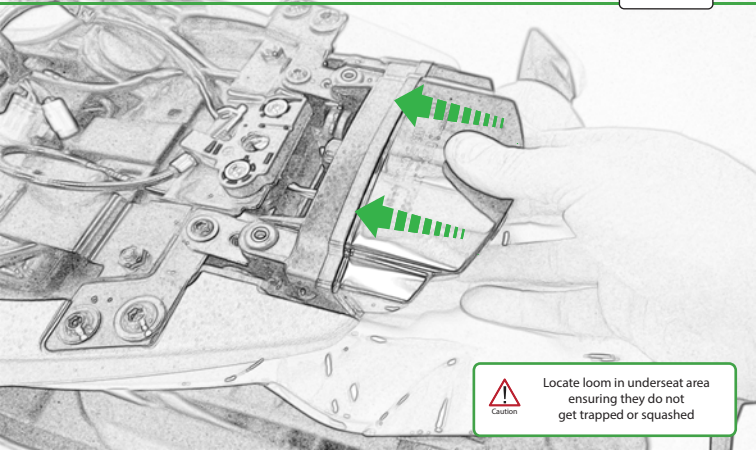



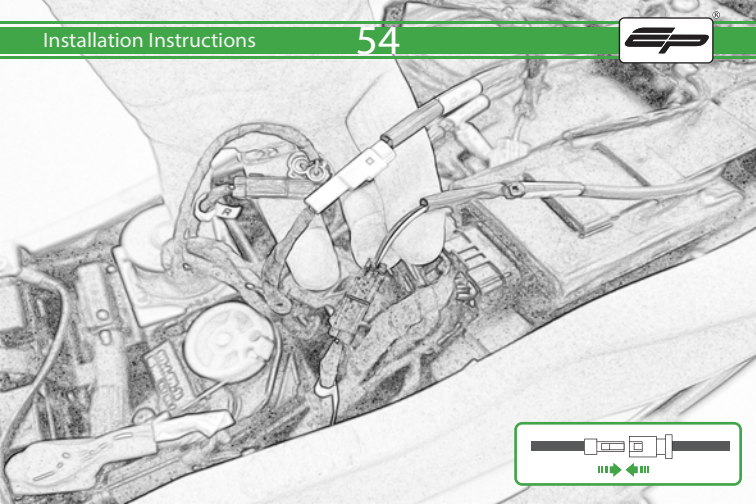
Locate loom in underseat area  
ensuring they do not  
get trapped or squashed

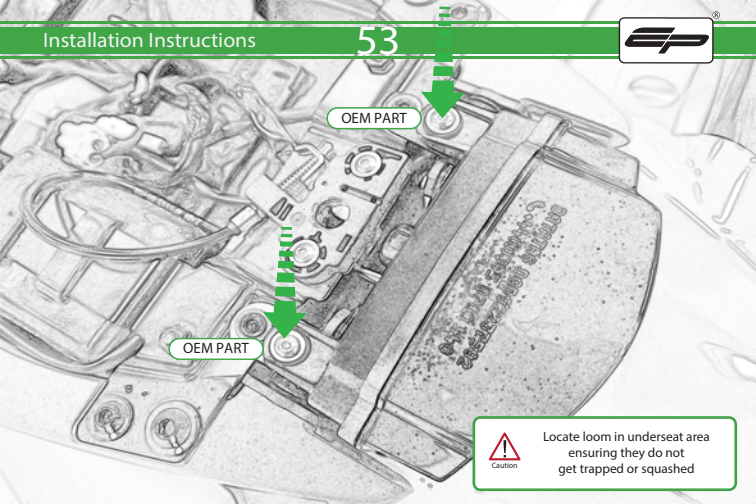

OEM PART


OEM PART


 Caution  
Locate loom in underseat area  
ensuring they do not  
get trapped or squashed







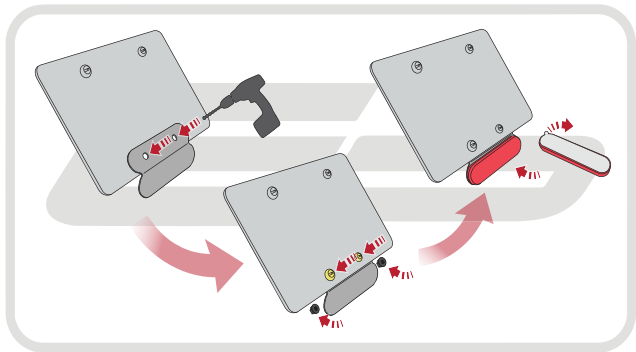

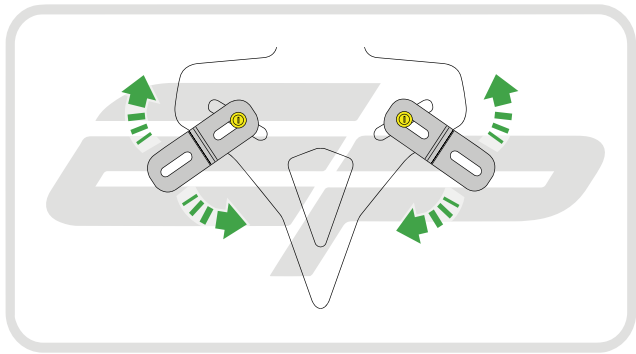



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.