






Kit Contents PRN014512

- Ⓐ 2 x Rubber Bungs
- Ⓑ 12 x Starlock Washer

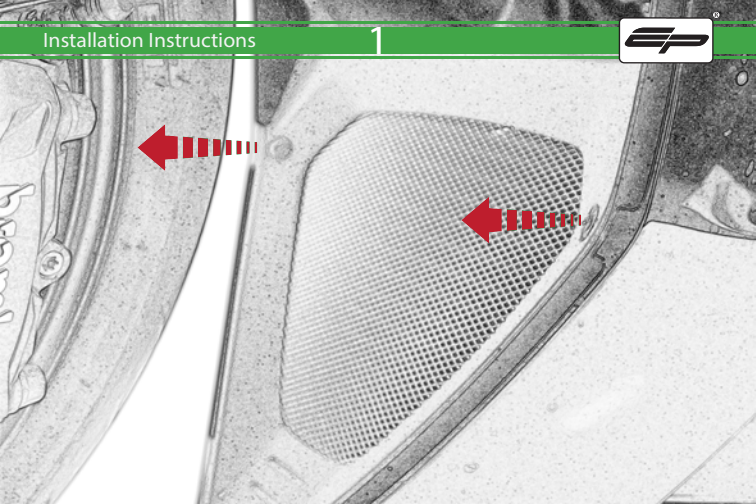




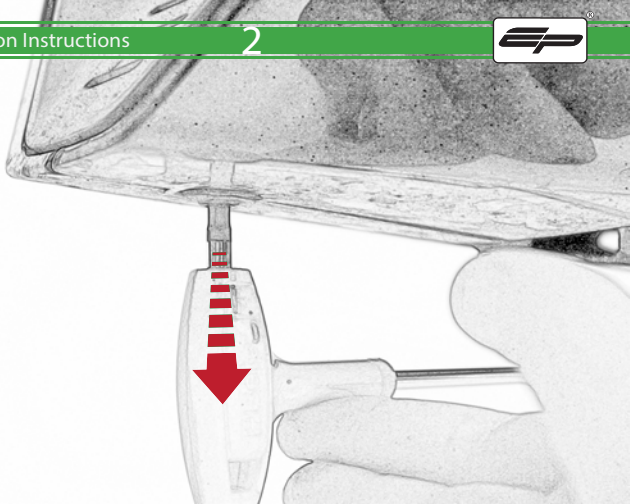


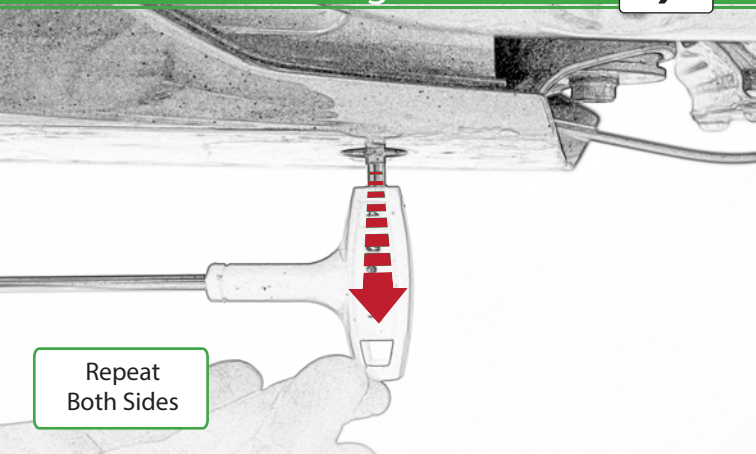


Repeat  
Both Sides

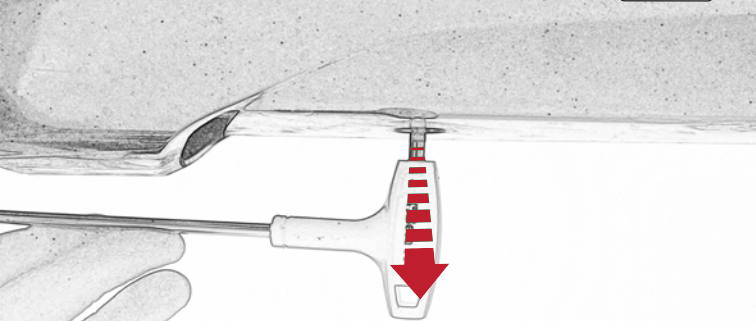

Repeat  
Both Sides




Repeat  
Both Sides

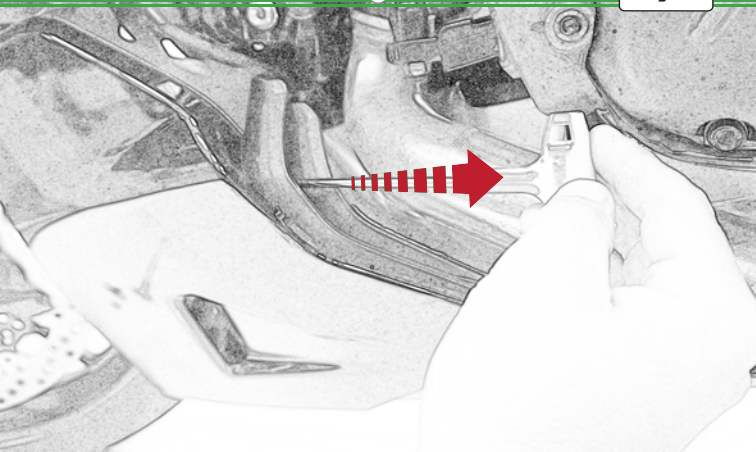











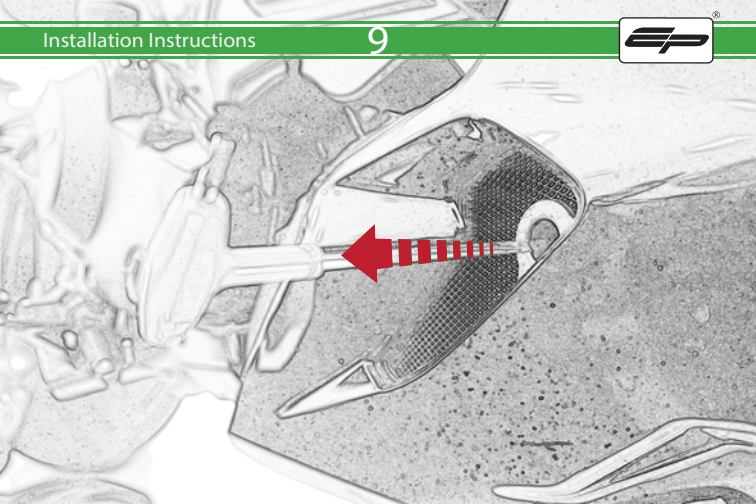


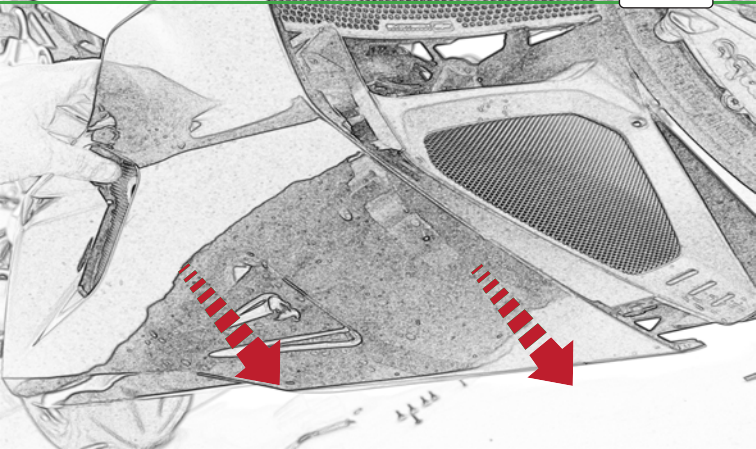

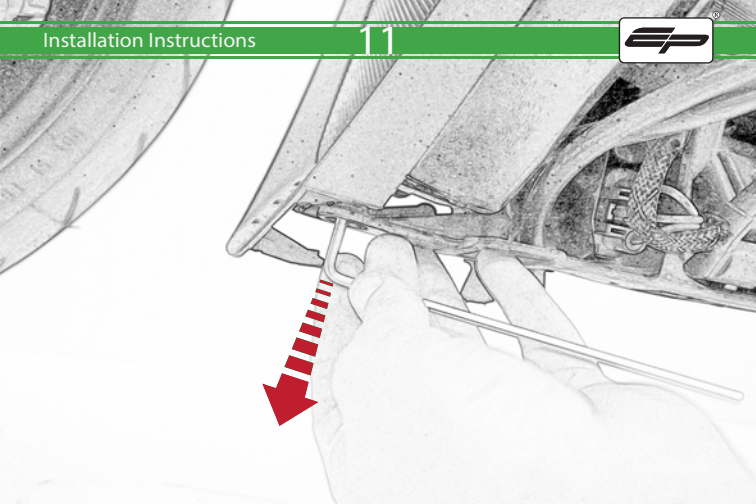

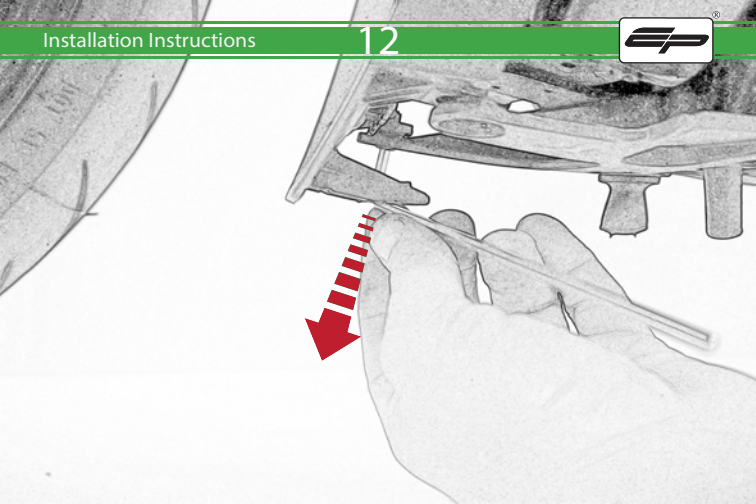


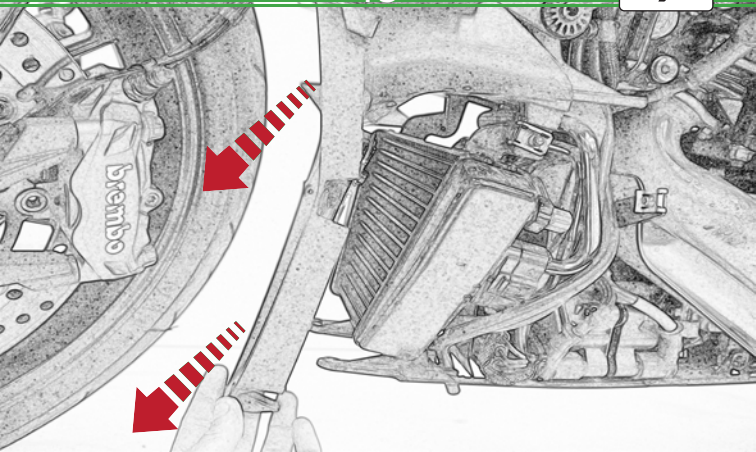

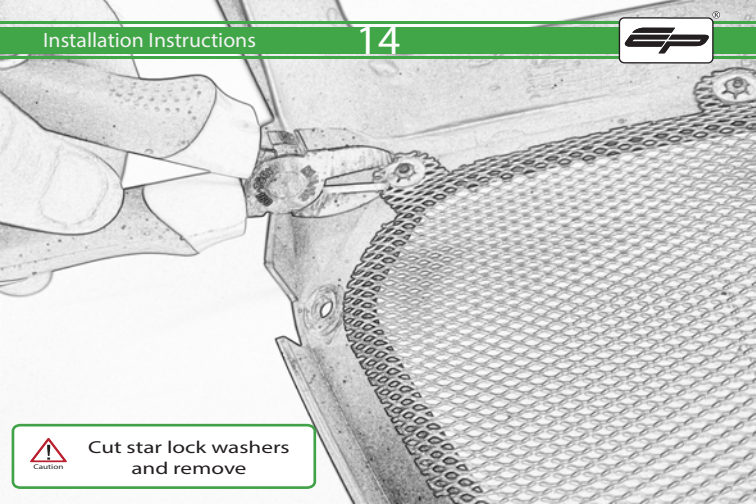



Caution

Cut star lock washers  
and remove

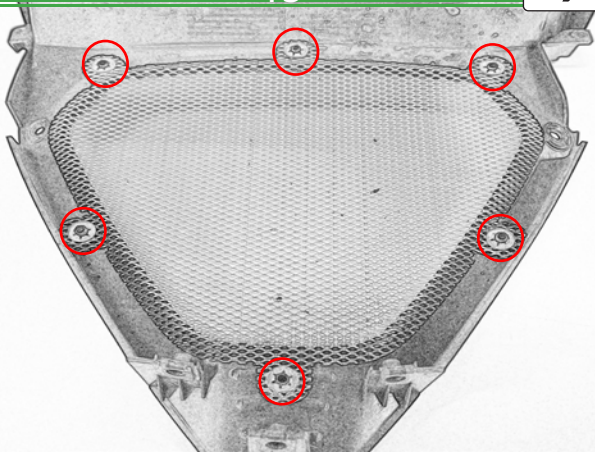




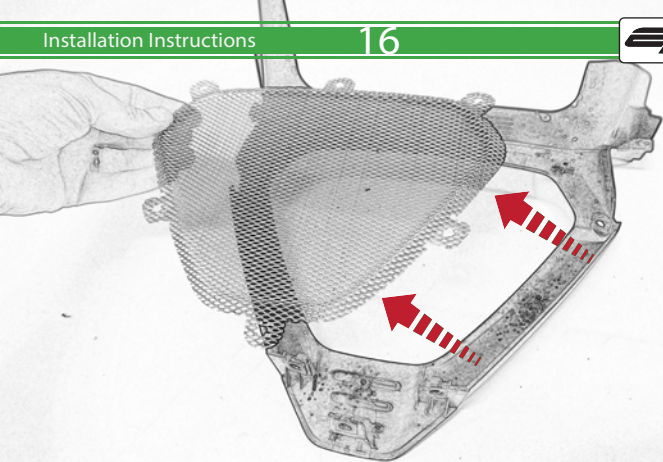


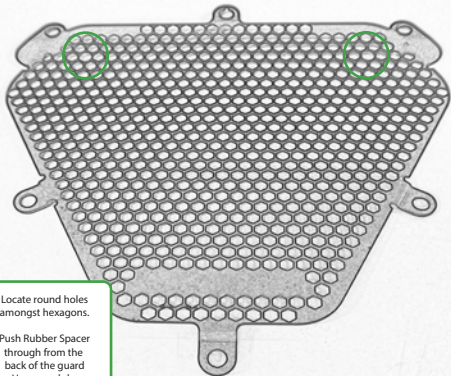



Locate round holes amongst hexagons.

Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face

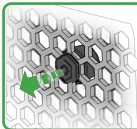


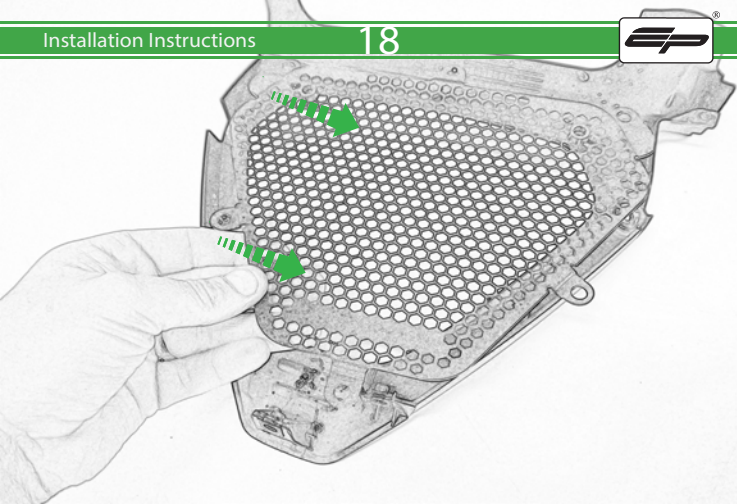


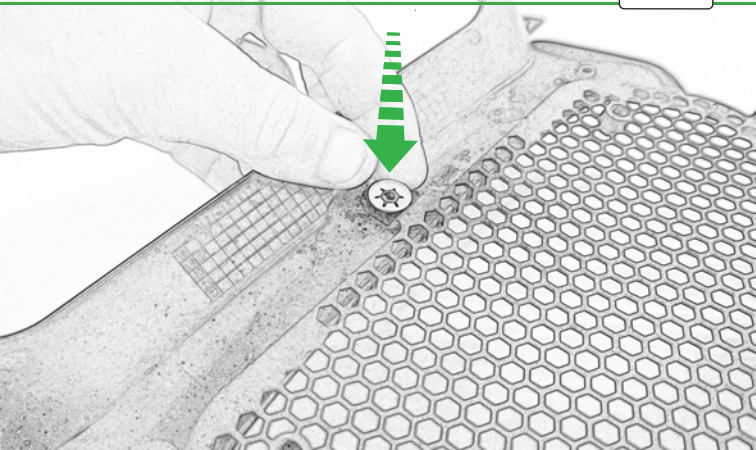


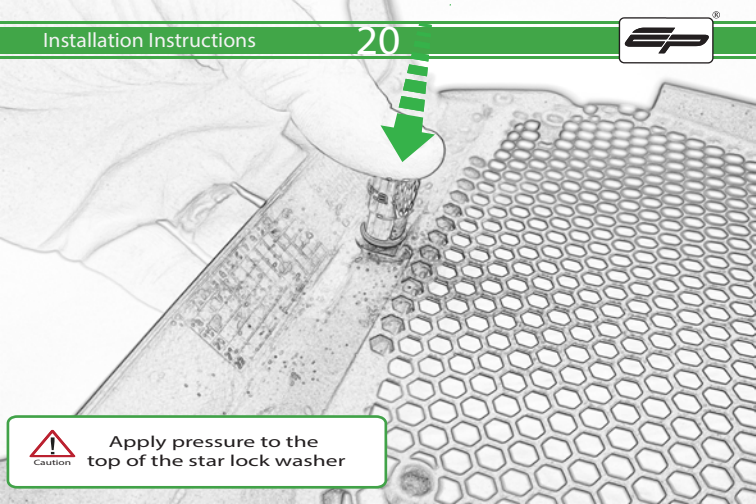


Apply pressure to the top of the star lock washer

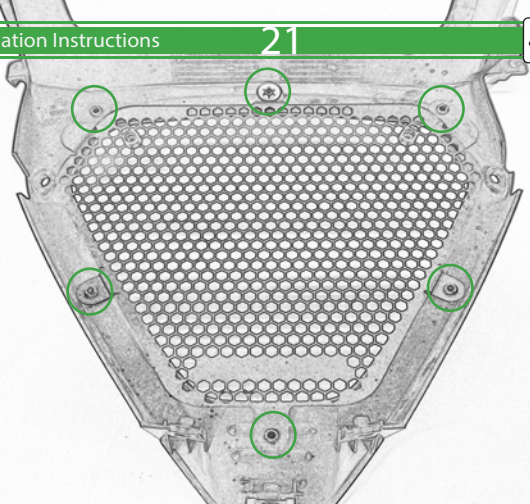

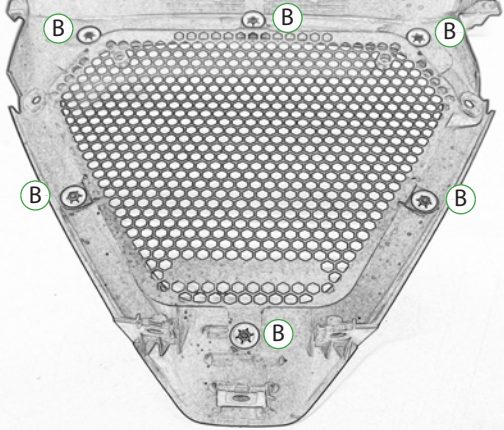

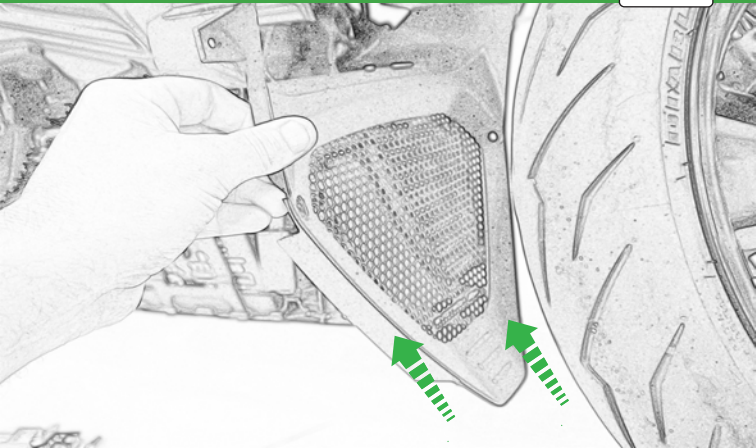




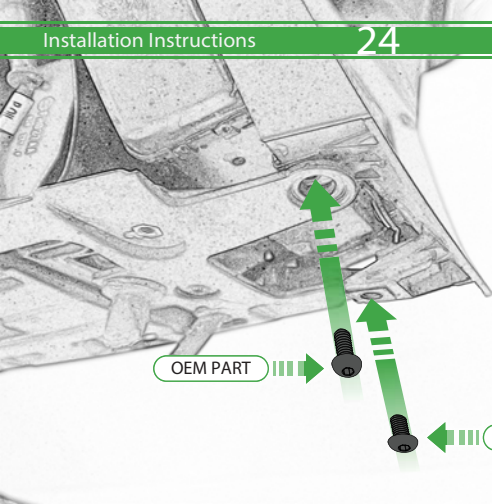

OEM PART



OEM PART

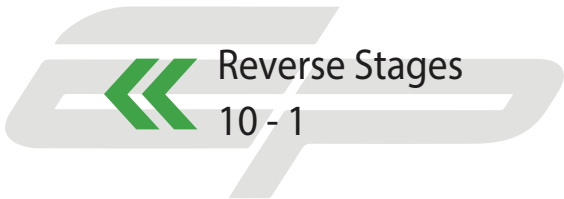



## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.