
## Installation Instructions





## Kit Contents PRN014566-014650


- (A) 1 x Main Plate
- 1 x Pivot Plate
- © 1 x Sub Mounting Bracket
- ① 1 x Garmin Moutning Plate
- © 2 x M6 x 16 Button Head Bolts
- 2 x Rubber Washer
- © 2 x M5 x 8mm Black Button head Bolts
- (H) 2 x Lobe Screw
- 2 x Locking Washer
- 4 x M4 x 10mm Black Button head Bolts

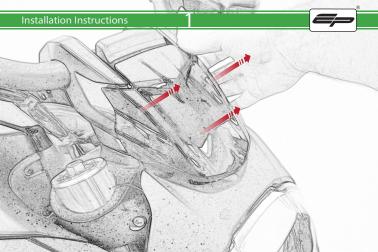





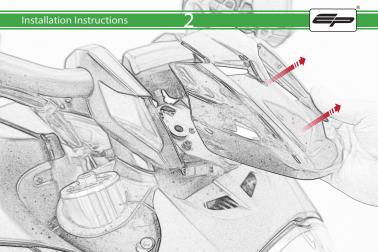


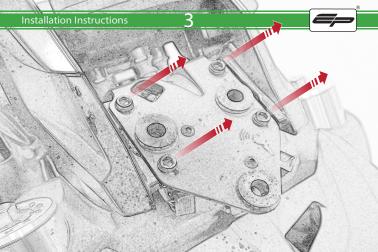

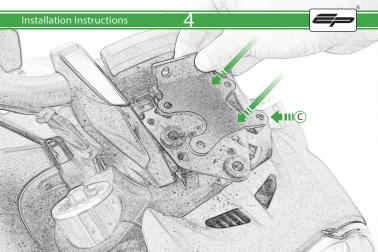

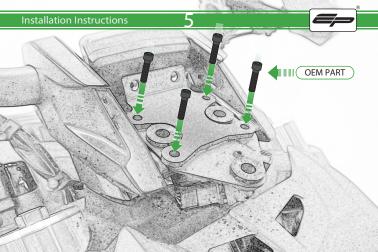


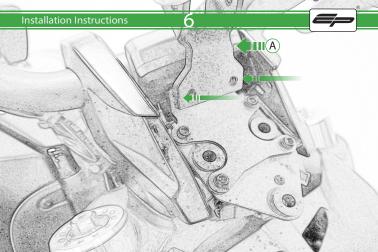

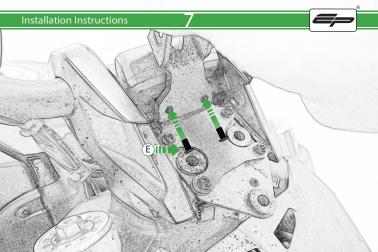





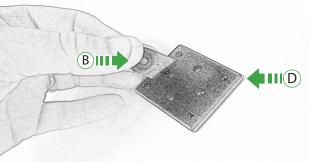



























Repeat Both Sides

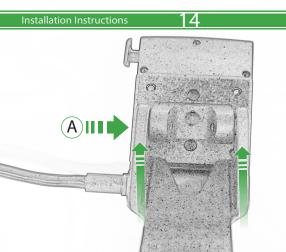




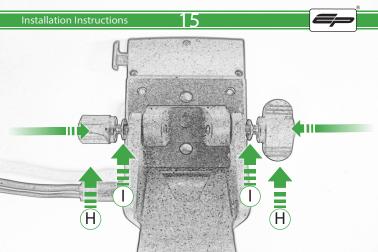









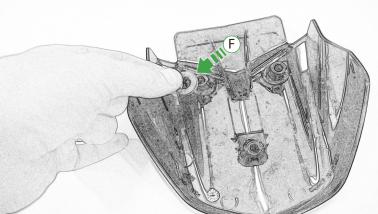






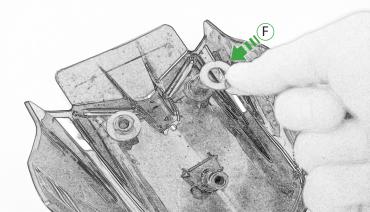

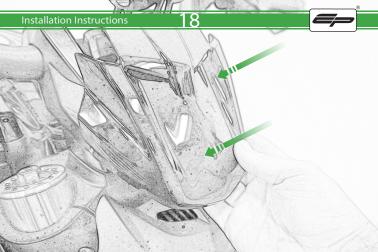

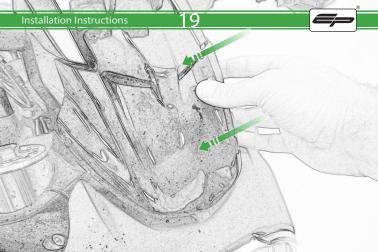





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

