

## **Installation Instructions**





## Kit Contents PRN014566-015147


- A 1 x Upper Mounting Body
- B 1 x Lower Mounting Body
- © 1 x Mounting Plate
- D 1 x Garmin Mounting Plate
- E 2 x Spacer
- F 2 x M4 x 25mm Caphead Bolts
- © 2 x O-ring
- (H) 2 x M5 x 8mm Black Button Head Bolts
- 1 4 x M4 x 10mm Black Button Head Bolts

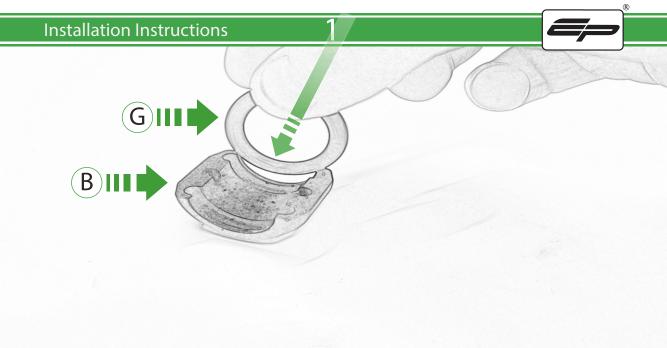


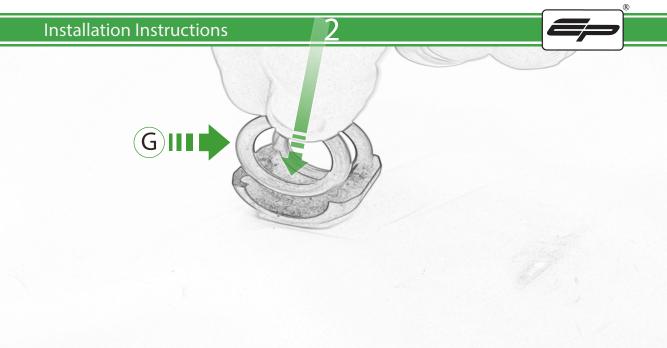

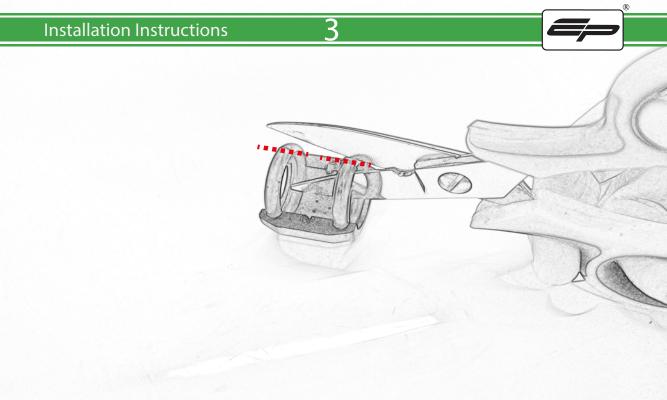

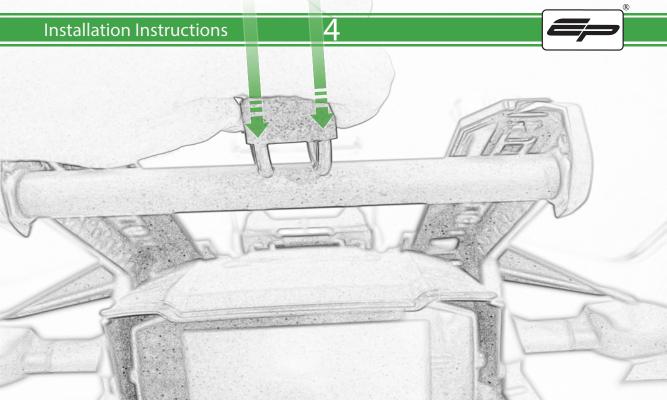


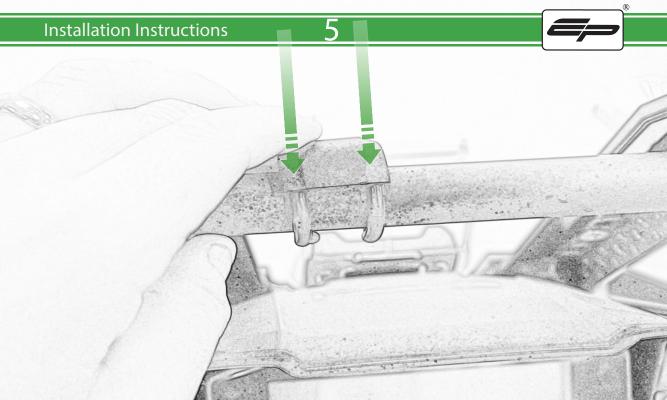


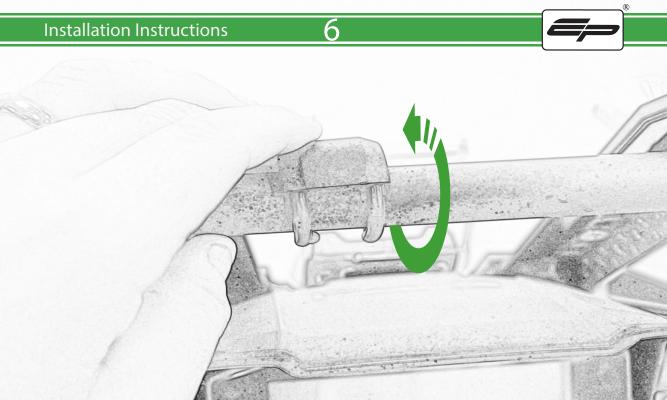






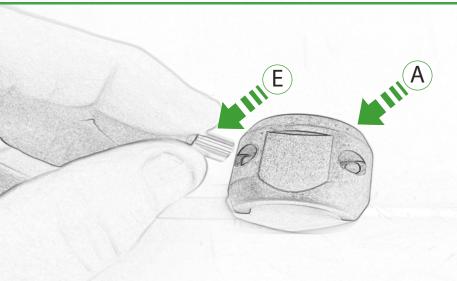


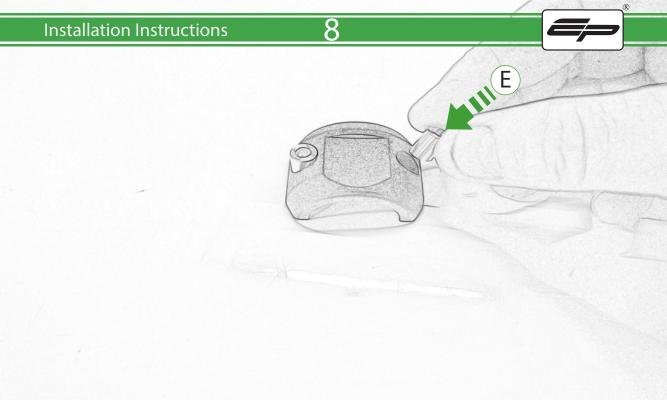

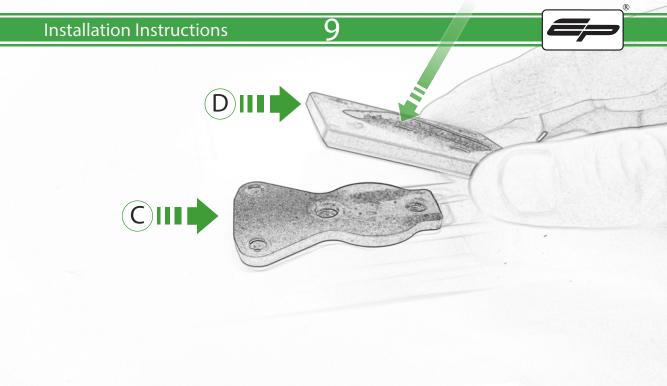


## 10



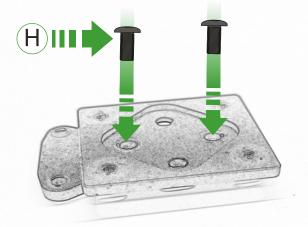



## <u>12</u>




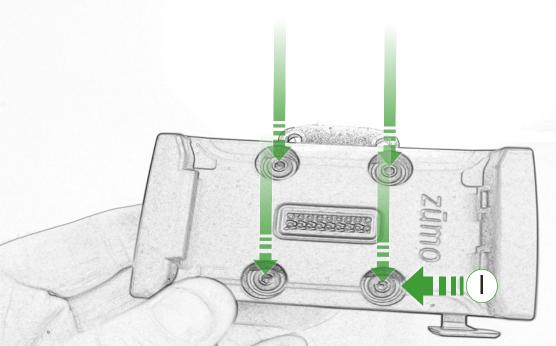





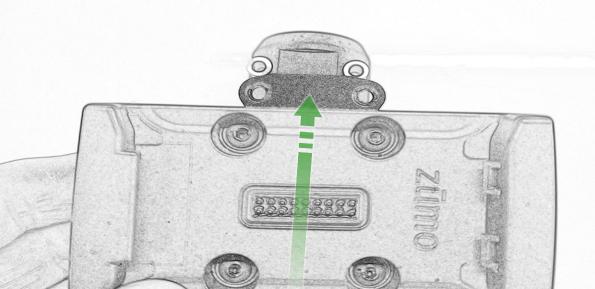

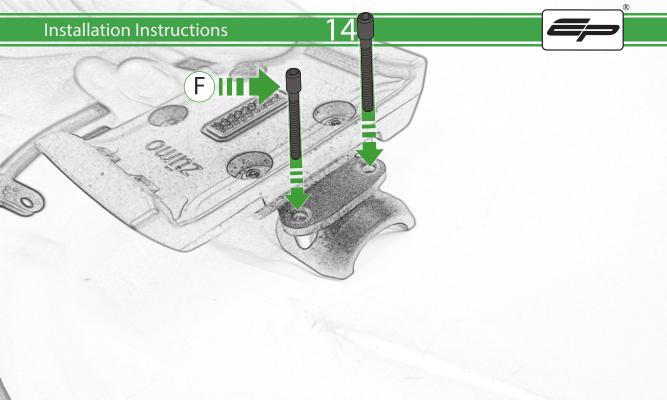

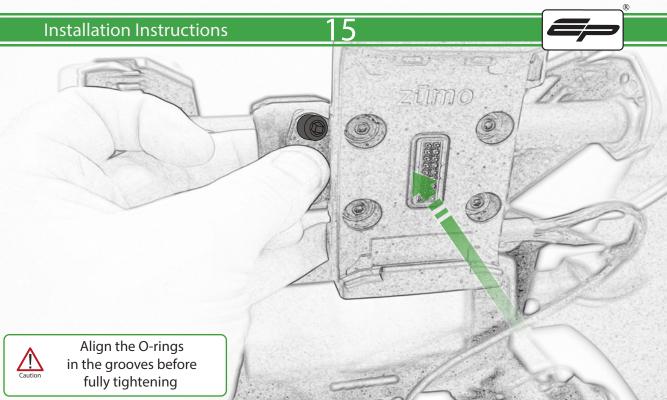

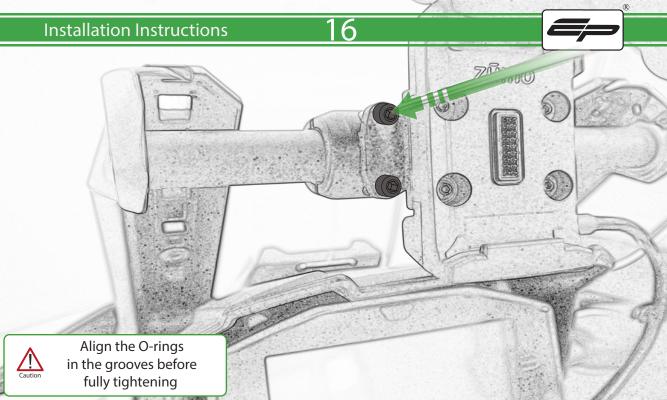

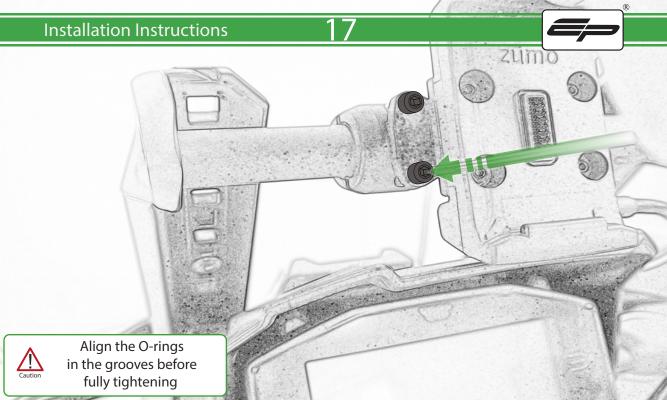





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

