
Installation Instructions

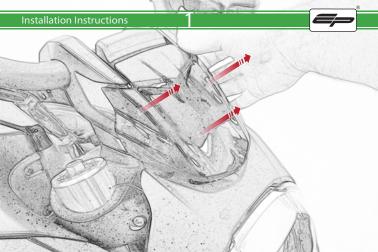



Kit Contents PRN014567-014650


- (A) 1 x Main Plate
- B 1 x Pivot PlateC 1 x Sub Mounting Bracket
- ① 1 x Tom Tom Mounting Plate
- © 2 x M5 Black Washer
- (F) 2 x M5 x 8mm Black Button head Bolts
- © 2 x Lobe Screw
- (1) 2 x Locking Washer (1) 2 x Rubber Washer
- ① 2 x M6 x 16 Button Head Bolts
- (K) 4 x M5 x 12mm Black Button head Bolts







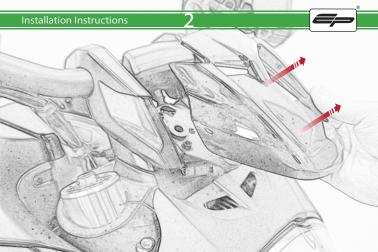


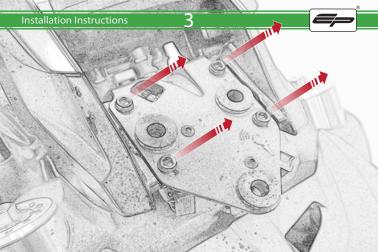


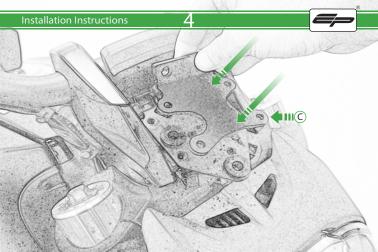


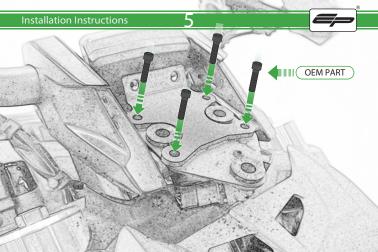


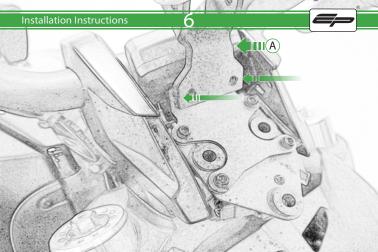


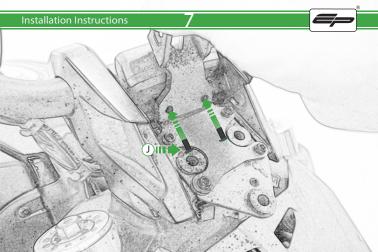


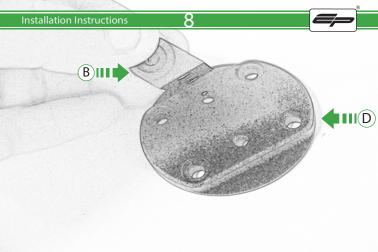


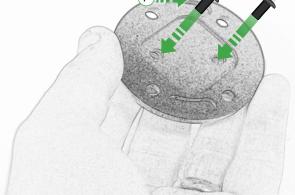


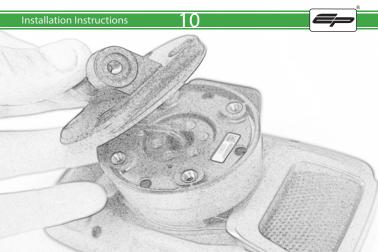


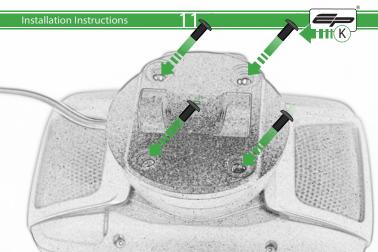

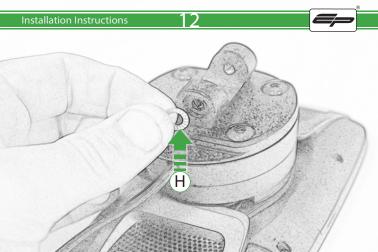

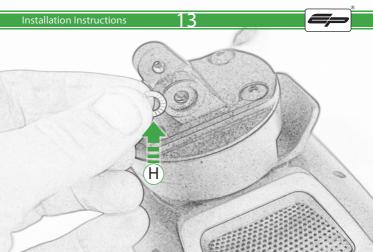

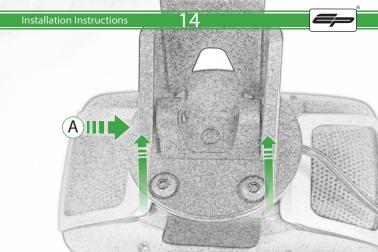


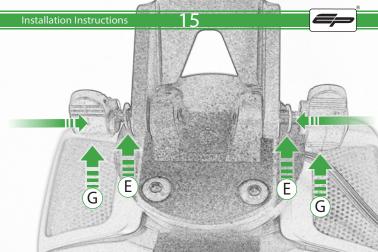









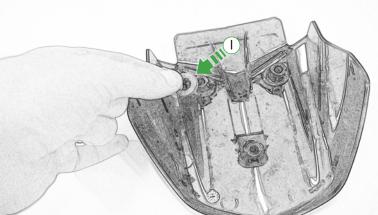






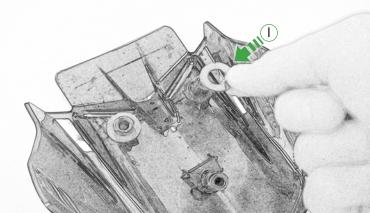

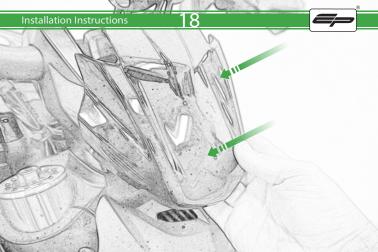

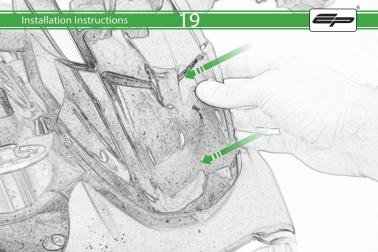





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

